
INSTRUCTIONS IMPORTANT SAFEGUARDS

When using electrical equipment, basic safety precautions should always be followed including the following:

1. **READ AND FOLLOW ALL SAFETY INSTRUCTIONS**
 2. Disconnect power before performing work on electrical equipment.
 3. Do not use outdoors.
 4. Use caution when servicing batteries.
 5. Equipment should be mounted in locations and at heights where unauthorized personnel will not readily subject it to tampering.
 6. The use of accessory equipment not recommended by Beluce Canada Inc., may cause an unsafe condition, and will void the unit's warranty.
 7. Do not use this equipment for other than its intended purpose.
 8. Servicing of this equipment should be performed by qualified service personnel.
 9. **SAVE THESE INSTRUCTIONS!**
-

INSTALLATION

WALL MOUNT - SINGLE FACE:

1. Extend unswitched 24 hour AC supply of rated voltage to junction box or appropriate wiring (supplied by others). Leave at least eight (8) inches of slack wire. The circuit should not be energized at this time.
2. Remove side panel with screw driver. Gently remove the pictogram. Reinsert the appropriate pictogram and secure the side of the exit back on with the screwdriver.
3. A wire pass-thru hole on the exit back plate is design to route the wires through the back of the sign. (Figure 1)
4. Mount the exit securely in place. Screw directly to the junction box if possible. If not a spider plate (provided by others) may be used to connect the exit to the junction box. (Figure 2)
5. Connect AC supply per diagram provided. (Figure 3)
6. Ensure all wires are secured into place for a clean finished appearance. (Figure 4)
7. Turn on the AC voltage supply.

CEILING/END MOUNT - SINGLE OR DOUBLE FACE:

1. Extend unswitched 24 hour AC supply of rated voltage to junction box or appropriate wiring (supplied by others). Leave at least eight (8) inches of slack wire. The circuit should not be energized at this time.
2. Remove side panel with screw driver. Gently remove the pictogram. Reinsert the appropriate pictogram and secure the side of the exit back on with the screwdriver.
3. Ceiling and end mount units are provided with a factory installed canopy which is not field adjustable.
4. Mount the exit securely in place. Screw directly to the junction box if possible. If not a universal spider plate may be used to connect the exit to the junction box for exit sign placement adjustment or connection to a variety of electrical boxes.
5. Signs that are specified double face will already have the second/rear pictogram installed.
6. Connect AC Supply per diagram provided. (Figure 3)
7. Ensure all wires are secured into place for a clean finished appearance. (Figure 4)
8. Turn on the AC voltage supply.

SELF-POWERED:

1. For models MC-RM-SP plug the battery into the circuit board per (Figure 3) self-powered sign.

Figure 1

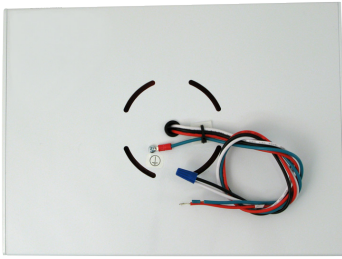


Figure 2

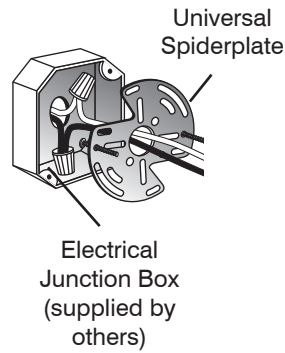


Figure 3

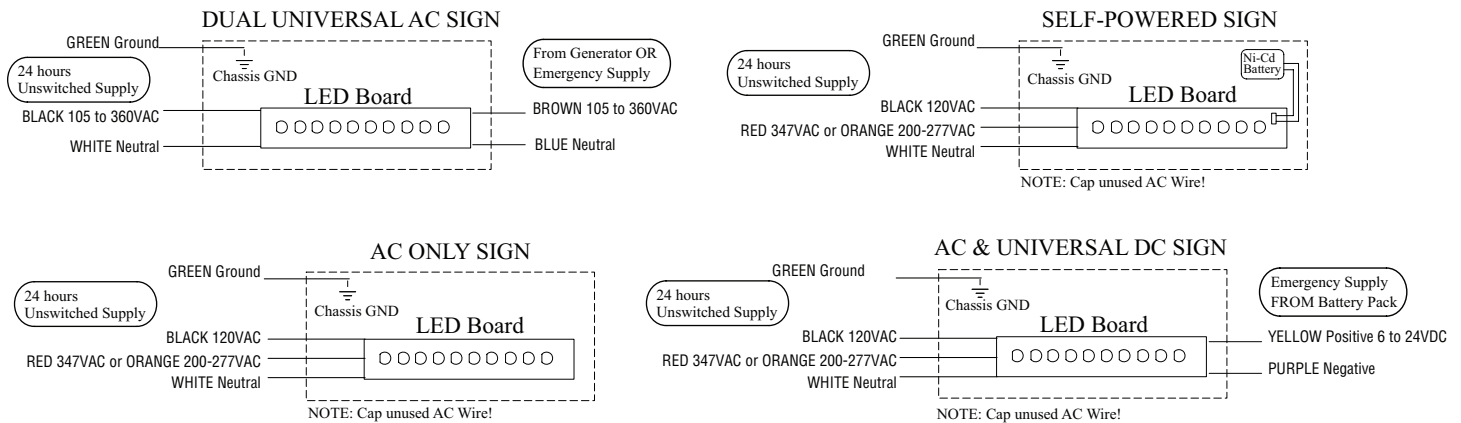


Figure 4



MAINTENANCE

1. The lamps listed herein when used according to the instructions with this unit are in accordance with the requirements of CSA Standard C22.2, No. 141 – Unit Equipment for Emergency Lighting.
2. Clean lenses on a regular basis.

NOTE: The servicing of any parts should be performed by qualified service personnel only. The use of replacement parts not furnished by Beluce Canada Inc., may cause equipment failure and will void the warranty.

SAVE THESE INSTRUCTIONS