

INSTRUCTIONS

IMPORTANT SAFEGUARDS

When using electrical equipment, basic safety precautions should always be followed including the following:

1. **READ AND FOLLOW ALL SAFETY INSTRUCTIONS**
2. Disconnect power before performing work on electrical equipment.
3. Do not use outdoors.
4. Do not let power cords touch hot surfaces and do not mount near gas or electric heaters.
5. Use caution when servicing batteries. Battery acid can cause burns to skin and eyes. If acid is spilled on skin or eyes, flush with fresh water and contact a physician immediately.
6. Equipment should be mounted in locations and at heights where unauthorized personnel will not readily subject it to tampering.
7. The use of accessory equipment not recommended by Beluce Canada Inc., may cause an unsafe condition, and will void the unit's warranty.
8. Do not use this equipment for other than its intended purpose.
9. Servicing of this equipment should be performed by qualified service personnel.
10. **SAVE THESE INSTRUCTIONS!**

INSTALLATION

NOTE: FIXTURE ORIENTATION IS IMPORTANT FOR LIGHT DISTRIBUTION - SEE PAGE 2

1. Extend unswitched DC supply of 12 or 24 volts from a junction box (supplied by others) installed in accordance with all applicable codes and standards. Leave at least 8 inches of slack wire.
2. Unit is supplied with holes stamped into the back of the housing and knockouts are provided on the side. Bring wires through the hole(s) into the housing. (Figures 2 & 3)
3. Mount the unit securely into place on the electrical box or mounting surface for side entry.
4. Make proper wiring connections. **NOTE! Positive and negative polarity is critical and will damage unit.** Yellow lead wire (+). Purple lead wire (-).
5. Route wires and secure in place.
6. Replace cover.
7. Light distribution can be changed by using a different lens. See page 2.

Figure 1

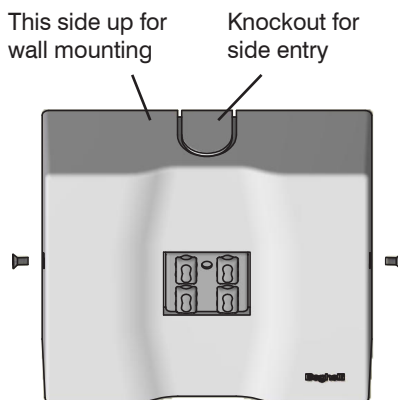


Figure 2


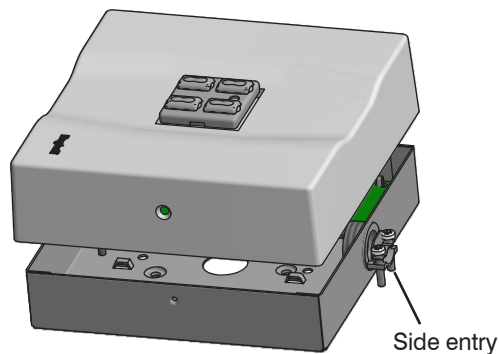


Figure 3



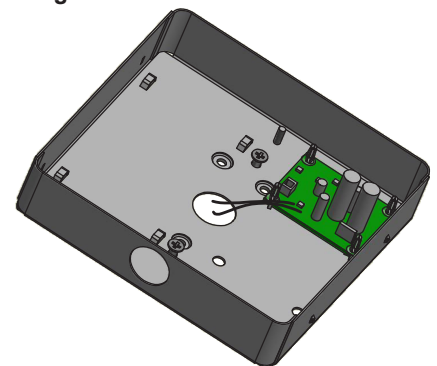


MAINTENANCE


1. Clean lenses on a regular basis.
- NOTE:** The servicing of any parts should be performed by qualified personnel only. The use of replacement parts not furnished by Beluce Canada Inc., may cause equipment failure and will void the warranty.

SAVE THESE INSTRUCTIONS


Max. mounting height is 14.5 ft
to get an average illuminance
above 1 fc, based on 3x3 ft room
80/50/20 reflectance.

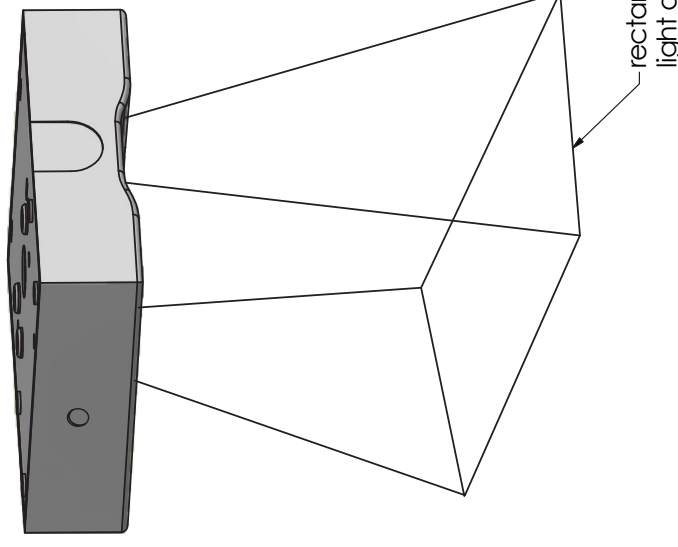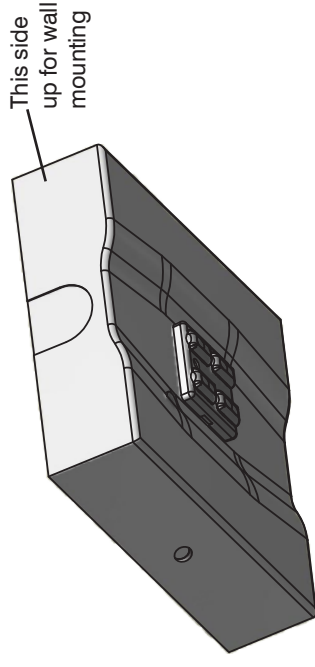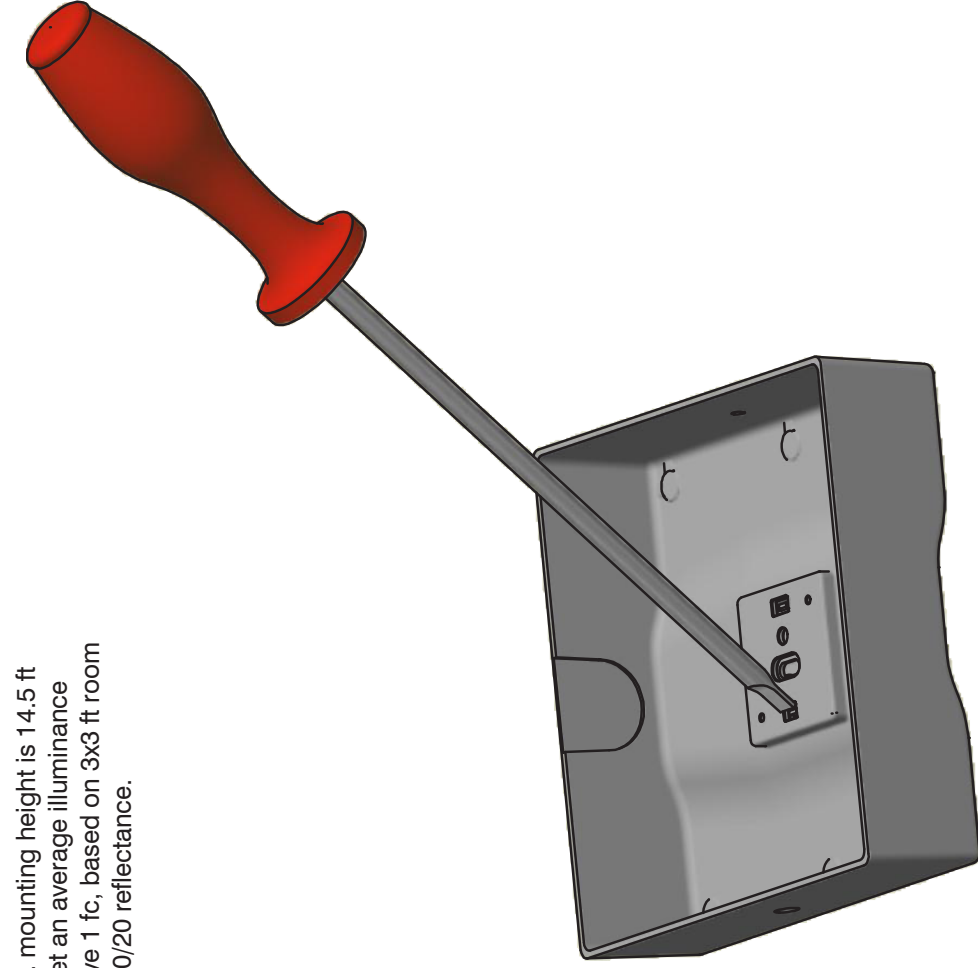


1. Unscrew the cover from the fixture, flip over the cover.
2. Push the hook on the lens with a small thin tip flat screw driver to release the lens from the cover.
3. Once one side hook released from the cover, then push back the lens gently to release the other side hook from the cover.
4. Snap new lens with the correct orientation.

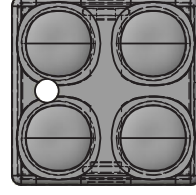

CEILING LENS
SQUARE
LIGHT DISTRIBUTION

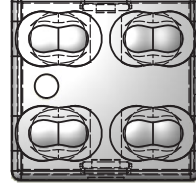

CEILING LENS
RECTANGULAR
LIGHT DISTRIBUTION

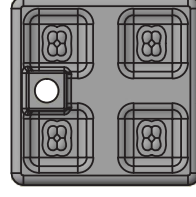

WALL MOUNT LENS