



UC-XN4WH120P-C

XENON LINKABLE UNDER-CABINET LIGHT WITH PLUG-IN CORD INSTRUCTION MANUAL



WARNING

RISK OF ELECTRIC SHOCK

- Do not use in wet locations.
- Use indoors only.
- Turn power off before servicing - see instructions.
- Properly ground fixture.
- Ensure that no bare wires are exposed outside the electrical connections.

BULB MAY SHATTER AND CAUSE INJURY IF BROKEN

 
- Do not use excessive force when installing bulb.

RISK OF BURNING

- Allow bulb to cool before handling

PACKAGE CONTENTS

PART	DESCRIPTION	QTY
A	Xenon light	1
B	Power cord	1
C	Link cord	1
D	Screw	2

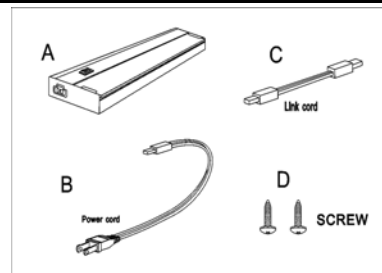


INSTALLATION PROCEDURES



1. TURN OFF THE ENTIRE ELECTRICAL CIRCUIT TO WHICH THE LIGHTING FIXTURE IS TO BE ATTACHED.

Move the circuit breaker to the "OFF" position or completely remove the fuse controlling the circuit.

 2. Determine the desired location for mounting the fixture, then measure the distance between the centers of the 2 keyholes on the back of the fixture. Mark the locations of the keyhole on the underside of the cabinet with a pencil. Drill pilot holes for the mounting screws with a small drill or awl. Start tightening the mounting screws into the cabinet, leaving the heads of the screws approx 1/4" (6.35mm) away from the cabinet. **Note: If you plan on joining fixtures end to end in a series, remove the safety covers with a screwdriver on each of your fixtures. Align the ends of fixtures and press the quick-link firmly together on all of the fixtures in your series. Measure your series. Measure the distance between all of the keyholes in your series. Mark these locations and drill pilot holes. Determine the desired power feed for your fixture, portable or hardwire. Note: fixtures come pre-wired as portable, if you plan on using this fixture as a portable skip to step 6.**

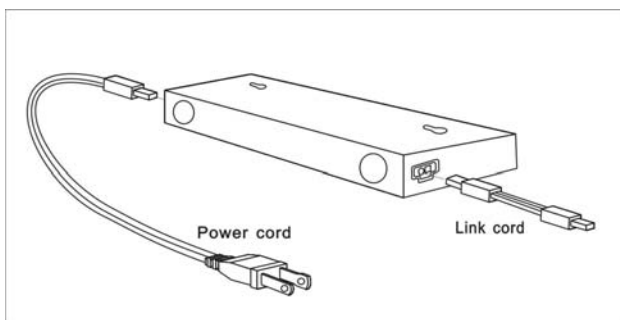

 
 
Portable: To be used with cord and plug.

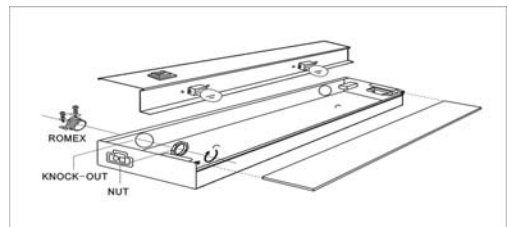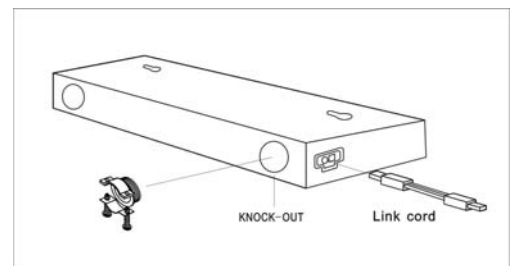

Hardwire: To be used with standard wiring

3. If hardwiring, remove the lens pressing down each end of the glass lens and pull forward. Remove the wireway cover by removing the two screws on opposite ends of the fixture and compressing the wireway tabs. Remove the desired knockout from the back of the fixture and install the wiring clamp/connector.
4. Feed the supply wire through into the wireway compartment. Mount the fixture to the cabinet. Do not tighten the screws at this time. There will be 3 push-in quick connectors located in wireway compartment: 1 common (white), 1 hot (black),

  - and 1 ground (green). Connect the black supply wire to the black push-in connector, white to white and green to green.
5. Adjust the supply leads inside and outside of the fixture. Tighten the screws on the wiring clamp. Replace the wireway cover removed in step 3.

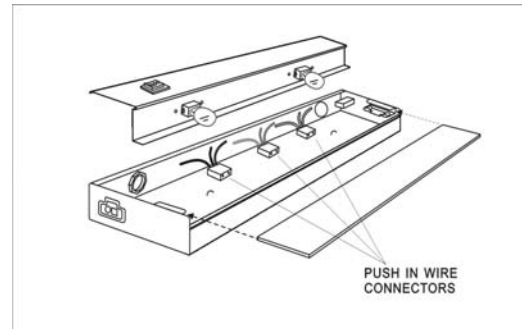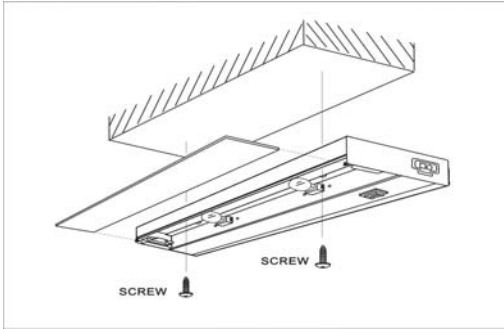

6. Securely tighten the mounting screws. Note: If mounting end to end the entire series must be mounted together connecting each fixture end to end and mount to the cabinet as a series. When adding additional fixtures to a fixtures to a hardwire fixture, they can be added on both the left and the right of your power feed fixture.
7. Install the bulbs.
8. Replace the lens on your fixture(s).
9. If your power feed fixture is being used as portable unit plug in your portable cord & plug into the left end of your power feed fixture and then into the outlet providing power to your fixture(s).
10. When using the interlink cables to join fixtures together, follow step 1-3 and steps 7-9 to install additional fixture(s). Make sure all of your fixtures are securely tighten to the cabinet. Join the fixtures with the interlink cables.
11. Restore power to the circuit at fuse or breaker box. Note: Once power is restored never use interlink cables to disconnect power. If disconnecting fixtures or cables, the power must be shut off the fuse or breaker box first.

 


OPENING DIFFUSER:

1. Turn off fixture and allow to cool.
2. Place finger tip on tab of each diffuser end cap.
3. Slide top and diffuser forward.
4. Lower that edge of diffuser.

CLOSING DIFFUSER:

1. Swing edge of diffuser with tabs up toward fixture until pegs by tabs slip into slot at the end of fixture end caps.
2. Slide top and diffuser towards rear of fixture to lock

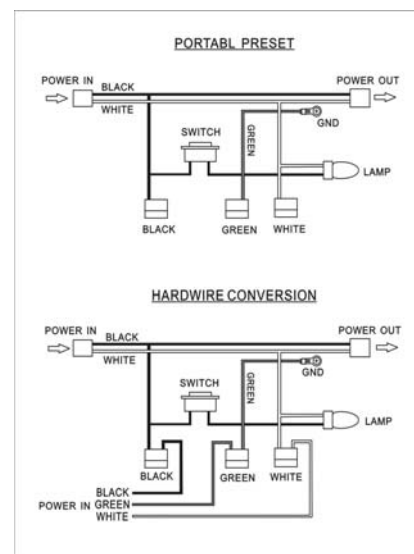

ONE-YEAR LIMITED WARRANTY

The manufacturer warrants this product to be free from defects in workmanship and material present at time of shipment from the factory for one year from the date of purchase. This warranty applies only to the original purchaser. The manufacturer agrees to correct such defect at no charge or at our option replace the product with a comparable or superior model. Any damage to the product by accident, misuse or improper installation, or by affixing accessories not produced by the manufacturer, is the purchaser's responsibility. The manufacturer assumes no responsibility whatsoever for product installation during the warranty period.

There is no further expressed warranty. The manufacturer disclaims any and all implied warranties. The manufacturer shall not be liable for incidental, consequential or special damages arising at or in connection with product use or performance except as may otherwise be accorded by law. This warranty gives you specific legal rights and you may also have other rights which vary from province to province. This warranty supersedes all prior warranties.

Imported By: CANARM LTD., 2157 Parkedale Ave., Brockville Ontario, K6V 5V6,

Tel: (613) 342-5424, FAX: (613) 342-8437