


Assembly Instruction Sheet #S-1063P16 For Style 1063P16

Tools Required: Flathead screwdriver, Philips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.
Light Source: (1) 120V LED 9-Watt Dimmable (pending)
Estimated Assembly Time: 10-20 minutes
Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.

Warnings and Cautions


Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt. These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation. Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.

Package Contents

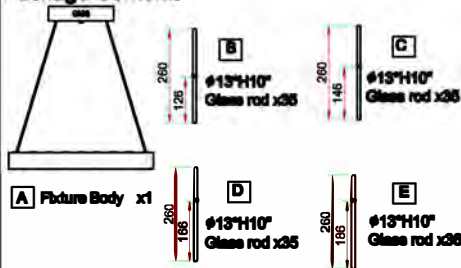

Hardware Contents

PART	DESCRIPTION	QUANTITY
AA	Decorative Caps	2pcs
BB	Electrical Nuts	2pcs
CC	Outlet Box Screw	2pcs
DD	Mounting Screw	2pcs
EE	Crosbar	1pcs

 

STEP 1 - Attach Mounting Screws, Lock Washers and Hex Nuts to Crosbar.

A. Line up a set of holes on the Crosbar (EE) and Holes on the ceiling canopy. Thread Mounting Screws (DD) into the holes on the Crosbar (EE). Place Lock Washers and Thread Hex Nuts onto the Mounting Screws (DD). Hand tighten until snug.


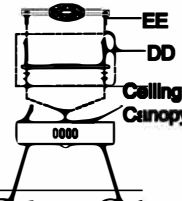


Figure 1

STEP 2 - Attach Crosbar to Outlet Box.

A. Pass the supply wires through the Crosbar (EE). Attach the Crosbar (EE) to the Outlet Box (CC) with the head of the Green Ground Screw facing you. Secure it with Outlet Box Screws (not included). Tighten until snug.

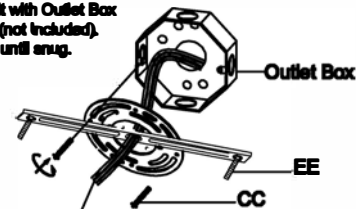

Supply Wires with Outlet Box Screws Ground Wire

Figure 2

STEP 3 - Fit Ceiling Canopy to Crosbar Assembly

A. Fit the ceiling canopy to Mounting Screws (DD) and secure with Decorative Caps (AA). Note: The ceiling canopy should be snug against the ceiling and the Decorative Caps (AA). If not, adjust the length of the Mounting Screws (DD) by unscrewing the Hex Nut and Lock Washer and then screwing Mounting Screws (DD) in or out of the Crosbar (EE) until the correct length is achieved. Once the ceiling canopy is secure, remove the Decorative Caps (AA) and ceiling canopy and proceed to Step 4.

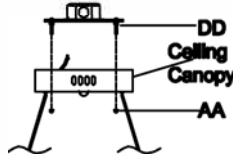


Figure 3

STEP 4 - Wire Connections

A. Use standard wire connectors (not included) to make all wire connections. Twist connections until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.

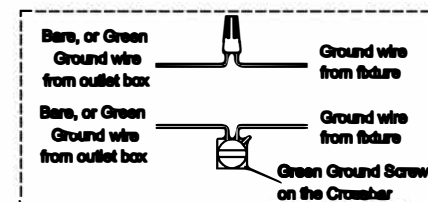
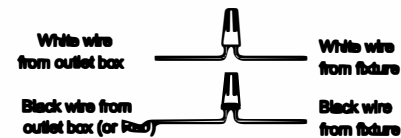


Figure 4

STEP 5 - Install Ceiling Canopy to Ceiling

A. Carefully tuck all wires into the outlet box and position the ceiling canopy of the Fixture Body (A) over the outlet box. Align the holes in the ceiling canopy with the Mounting Screws (DD). Secure with Decorative Caps (AA) and hand tighten until snug.



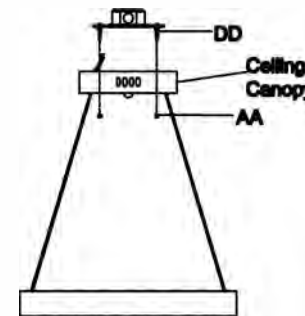


Figure 5

STEP 6 - Install Oval glass rod .

A. Put the Glass rod (B) (C) (D) (E) on the Fixture Body slot .

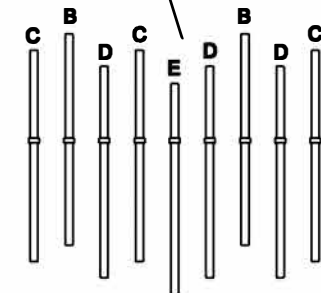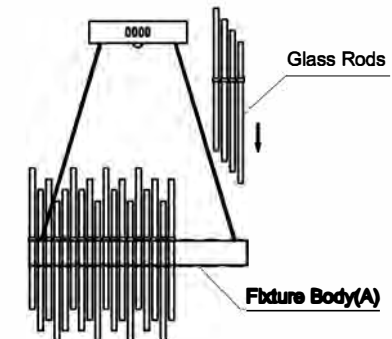

The glass rods are to be placed
In no particular order / pattern

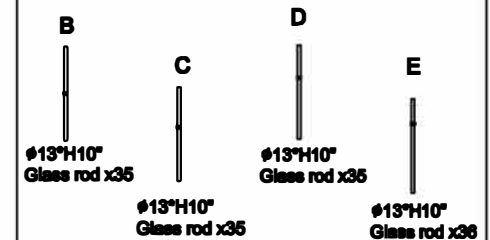


Figure 6