



MODEL: DM238F

ASSEMBLY INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS

UNPACK THE LAMP

TO PROTECT THE FINISH, PLACE ALL PARTS ON A SOFT SURFACE. YOU SHOULD HAVE RECEIVED THE FOLLOWING: BASE, UPPER, MIDDLE AND LOWER POLES, SHADE AND GOOSENECK ASSEMBLY.

ASSEMBLE THE LAMP

1. CAREFULLY UNPACK AND PLACE ALL PARTS ON A SMOOTH, FLAT SURFACE. LINE UP ALL OF THE PARTS ACCORDING TO THE ASSEMBLY DIAGRAM.
2. SCREW LOWER POLE ONTO BASE. NEXT SCREW MIDDLE POLE ONTO LOWER POLE AND THEN SCREW UPPER POLE ONTO MIDDLE POLE.
3. SCREW GOOSENECK INTO UPPER POLE. IF SHADE IS NOT ATTACHED TO THE SOCKET COVER, ATTACH IT WITH TWO SCREWS.

BULB REPLACEMENT

1. YOUR LAMP USES A 100WATT MEDIUM BASE BULB.
2. BEFORE REPLACING THE BULB, BE SURE THAT THE SHADE AND BULB ARE COOL.
3. UNSCREW EXISTING BULB FROM SOCKET AND INSTALL A NEW BULB IN ITS PLACE.

TROUBLE SHOOTING

1. IF YOUR LAMP DOES NOT LIGHT, CHECK PLUG AT THE OUTLET. MAKE SURE THE PLUG IS FULLY AND PROPERLY INSERTED INTO THE OUTLET.
2. IF LAMP STILL DOES NOT LIGHT, UNPLUG FROM OUTLET, CHECK THE BULB FOR A BROKEN FILAMENT. REPLACE BULB IF NECESSARY. PLUG IN LAMP AND TURN IT ON.
3. IF THE LAMP STILL DOES NOT LIGHT, THEN PLEASE CONTACT YOUR DISTRIBUTOR OR PLACE OF PURCHASE.

IMPORTANT SAFETY INSTRUCTIONS

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF THE PLUG DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS PLUG CAN BE FULLY INSERTED. DO NOT ALTER THE PLUG.

