


INSTALLATION INSTRUCTIONS LED Universal Sensor Adaptor

INSTALLATION:

- WHEN INSTALLING LAMP HORIZONTALLY WITH SENSOR, USE ADAPTER TO POSITION SENSOR DOWNWARD.

1

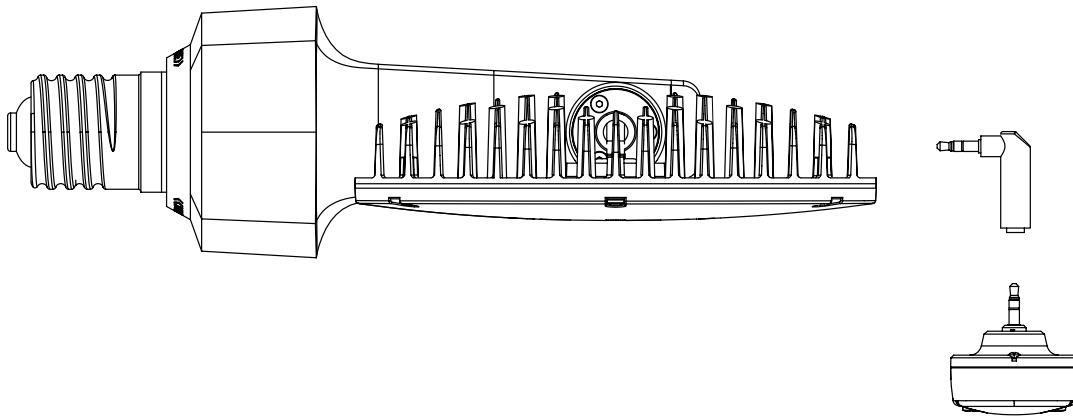

2

