




**WIRING INSTRUCTIONS**  
12 VOLT LED PANEL (LEDP) PATH LIGHT FIXTURES

INSPECTED BY:

**WARNING:**  
*All PL Series LEDP fixtures (except PL-07) do not have internal LED Driver. Fixture must be connected to supplied external LED Driver per instructions below. DO NOT connect fixture directly to 12v as this will damage the LED and void warranty.*

All 12v Path lights with LED Panel (LEDP) light source are supplied with external driver. Driver input is 12VAC. Connect driver to fixture leads as shown in wiring diagram below. Driver is direct burial rated and can be buried along with the low voltage cable.

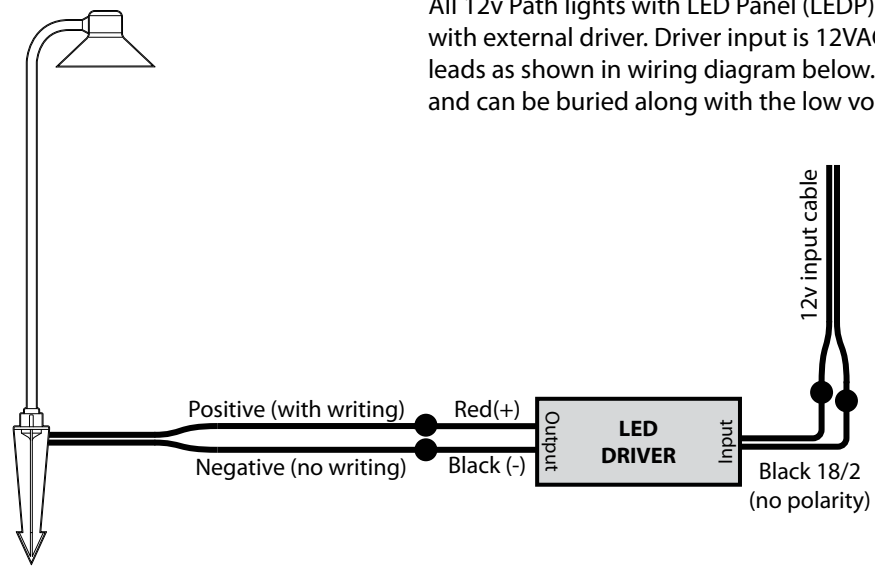

090214

**For Questions Call 1-888-882-1350**




**WIRING INSTRUCTIONS**  
12 VOLT LED PANEL (LEDP) PATH LIGHT FIXTURES

INSPECTED BY:

**WARNING:**  
*All PL Series LEDP fixtures (except PL-07) do not have internal LED Driver. Fixture must be connected to supplied external LED Driver per instructions below. DO NOT connect fixture directly to 12v as this will damage the LED and void warranty.*

All 12v Path lights with LED Panel (LEDP) light source are supplied with external driver. Driver input is 12VAC. Connect driver to fixture leads as shown in wiring diagram below. Driver is direct burial rated and can be buried along with the low voltage cable.

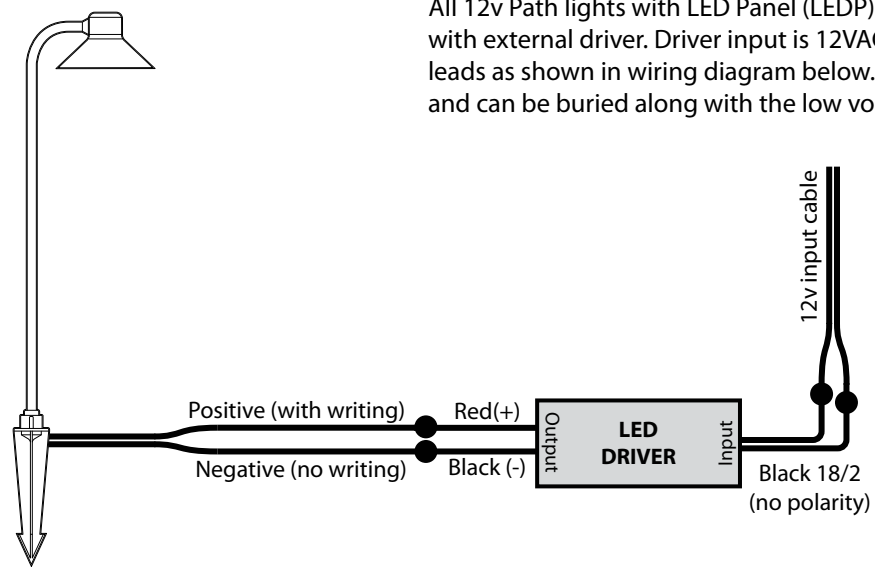

090214

**For Questions Call 1-888-882-1350**