

SYLVANIA Luminaires

Installation Guide - SMALL WALL PACK



- Traditional design with up to 90% energy savings
- Low maintenance and long life (L70 > 150,000 hours)
- Available with optional integrated photocontrol for additional energy savings

For warranty coverage, please register at www.sylvania.com/warrantyregistration.

⚠ WARNING

PLEASE READ ALL INSTRUCTIONS BEFORE ATTEMPTING INSTALLATION


- TO PREVENT PERSONAL INJURY OR PRODUCT DAMAGE ONLY LICENSED ELECTRICIANS SHOULD PROVIDE ALL INSTALLATION SERVICES.
- TO AVOID ELECTRIC SHOCK OR COMPONENT DAMAGE DISCONNECT POWER BEFORE ATTEMPTING INSTALLATION OR SERVICING.
- THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE NATIONAL ELECTRIC CODE (NEC) AND ALL APPLICABLE FEDERAL, STATE AND LOCAL ELECTRIC CODES AND SAFETY STANDARDS.
- USE CAUTION WHEN HANDLING THIS PRODUCT DURING OR AFTER OPERATION AS IT MAY BECOME HOT AND CAUSE BURNS. DISCONNECT PRODUCT AND ALLOW COOLING PRIOR TO SERVICING.
- ANY ALTERATION OR MODIFICATION OF THIS PRODUCT IS EXPRESSLY FORBIDDEN AS IT MAY CAUSE SERIOUS PERSONAL INJURY, DEATH, PROPERTY DAMAGE AND/OR PRODUCT MALFUNCTION.
- TO PREVENT PRODUCT MALFUNCTION AND / OR ELECTRICAL SHOCK THIS PRODUCT MUST BE PROPERLY GROUNDED.
- THIS LUMINAIRE IS TO BE WALL MOUNTED ONLY.
- THIS LUMINAIRE IS DESIGNED TO OPERATE IN AMBIENT TEMPERATURES RANGING FROM -40°F TO +104°F (-40°C TO +40°C).

SAFETY PRECAUTIONS:

IMPORTANT: READ CAREFULLY BEFORE INSTALLING THE FIXTURE. RETAIN FOR FUTURE REFERENCE.

GENERAL: Upon receipt of the fixture, thoroughly inspect for any freight damage which should be brought to the attention of the delivery carrier.

Front View

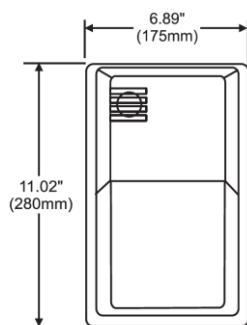

Side View



INSTALLATION:

1. Before starting ensure that the power is disconnected.
2. Remove the 2 Torx screws (1 on each side) that hold the front plastic housing to the back and remove the front housing. (See figure 1)
3. Loosening the 2 screws (C) that hold the reflector (A) in place, ensuring that the quick connectors are disconnected (B). (See figure 2)
4. Remove the conduit plug cover in either the bottom or the back of the housing.
5. To mount the rear housing knock out appropriate holes around the outlet hole in the rear housing.
6. Wire the fixture according to wiring diagram below.
7. Install rear housing to junction box using screws supplied with junction box.
8. Replace reflector and front housing using screws removed in steps 2 and 3.
9. To ensure a watertight seal caulk between rear housing and mounting surface.

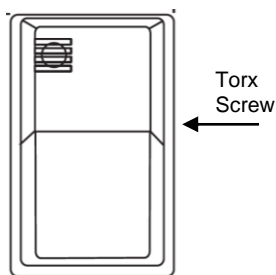


Figure 1


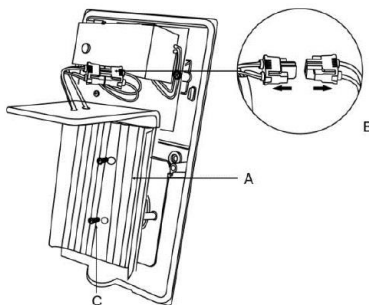


Figure 2

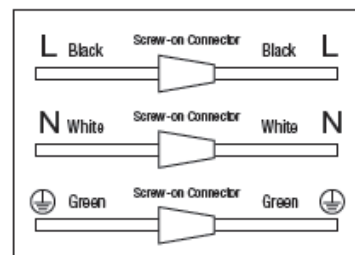

Wiring Diagram

INTEGRAL PHOTOCONTROL (Optional)

This fixture may be shipped with an optional integral UNV photocontrol. This does not change the installation above - the photocontrol is pre-wired.

CLEANING AND MAINTENANCE

- To maintain the fixture efficacy occasional cleaning of the outer lens surface may be needed.
- Use a mild soap or detergent, which is essentially neutral pH (pH approximately 6 to 8), nonabrasive, and which contains no chlorinated or aromatic hydrocarbons.
- Wash thoroughly, using a soft cloth.
- Rinse with clean, cold water and wipe dry.



TROUBLE SHOOTING CHECKLIST: If luminaire does not work

- Check your power source.
- Check electrical connections.