



Thermostat Power Supply Module

30A00-2

Power booster for Omnistat2 thermostats, instructions (may be needed in retrofit applications when "HVAC common" wire is not available). Mounts at furnace/air handler and requires no external power source.



Omnistat2 Trim Ring

65A18-1

White Omnistat2 backplate used as a cover-up when retrofitting homes with existing thermostats. The Omnistat2 thermostat mounts gently on top, and is easy to install thanks to the properly positioned slots (Omnistat2 thermostat shown but not included).



Surface Mount Remote Indoor/Outdoor Temp Sensor

23A00-1

Surface indoor/outdoor temperature sensor for Omnistat and Omnistat2 thermostats. Can be used as outdoor sensor for dual-fuel heat pumps.



Flush Mount Remote Indoor/Outdoor Temp Sensor

23A00-2

For Leviton Security & Automation Omnistat and Omnistat2 thermostats. Can be painted or wallpapered to become virtually invisible.



Thermostat Isolation Module

29A00-1

Relay isolation module for Omnistat2 thermostats. Includes mounting clips, instructions (may be needed for HVAC systems using non-standard voltages).