

MaxLite® 48" Shop Light




General Safety Information

- To reduce the risk of death, personal injury or property damage from fire, electric shock, falling parts, cuts/abrasions, and other hazards read all warnings and instructions included with and on the fixture box and all fixture labels.
- Before installing, servicing, or performing routine maintenance upon this equipment, follow these general precautions.
- DO NOT INSTALL DAMAGED PRODUCT!

CAUTION:

- Turn off the switch and circuit breaker before installing this LED lamp.
- Suitable for dry locations.
- Not for use with dimmers.
- Install directly beneath a ceiling-mounted receptacle.
- Use only insulated staples or plastic ties to secure the cord.
- Not intended for recessed installation.
- Do not install directly over a heat source (stove, etc.)
- Use safety precautions. Safety eye glasses and gloves are recommended.
- Installation should not be made on a radiant-heating ceiling.
- Injury to people and damage to the lamp and/or mounting surface may result if the lamp is pulled from the surface. To reduce the likelihood of such injury or damage, mount only on a mechanically sound surface.
- Do not alter the plug or power supply cord in any way or try to install this product in any other method besides method shown on this sheet.

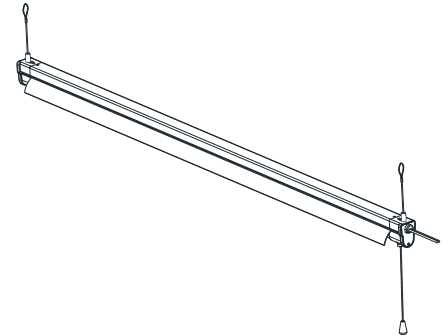

Picture is for illustration purposes only.
Your model may vary.

NOTICE:

- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- To install onto a plaster board surface, plaster board requires minimum 3/8" thick.

Models:

SL Series

Included parts:

- 3pcs - Screws
- 2pcs - J hook
- 2pcs - Chain
- 3pcs - Anchors


Required tools:

- Electric drill


MaxLite® 48" Shop Light

Mounting Instructions**Mounting to drywall:**


Drill a 1/4 in. hole in the ceiling to clear the closed flaps of the toggle bolt. Make sure to fasten the toggle bolt into the butterfly nut before inserting the flaps into the ceiling. Tighten the toggle bolt.

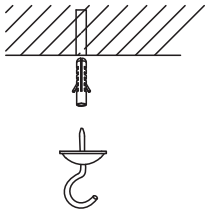


- 1. Attaching the light to the chain:** Install one header of chain to the hook on the fixture body and make it fixed. Repeat this step on the other side of the fixture.

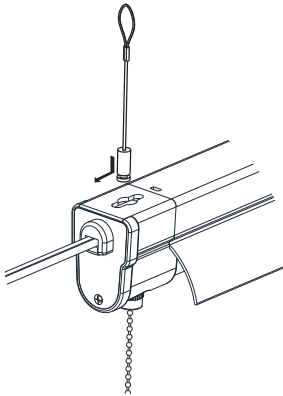**3. Connecting the power cord:**


Fix the fiber tube(bb) covered power cord to the hanging chain with two nylon straps(aa), the fiber tube(bb) was provided but not fixed, it could be fixed by ender user at any position needed, the fiber tube(bb) is used for protecting the power cord from damage. After installation, plug the power cord into the power supply. Turn on the switch.

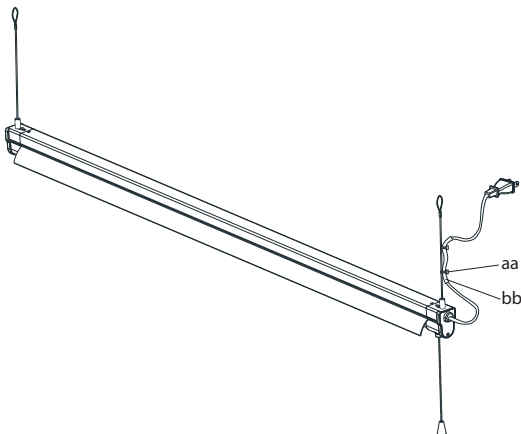**Mounting to wood:**

Drill a 1/16 in. diameter pilot hole in the ceiling. Make sure to fasten the combo wood-machine end into the metal hook. Tighten the hook screw into the wood.

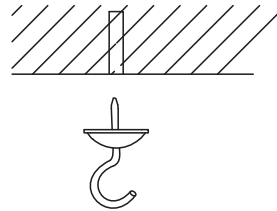


- 2. Attaching the chain to the ceiling:** Hang the fixture body by placing one chain set over each hook that has been installed on the ceiling. Adjust chains to level light. The fixture must hang at least 3 in. from the ceiling.

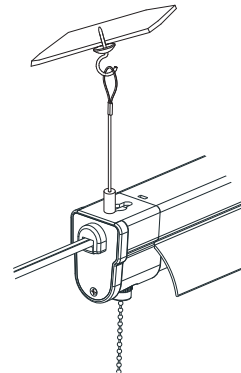**4. Connecting lights in series using end connector:**

Lights can be connected directly together.


Note: Outlet only for use with other MaxLite Shoplights – maximum of 4 units total when linked

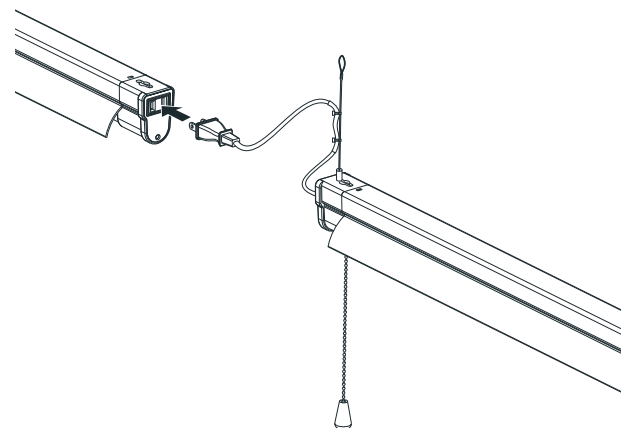


MaxLite® 48" Shop Light

Surface Mounting Instructions (Optional)**1. Securing fixture to ceiling:**

Once the head of the screw is in beyond the opening, gently slide the fixture to the right to secure it in place. You may need to adjust the depth of both screws to get a tight fit.

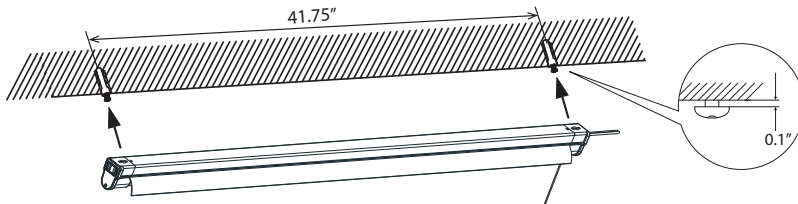**2. Locking the fixture to ceiling:**

With each fixture installation, insert additional screw in ceiling opposite screw installed in key hole slot. This will prevent the fixture from accidentally sliding off screw mounting. When installing, move the fixture to the right. The additional screw is located next to the left end cover of the fixture. The additional screw does not hinder the installation of product interconnection.

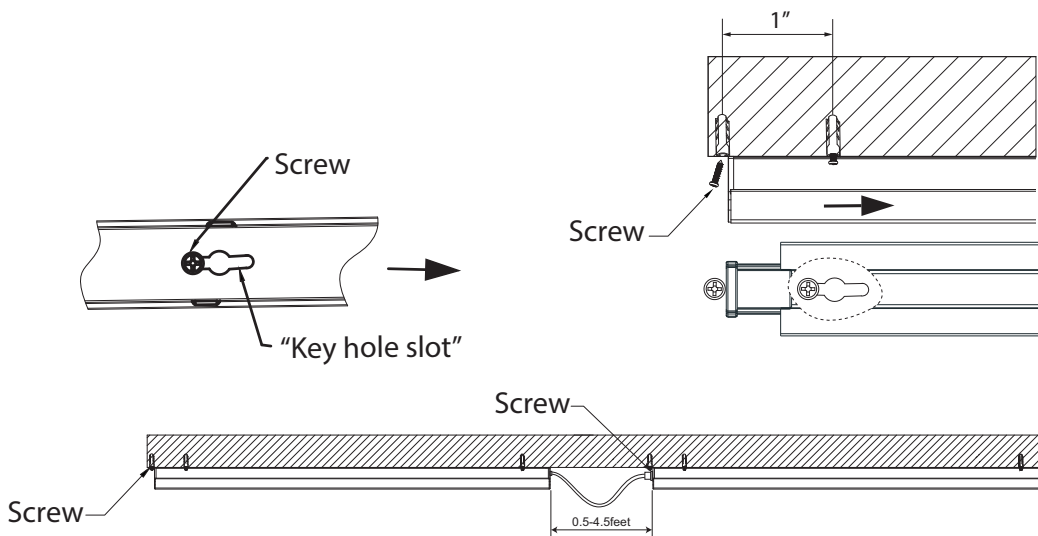

Please check with your local inspector to insure this mounting method meets local requirements.

Care & Cleaning

CAUTION: Before attempting to clean the fixture, disconnect the power to the fixture by turning the breaker off or removing the fuse from the fuse box.

Your fixture is made from quality materials that will last many years with minimum care. You may want to periodically clean the diffuser, or interior of the fixture using a mild, non-abrasive glass cleaner and a soft cloth.

DO NOT use solvents, or cleaners containing abrasive agents. When cleaning the inside of the fixture, make sure you have the power turned off, and do not spray liquid cleaner directly onto the LEDs, LED driver or wiring.

MaxLite® 48" Shop Light



Warranty Information

MaxLite Inc. warrants its products for a minimum period of **FIVE (5)** years from the date of original purchase from MaxLite or its authorized distributor/dealer (the "Warranty Period"), as follows: If a Product fails to operate during the Warranty Period as a result of defects in materials or workmanship, MaxLite will, at its option, repair it, replace it with the same or like Product.

Please refer to Maxlite's website (at <http://maxlite.com/resources/warranties>) for the complete terms and conditions of our warranty.

Limitation of Liability

THE FOREGOING WARRANTY IS EXCLUSIVE, AND IS THE SOLE REMEDY FOR ANY AND ALL CLAIMS, WHETHER IN CONTRACT, IN TORT OR OTHERWISE ARISING FROM THE FAILURE OF PRODUCT AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ALL WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, WHICH WARRANTIES ARE HEREBY EXPRESSLY DISCLAIMED TO THE EXTENT PERMITTED BY LAW AND, IN ANY EVENT, SHALL BE LIMITED TO THE WARRANTY PERIOD SPECIFIED ABOVE. THE LIABILITY OF MAXLITE SHALL BE LIMITED TO THE TERMS OF THE EXPRESS WARRANTY SET FORTH HEREIN. IN NO EVENT WILL MAXLITE BE LIABLE FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES INCLUDING, WITHOUT LIMITATION, DAMAGES RESULTING FROM LOSS OF USE, PROFITS, BUSINESS OR GOODWILL, LABOR COSTS, REMOVAL OR INSTALLATION COSTS, DECREASE IN THE LIGHT OUTPUT OF THE LAMP, AND/OR DETERIORATION IN THE LAMP'S PERFORMANCE, WHETHER OR NOT MAXLITE HAS BEEN ADVISED OF THE POSSIBILITY THEREOF. UNDER NO CIRCUMSTANCES SHALL MAXLITE'S ENTIRE LIABILITY FOR A DEFECTIVE PRODUCT EXCEED THE PURCHASE PRICE OF THAT PRODUCT. WARRANTY SERVICES PROVIDED UNDER THESE TERMS AND CONDITIONS DO NOT ENSURE THE UNINTERRUPTED OPERATION OF PRODUCTS; MAXLITE SHALL NOT BE LIABLE FOR DAMAGES CAUSED BY ANY DELAYS INVOLVING WARRANTY SERVICE.

This Limited Warranty gives you specific legal rights and you may also have other rights that may vary from state to state. Because some states or jurisdictions do not allow the exclusion or limitation of liability for consequential or incidental damages, this limitation may not apply to you.