



MaxLite® LED T8 U-Bend DirectFit Lamps

General Safety Information

READ AND FOLLOW ALL SAFETY INSTRUCTIONS


DANGER – RISK OF SHOCK – DISCONNECT POWER BEFORE INSTALLATION

WARNING – RISK OF FIRE. Use only in place of fluorescent lamps specified on label.

These devices are not intended for use with emergency exit fixtures or emergency exit lights.

- **SUITABLE FOR DAMP LOCATIONS**
- **DIRECT REPLACEMENT FOR 32W/23T8/U6 LAMPS ONLY**
- **CAUTION - RISK OF FIRE. USE ONLY IN PLACE OF FLUORESCENT LAMPS SPECIFIED ON LABEL**
- **CAUTION RISK OF FIRE - IF THE LAMP OR LUMINAIRE EXHIBITS UNDESIRABLE OPERATION (BUZZING, FLICKERING, ETC.), IMMEDIATELY TURN OFF POWER, REMOVE LAMP FROM LUMINAIRE AND CONTACT MANUFACTURER.**
- **DO NOT INSTALL THIS LAMP IN A PRE-HEAT LUMINAIRE.**
- **THIS LAMP ONLY OPERATES ON ELECTRONIC BALLASTS. IF LAMP DOES NOT LIGHT WHEN THE LUMINAIRE IS ENERGIZED, REMOVE LAMP FROM LUMINAIRE AND CONTACT LAMP MANUFACTURER OR QUALIFIED ELECTRICIAN**

Installation Instructions

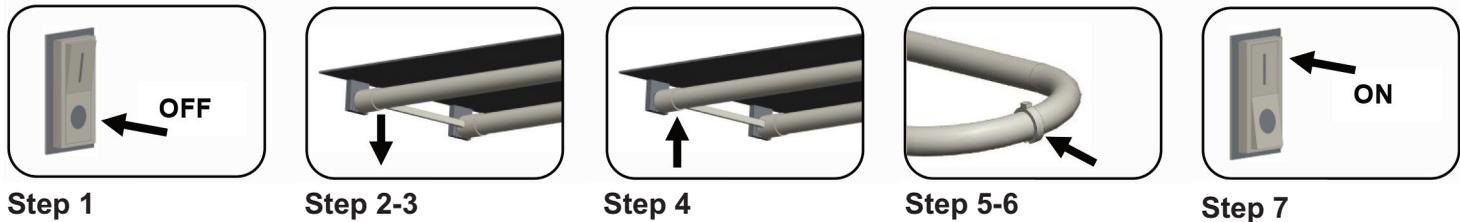

- 1.) Turn off the power to the luminaire.
- 2.) Remove diffuser (if provided).
- 3.) Remove the existing fluorescent lamps from the luminaire.
Dispose the existing fluorescent lamps in accordance with government regulations in your area.
- 4.) Install MaxLite LED T8 U-Bend DirectFit lamps. Ensure that the pins are firmly seated in the lampholders.
- 5.) Ensure lamp is secured by clip.
- 6.) Replace diffuser (if removed in step 2).
- 7.) Switch on power to the luminaire.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

LED Lamp Warranty

MaxLite offers a warranty on this product, please see: <http://www.maxlite.com/resources/warranties> for more information.