Q UOIZEL 6 CORPORATE PARKWAY GOOSE CREEK, SC. 29445 www. quoizel. com

Assembly Instruction Sheet #IS-PCCL1033PK For Style PCCL1033PK

Please go to www.quoizel.com for product cleaning tips. Go to the Care + Maintenance selection.

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

Light Source: Integrated 60W LED

 $\textbf{Compatible Dimmer Switches:} Lutron \, \text{DVELV-300P} \, or \, Lutron \, \text{SELV-300P}.$

Estimated Assembly Time: 20-30 minutes


Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.

△ Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

Package Contents

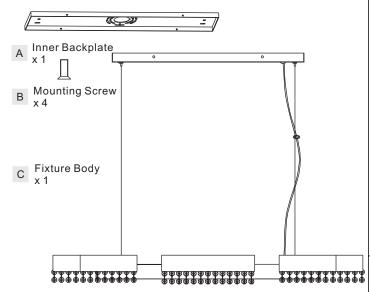


- x 48 G Crystal D *** *** *** 6
- x 44


 H Crystal E x 20
- J Crystal G - ⊗ ⊗ ⊗ ⊗ ⊗ ⊗ ⊗ **8** x 32
- Allen Wrench


STEP 1 - Adjust the Fixture Body Height

- A. By using the Allen Wrench (L), unscrew the set screw on the cable clasp. Push the pin on the bottom of the ceiling canopy and adjust the cable to your desired hanging height. Release your hand on the pin and move the cable clasp to the hex nut inside of the ceiling canopy. Tight the set screw on the cable clasp until snug to engage the cable.
- B. Adjust the fixture supply wires until it is slightly longer than the cable. Move the wire clasp to the hex nut inside of the ceiling canopy.

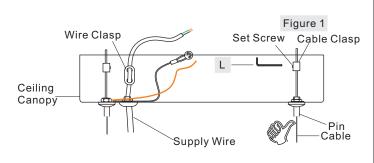

  STEP 2: Install Inner Backplate





Outlet Box

STEP 3 - Attach Lanyard

- A. The purpose of the lanyard is to provide the installer a means to support the fixture from the junction box while connecting the electrical wires. This enables the fixture to hang from the junction box and your hands are free to make the wire connections.
- B. Turn the Button Stop so it may be inserted into the Inner Backplate slot. Make sure the Button Stop is completely inside the Inner Backplate (A). Slowly release the fixture to make sure it is supported by the Button Stop. Proceed to the wiring steps in the next step. Once you are complete with the wiring there is nothing to do with Lanyard. The Lanyard will push into the junction box when the fixture is placed for final mounting.


Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-800-645-3184

or visit us on-line at www.quoizel.com

© 2017 Quoizel Inc.

Released Date: 2017-09-08

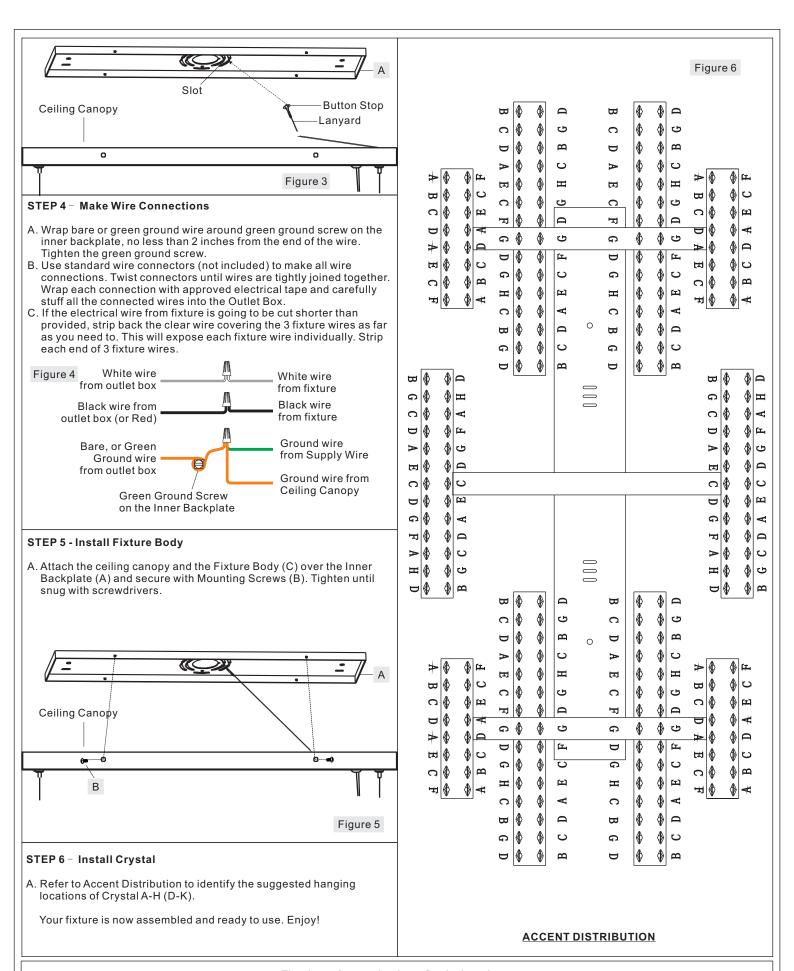

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-800-645-3184

or visit us on-line at www.quoizel.com

Released Date: 2017-09-08

© 2017 Quoizel Inc.

