Installation Instruction Linear Pendant Luminaire

ELECTRICAL SHOCK HAZARD

WARNING

Disconnect the Electrical supply at the service panel (fuse or circuit breaker box). Failure to do so could result in serious injury.

Only qualified electricians should install this luminaire and Must conform to the Canadian Electrical Code Part 1 or the NEC, and any local codes and ordinances. Ensure that only proper tools and materials to complete the installation are available prior to attempting to install this luminaire.

Read all instructions prior to installing this product.


IMPORTANT CALCULATION FOR CONTINUOUS ROW MOUNTING

For Row Mounting: Calculate the luminaire row total amperage from input current on product label to prevent from being over the current rating of the power feed cord. Maximum of 6 amps per power feed.

When row length amperage calculated exceeds 6 amps additional a power feed connection must be used at intervals of 6 amps or less.


For Row Mounting DO NOT CONNECT units on the floor – They must be connected after PENDANT mounting.



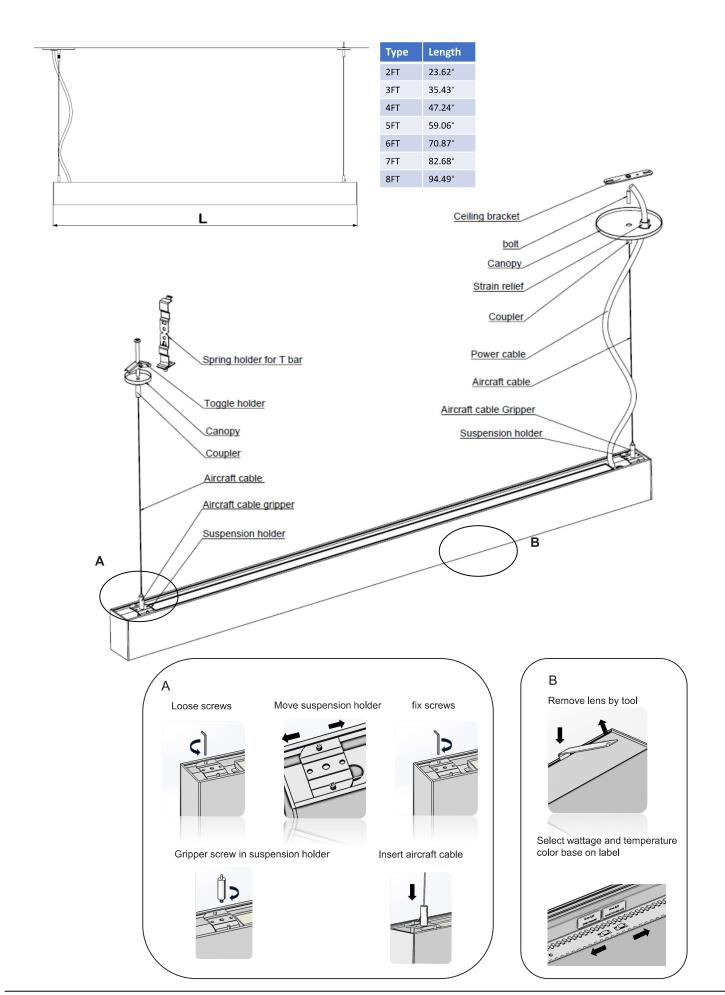


CONTINUOUS INSTALLATION FOR DIRECT AND INDIRECT

Remove lens by tool

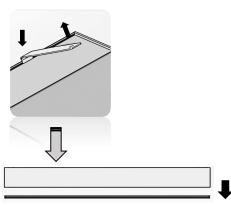


Loose screws and remove gear tray

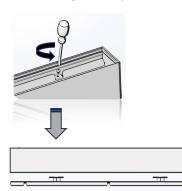


Loose 2 screws and remove End cap




Insert Joint plate to housing

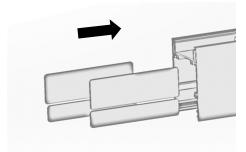


Lock plate in position

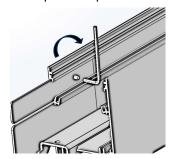


Insert Joint lock holder to brackets

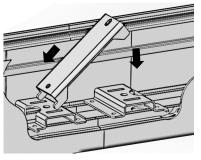


Fix lock holder to brackets by 2 screws

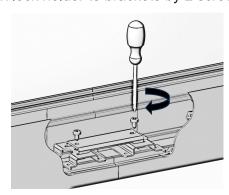


Connect through wiring

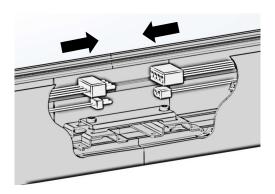


NON-POWER FEED

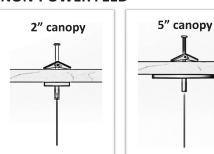


POWER FEED

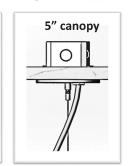


GRID NON-POWER FEED

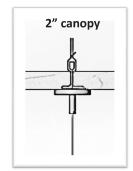


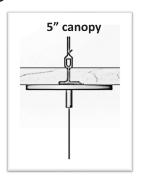


Drop Ceiling System (Non Feed)

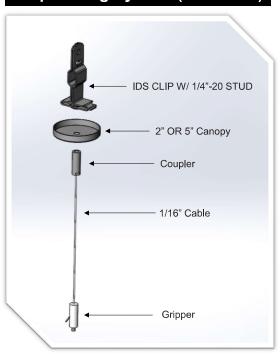

Drop Ceiling System (Feed)

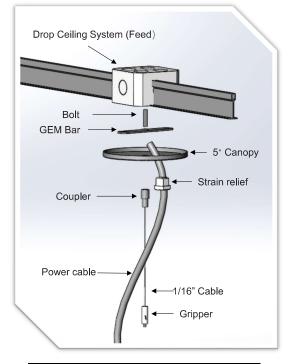

Hard Ceiling System (Non Feed)

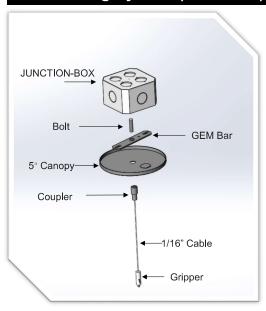

Hard Ceiling System (Feed)

