

Installation Guide


IMPORTANT SAFETY INFORMATION

- WARNING : RISK OF SHOCK** House electric current can cause painful shock or serious injury unless handled properly. For your safety, always remember to :
A : Turn off the power supply at the fuse or circuit breaker box before you install the fixture.
B : Double-check all connections to be sure they are tight and correct.
- This fixture is designed for use in a circuit protected by a fuse or circuit breaker. It is also designed to be installed in accordance with local electrical codes. If you are unsure about your wiring, consult a qualified electrician or local electrical inspector, and check your local electrical code.
- WARNING : RISK OF CUTS** Some metal parts in the fixture may have sharp edges. To prevent cuts and scrapes, wear gloves when handling the parts.
- Account for small parts and destroy packing material, as these may be hazardous to children.
- The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person.
- Terminal block and the suspending accessories is not included. Installation must be performed by a qualified person.


Product Specification

Wattage (W)	Voltage (V)	Rated Input Frequency (Hz)	Beam Angle (°)	Dimension (DxH)
48W	AC120V	60Hz	120	24 x 0.95 inch


Surface Mounted Installation

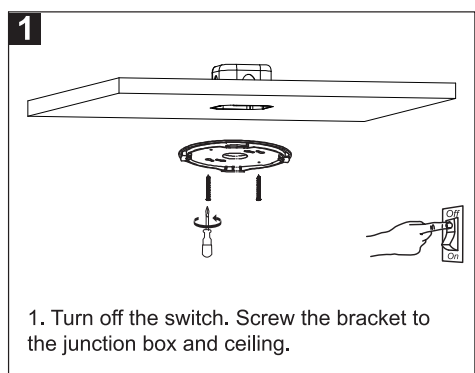


1. Turn off the switch. Screw the bracket to the junction box and ceiling.

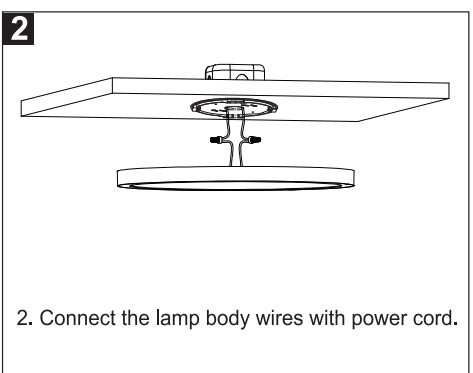

2. Connect the lamp body wires with power cord.

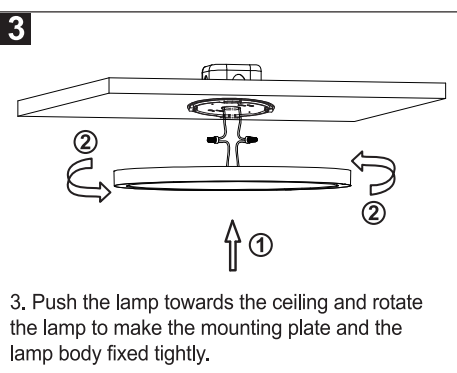

3. Push the lamp towards the ceiling and rotate the lamp to make the mounting plate and the lamp body fixed tightly.

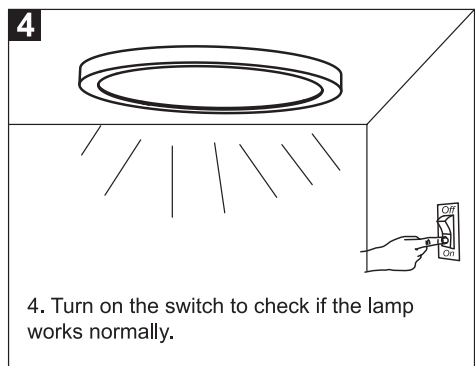

4. Turn on the switch to check if the lamp works normally.

Caution

- WARNING : Risk of fire.**
- Before installing your lighting fixture, thoroughly review enclosed installation manual. If you do not have sufficient electrical wiring experience, please refer to a do-it-yourself wiring handbook or have your fixture installed by a qualified licensed electrician. All electrical connections must be in accordance with local standards. Reliable operating temperature is -20 to +40 degrees
- pls obey fire prevention regulations, do not cover the fixture with any heat insulated materials.
- Do not change the LED light source or driver inside under any circumstance.