




FLOOR LAMP
LAMPE DE PLANCHER

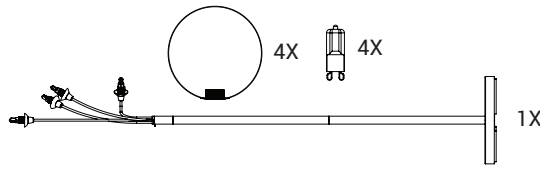

REQUIRED BULB (INCLUDED)
AMPOULE REQUISE (INCLUDE)



4 X G9
20W

REQUIRED TOOLS
OUTILS REQUIS

(Included - Inclus)



Installation Instructions


Instructions d'installation

F15074CH


! WARNING - ATTENTION

This portable lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless the plug can be fully inserted. Do not alter the plug.


Cette lampe portable est munie d'une fiche polarisée (une lame est plus large que l'autre), un élément de sécurité qui permet de réduire le risque de choc électrique. Cette fiche peut être branchée à une prise polarisée dans un seul sens. Si la fiche ne s'insère pas entièrement dans la prise, inversez-la. Si cela ne fonctionne pas, communiquez avec un électricien qualifié. N'utilisez jamais cette lampe avec une rallonge électrique si la fiche ne peut être entièrement insérée. Ne modifiez pas la fiche.

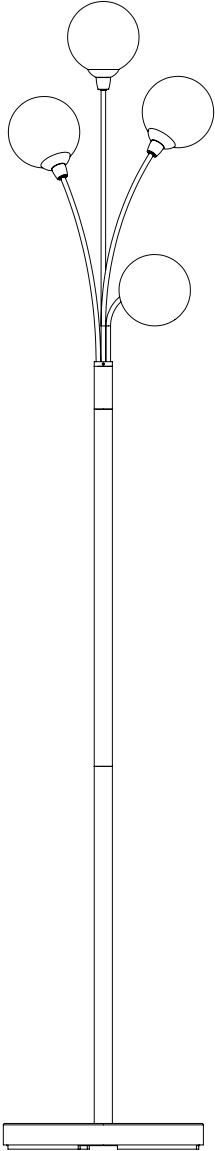

1

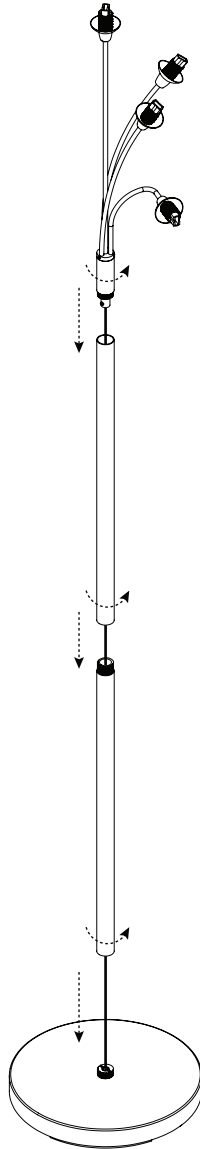

2

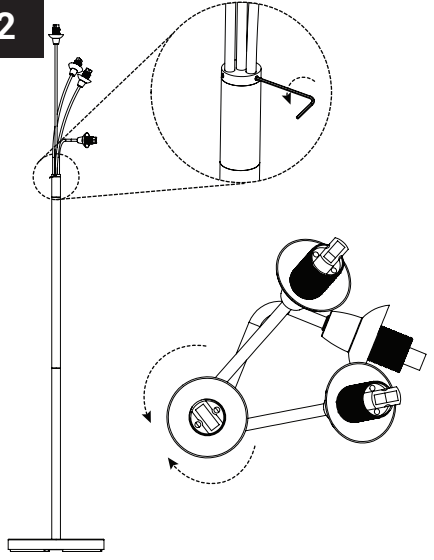

3

X4

