Four lamp monopoint

1. Remove the fixture from its original packaging. Remove the canopy mounting plate from within the canopy and attach it to the electrical junction box on the ceiling using the two screws provided in the hardware package.

2. Now attach the canopy to the mounting plate, which is attached to the electrical junction box. First attach all wiring with the provided marrets (white to white "N", black to black "L", ground to ground "G"). Align the two holes from the canopy to the two screws on the mounting plate. Push the screws through the canopy plate so they are poking through, once this is complete you can screw on the decorative nuts until tight.

3. Now that your fixture is installed you can install the GU-10 light bulbs of the correct wattage.

4. Locate the 12 screws from inside the hardware package. These screws are to hold the four glass lamp shades on to the fixture. Take the glass lamp shades and gently guide the light bulb into the center of the shade until one of the holes in the glass lines up with one of the holes in the side of the metal lamp socket head. (**4a**) Now insert a screw through the hole in the glass and screw it into the hole on the side of the lamp socket head until it is tight (do not over tighten). Please proceed to line up the other two holes in the glass, with the other two holes in the metal lamp socket head, insert the screws, and then screw them in until they are tight (do not over tighten).
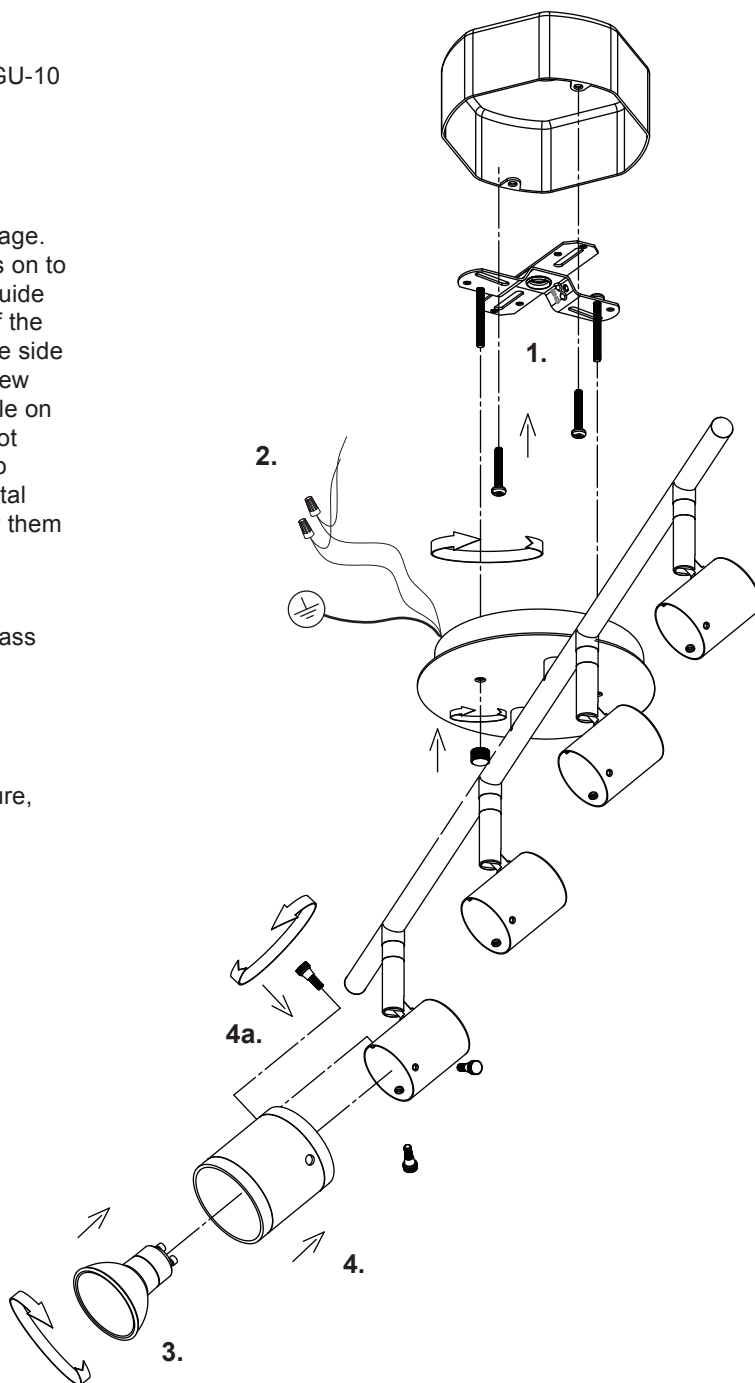
5. Please repeat step 4 until the installation of all the glass lamp shades are complete.

6. You have now completed the installation of your fixture, please enjoy.

KUZCO
L I G H T I N G