EiKO®

INSTALLATION INSTRUCTIONS
LED Wallpack Adjustable

WPA/PSXX/8CCT/HD/BZ

SAFETY PRECAUTIONS:

NOTE: READ CAREFULLY BEFORE INSTALLATION.
This LED Wallpack uses the latest in solid state lighting technology for long life, low maintenance, and high efficiency. An internal power-factor-corrected switch-mode supply allows this wallpack to be used from any nominal 120V-347V, 50/60Hz AC supply without any variation in light output. Suitable for use in the following locations:
- Ambient temperature: -40˚C to 45˚C
- Wet locations

WARNING:
- To avoid the risk of fire or electric shock, this product should be installed, inspected, and maintained by a qualified electrician. In accordance with all applicable electrical codes.
- Be certain electrical power is OFF before and during installation and maintenance.
- Luminaire must be connected to a wiring system with an equipment-grounding conductor.
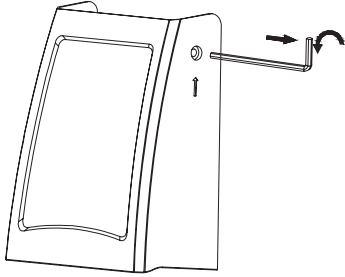
WIRING:
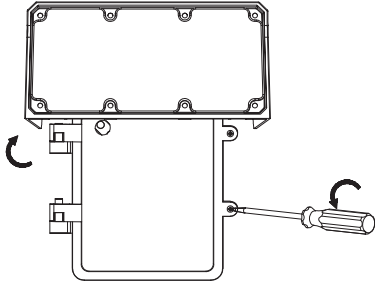
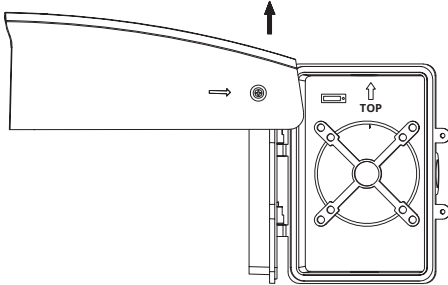**WITHOUT PHOTOCELL**
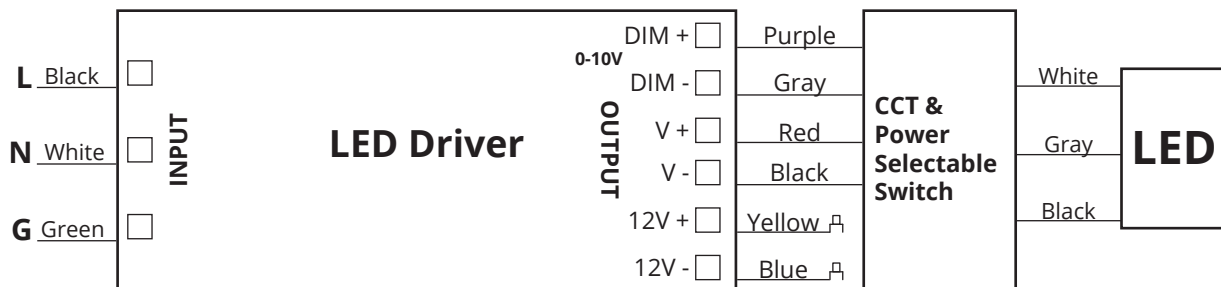
WITH PHOTOCELL
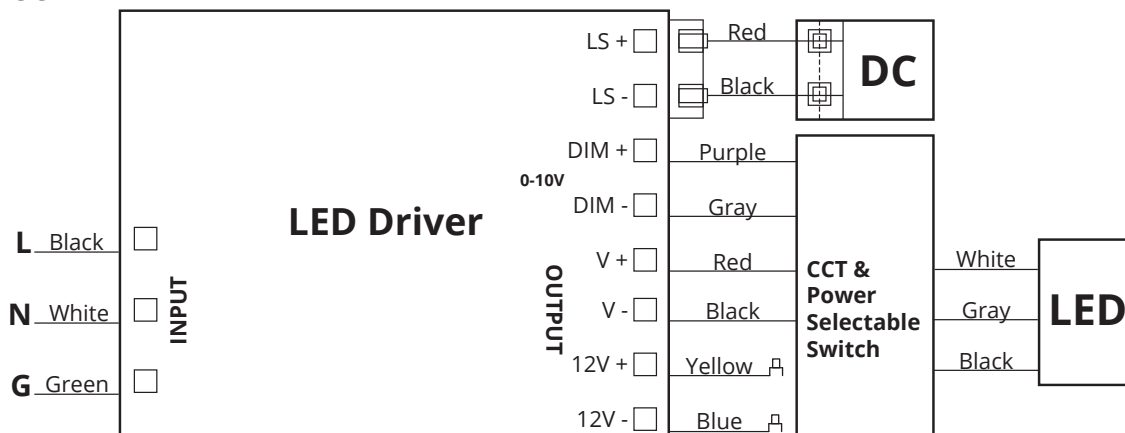
INSTALLATION:

1 Loosen the M6 screw on the front fixture housing.

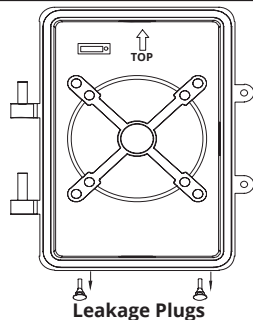**2** Use screw driver to open the driver box.

3 Remove the fixture front housing from driver box.

TOP

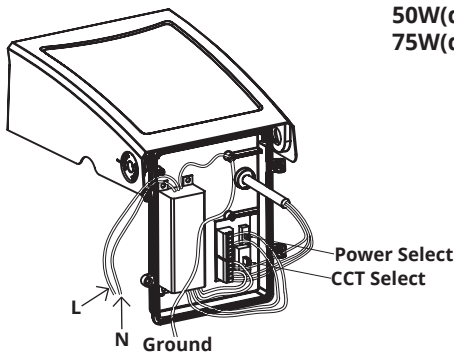**4** Drill holes according to the size of junction box.

Use a level to ensure the cover is straight and secure to a sturdy wall.
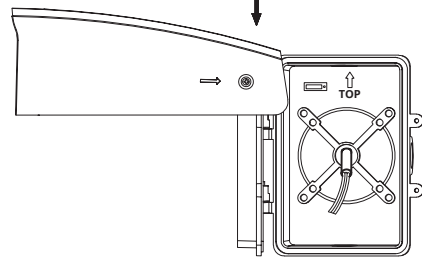
Remove the two (2) leakage plugs.

TOP

Leakage Plugs

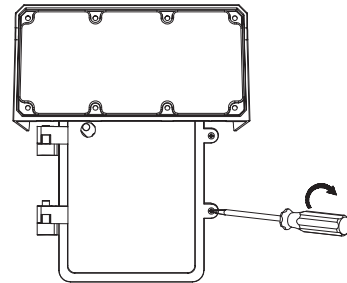**5** Select desired CCT & Power on DIP switch.
Default CCT: 5000K

Default Wattage:
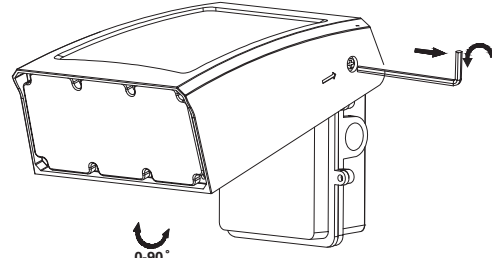35W(default)-28W-21W
50W(default)-40W-30W
75W(default)-60W-45W

Power Select
CCT Select

L
N Ground

6 Attach the fixture front housing with driver box. Connect L, N, G wires.

TOP

7 Tighten the two (2) side screws.

8 Adjust the fixture front housing to desired angle and tighten the M6 screw.

0-90˚

9 Installation is complete.

EiKO Global | 23220 W 84th St, Shawnee, KS 66227 | (P) 1-800-852-2217
EiKO Canada | 81 King St, Barrie, Ontario L4N 6B5 | (P) 1-705-721-5189

eiko.com