

# LED UNDERCABINET PUCK

3580LED-PL1WHT-C  
3580LED-PL1NKL-C

QUESTIONS OR CONCERNS CONTACT CANARM AT:

1-800-265-1833 (English) / 1-800-567-2513 (French) Monday through Friday 8:00 AM to 5:00 PM E.S.T.



INSTRUCTIONS PERTAINING TO RISK OF FIRE OR INJURY TO PERSONS  
READ ALL INSTRUCTIONS

## IMPORTANT SAFETY INSTRUCTIONS

### SAVE THESE INSTRUCTIONS

#### TOOLS AND MATERIALS REQUIRED:



Wiring supplies as required by electrical code




#### SAFETY PRECAUTIONS:

**This fixture is equipped with a polarized plug (a plug having one blade wider than the other). This plug will fit in a polarized outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, reverse the plug. If it still will not fit, contact a qualified electrician. Never use with an extension cord unless the plug can be fully inserted.**


#### PACKAGE CONTENTS

PART	DESCRIPTION	QTY
A	plug	1
B	on/off switch	1
C	6'cord	1
D	LED puck light	1
E	wire clips	2
F	screw	3

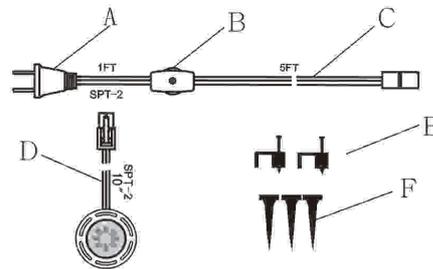


#### INSTALLATION:

##### OPTION #1 - SURFACE MOUNT

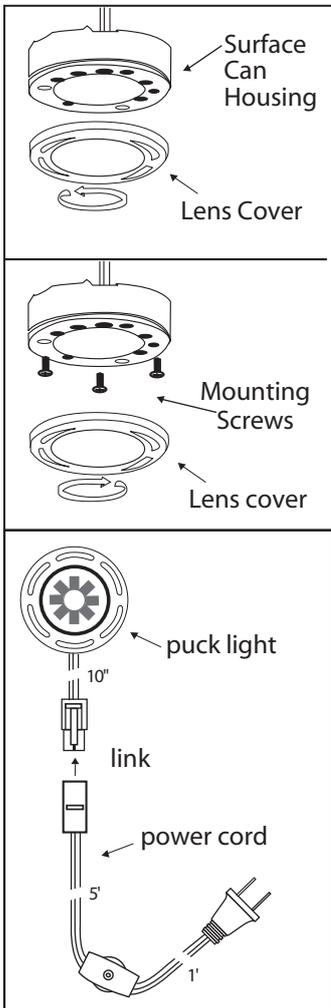

1. Remove lens cover by twisting counter-clockwise.
2. Attached puck to mounting surface with 3 mounting screws (included). Replace lens cover.
3. Link puck with power cord. Secure cord to mounting surface using wire clips included.  
  
Plug cord into power outlet.

##### OPTION #2 - RECESSED

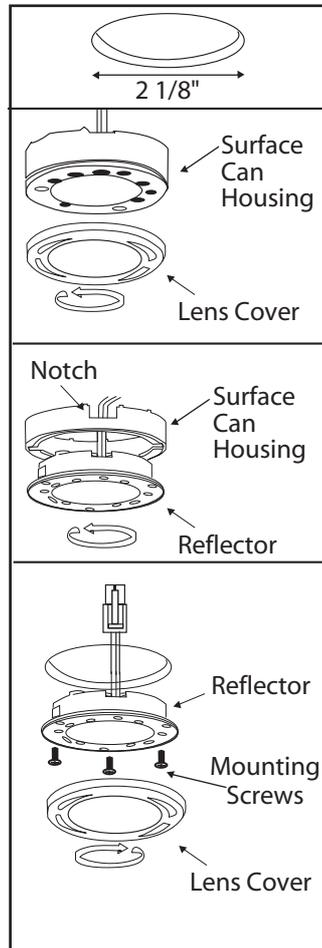

1. Drill a 2 1/8" hole in the underside of the cabinet
2. Remove lens cover by twisting counter-clockwise.
3. To remove the housing cover lift cord up from notch and twist the reflector counter-clockwise.  
  
Discard housing.
4. Feed cord through drilled hole and push puck snugly into place. Secure with 3 mounting screws (included). Replace lens cover.
5. Link puck with power cord. Plug cord into power outlet. (see step 3 in surface mount instruction)

Optional hardwire kit (sold separately).