

QUESTIONS OR CONCERNS CONTACT CANARM AT:

1-800-265-1833 (English) / 1-800-567-2513 (French) / Monday through Friday 8:00 AM to 5:00 PM E.S.T.



INSTRUCTIONS PERTAINING TO RISK OF FIRE OR INJURY TO PERSONS
READ ALL INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS SAVE THESE INSTRUCTIONS

TOOLS AND MATERIALS REQUIRED:



Blade
Screwdriver



Pliers



Hammer




Wiring supplies
as required by
electrical code

SAFETY PRECAUTIONS:

1. TURN OFF ELECTRICAL POWER BEFORE STARTING INSTALLATION OF LIGHT FIXTURE.
2. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.
3. THIS FIXTURE IS DESIGNED FOR 120 VOLT CIRCUIT. IF UNSURE ABOUT WIRING, CONSULT AN ELECTRICIAN.
WARNING: DO NOT CONNECT FIXTURE TO DIMMER CIRCUIT.
4. THIS FIXTURE MUST BE GROUNDED PROPERLY. CONNECT THE GROUND WIRE (BARE COPPER OR GREEN) TO THE AC SUPPLY GROUND WIRE (BARE COPPER OR GREEN) OR GROUND SCREW IN THE ELECTRICAL OUTLET BOX. IF GROUND WIRE IS NOT AVAILABLE IN YOUR AC SUPPLY WIRE SYSTEM, PLEASE CONSULT A QUALIFIED ELECTRICIAN BEFORE PROCEEDING THE ELECTRICAL CONNECTION.
5. USE ONLY ENERGY STAR APPROVED BALLAST (WITH LAMP SOCKETS) MANUFACTURED BY CSA FILE NUMBER 226237 AND MARKETING BY CANARM LIMITED. THIS BALLAST IS REPLACEABLE BY A QUALIFIED ELECTRICIAN WITHOUT CUTTING OF THE WIRES.

INSTALLATION:

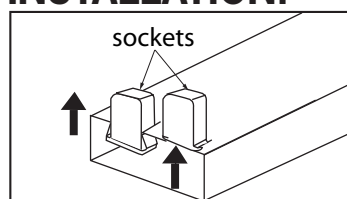

1. Push the sockets so that they snap into the slots on the top plate. **Locate the 4 pre-wired sockets from inside the housing. Attach the sockets exactly as shown using the colours of the wires to reference the correct location.**



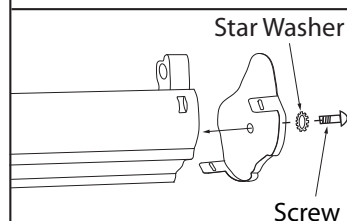


Diagram A

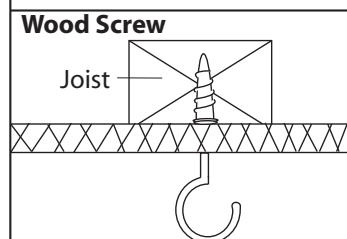

Wood Screw

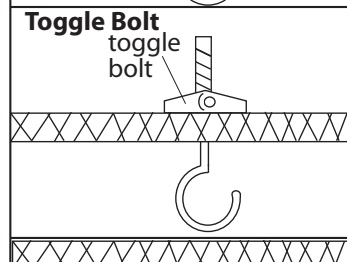


Toggle Bolt
toggle
bolt


2. Unscrew the screw and star washer on both ends. Insert the socket panel as shown. Tighten the screw and star washer to the fixture.

3. Secure the two open screw eyehooks (provided) to the ceiling 42 1/2" apart. Secure directly to a joist or using toggle bolts (not included). See diagram A.

4. Attach the mounting chains (provided) to the open screw eye hooks.

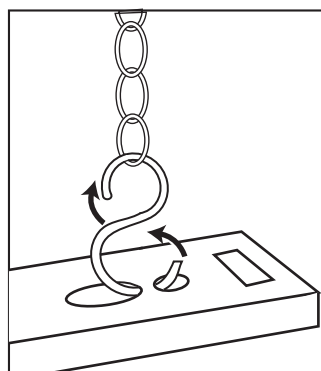


5. Attach the mounting chains into the dual slots that are located on top of the fixture housing. Crimp the screw eye hooks closed using pliers.

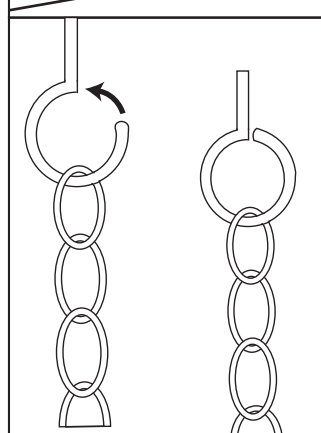

6. Level the fixture by adjusting the length of the chain at the open screw eye hooks. Crimp the screw eye hooks closed using pliers.

7. Install proper bulb type and wattage (not included). Insert the pins on both ends of the fluorescent tube into the lamp holders on both ends. Rotate the tube until a slight "click" is felt. Repeat for additional bulbs.

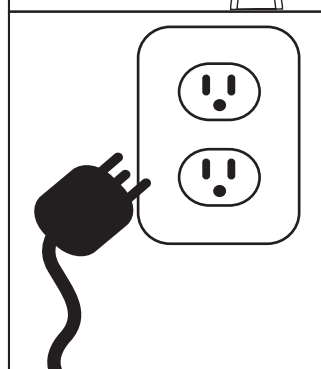

8. Plug cord into a grounded 120V, 60 Hz outlet.

9. When the ballast is replaced, reverse the process from step 8, 2 and 1. Loosen the screw and nut to remove the ballast and sockets from fixture. After that repeat the normal process from step 1, 2 and 8.