

**Questions or Concerns Contact At The Following Phone Numbers Before Returning Product To The Store:**

1-800-265-1833 (English) / 1-800-567-2513 (French)

Monday through Friday 8:00 AM to 5:00 PM E.S.T.



INSTRUCTIONS PERTAINING TO RISK OF FIRE OR INJURY TO PERSONS  
READ ALL INSTRUCTIONS

## IMPORTANT SAFETY INSTRUCTIONS

### SAVE THESE INSTRUCTIONS


### TOOLS AND MATERIALS REQUIRED:




Phillips  
Screwdriver



Wire Cutters




Spirit Level



Pencil



Tape  
Measure




Drill

### SAFETY PRECAUTIONS:

1. TURN OFF ELECTRICAL POWER BEFORE STARTING INSTALLATION OF THIS FIXTURE.
2. WIRING SUPPLIES AS REQUIRED BY LOCAL ELECTRICAL CODE.
3. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.
4. ENSURE THE SCREWS AND WALL PLUGS ARE SUITABLE FOR THE WALL INTENDED TO MOUNT THIS PRODUCT. CONSULT THE QUALIFIED PERSON FOR SAFETY INSTALLATION.
5. CONNECT THE GROUND WIRE (BARE COPPER OR GREEN) FROM YOUR FIXTURE TO THE GROUND WIRE (BARE COPPER OR GREEN) OR GROUND SCREW IN THE ELECTRICAL BOX.
6. TO CLEAN THE MIRROR, TURN OFF THE POWER, WAIT FOR IT TO COOL. WIPE THE MIRROR WITH A CLEAN AND SOFT CLOTH.
7. CLEAN GLASS WITH WATER ONLY.
8. REQUIRE AT LEAST 2 PERSONS TO SAFELY INSTALL THIS PRODUCT.

**NOTE:** Product may not look exactly as shown in figures.

### INSTALLATION:

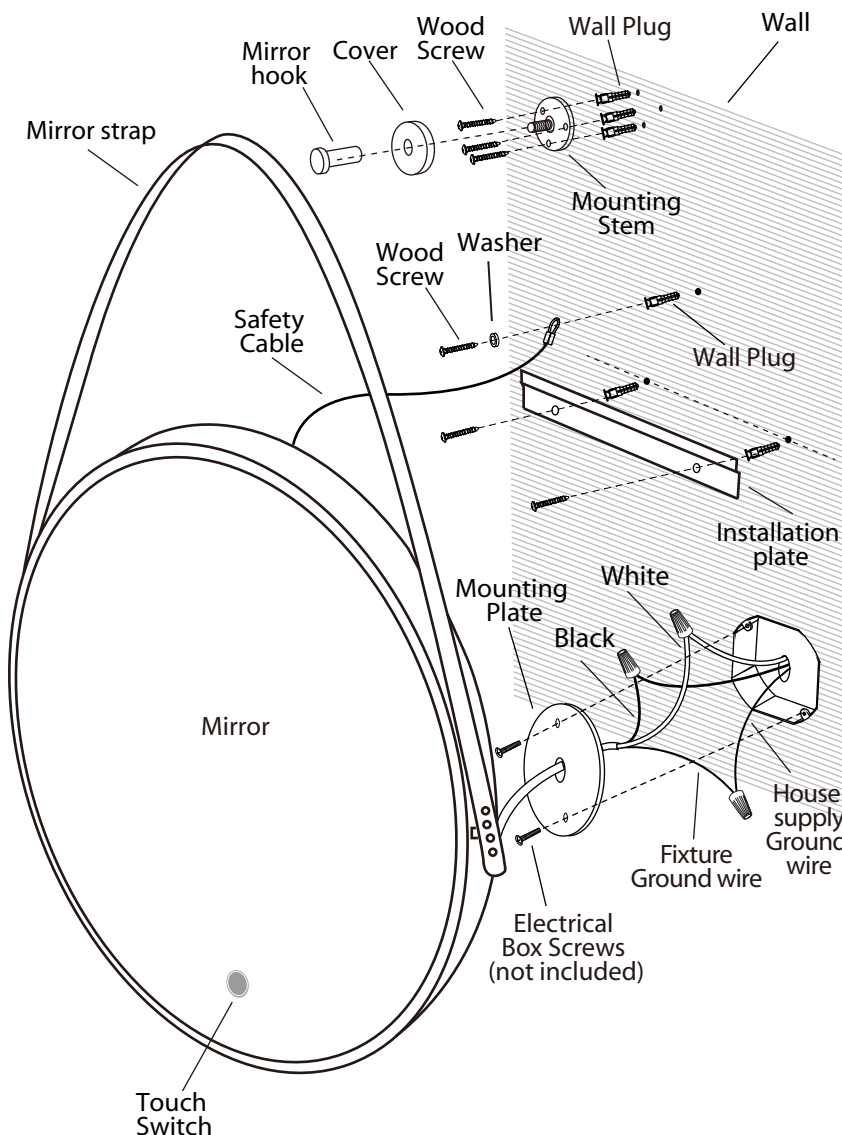

1. Draw a horizontal line on the wall at the desired height.
2. Mark the wall for the pilot hole locations. Drill 3 pilot holes at location. Determine the appropriate way (wood screws for the wooden studs or wall plugs and wood screws for dry wall) of fastening the installation plate to the wall.
3. Insert the wood screws supplied into the wall plugs.

**NOTE:** The wall plugs supplied are only suitable for solid stone/brick walls. For plasterboard walls use special wall plugs.

### CONSULT THE QUALIFIED PERSON FOR SAFETY INSTALLATION.

4. Tighten the safety cable to the wall plug by screwing the wood screw and washer supplied.
5. Run the fixture supply wire through the middle hole of round mounting plate. Then make the electrical connection from the mirror to the house supply wires.
6. Connect the ground wires (bare copper or green) from your fixture to the ground wire (bare copper or green) or ground screw in the electrical box. Connect the black wire from the fixture to the black wire in the electrical box (using wire nut) and connect the white wire to the white wire in the electrical box (using wire nut).
7. Once connections of wires are completed, carefully tuck wires and wire nuts into the electrical box making sure no bare wire (on the black and white) is visible at the wire nuts.
8. Secure the round mounting plate to electrical box using electrical box screws (not supplied).
9. Hang the mirror securely on the wall.
10. Locate the mirror hook position by pulling up the mirror strap to its fullest length.
11. Mark the wall for the mirror hook locations. Drill 3 pilot holes at location. Install 3 wall plugs, if required.
12. Position the mounting stem in place and insert the wood screws supplied into the wall plugs.
13. Position the cover over the mounting stem and secure it with the mirror hook.
14. Hang the mirror strap to the mirror hook.

### OPERATING INSTRUCTIONS

Lighting is turned on/off by the touch switch. The color temperature is controlled by tapping the on/off switch. The brightness of the mirror can be adjusted by holding the on/off switch.

Pour Toutes Questions Ou Commentaires, Veuillez Nous Contacter Avant De Retourner Le Produit Au Détaillant :

1-800-265-1833 (Anglais) / 1-800-567-2513 (Français)

Du lundi au vendredi 8 :00am à 5 :00pm E.S.T



## OUTILS ET MATERIAUX REQUIS:



Tournevis A  
Phillips



Coupeur  
De Fils




Niveau à bulle



Crayon



Ruban À  
Mesurer




Perceuse

## MISE EN GARDE:

1. COUPEZ L'ALIMENTATION ÉLECTRIQUE AVANT DE COMMENCER L'INSTALLATION DE CET APPAREIL.
2. FOURNITURES ÉLECTRIQUES TELLES QUE PRESCRITES PAR LES NORMES LOCALES.
3. CE PRODUIT DOIT ÊTRE INSTALLÉ SELON LE CODE D'INSTALLATION PERTINENT, PAR UNE PERSONNE QUI CONNAIT BIEN LE PRODUIT ET SON FONCTIONNEMENT AINSI QUE LES RISQUES INHÉRENTS.
4. ASSUREZ-VOUS QUE LES VIS ET LES ANCRES QUE VOUS UTILISEREZ CONVIENNENT AU TYPE DE MUR SUR LEQUEL L'INSTALLATION DOIT ÊTRE FAITE. CONSULTEZ UNE PERSONNE QUALIFIÉE POUR ASSURER UNE INSTALLATION SÉCURITAIRE ET ADÉQUATE.
5. BRANCHER LE FIL DE LA MISE A TERRE (CUIVRE NU OU VERT) DE VOTRE LUMINAIRE AU FIL DE LA MISE À TERRE (CUIVRE NU OU VERT) OU VIS DE LA MISE À TERRE DANS LA BOÎTE ÉLECTRIQUE.
6. POUR NETTOYER LE MIROIR, COUPEZ L'ALIMENTATION, ATTENDEZ QU'IL REFROIDISSE ET ESSUYEZ LE MIROIR AVEC UN CHIFFON PROPRE ET DOUX.
7. NETTOYEZ LE VERRE À L'EAU SEULEMENT.
8. L'INSTALLATION SÉCURITAIRE DE CE MIROIR EXIGE AU MOINS 2 PERSONNES.

N.B.: Peut différer de illustration.

## INSTALLATION:

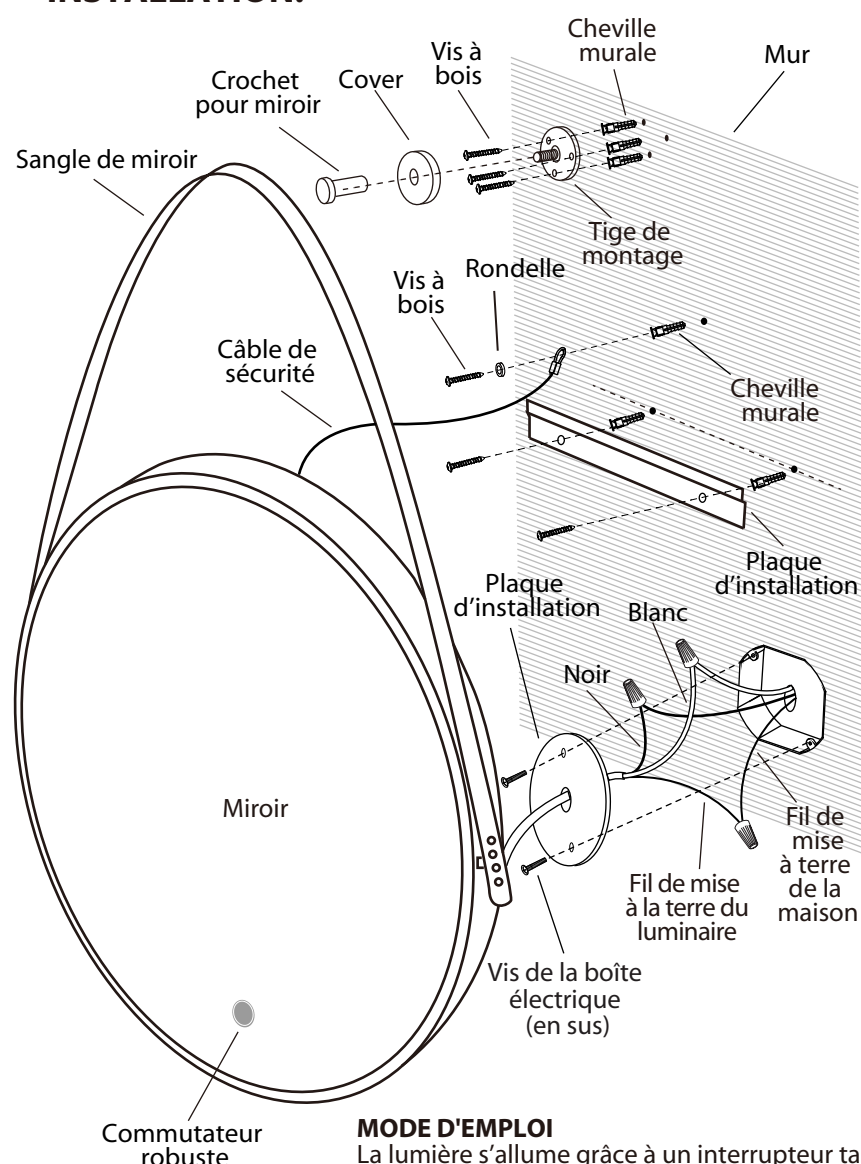

1. Tracez une ligne horizontale sur le mur à la hauteur désirée.

2. Marquez le mur pour les emplacements des trous pilotes. Percez 3 trous pilotes à cet emplacement. Déterminez le meilleur moyen (vis à bois ou montants en bois ou cheville et vis à bois pour murs secs) de fixer le miroir au mur.

3. Insérez les vis murales fournies dans les chevilles.

N.B.: Les chevilles fournies ne conviennent que pour les murs en pierre / brique pleines. Pour les murs en placopâtre, utilisez des chevilles spéciales.

CONSULTEZ UNE PERSONNE QUALIFIÉE POUR ASSURER UNE INSTALLATION SÉCURITAIRE ET ADÉQUATE.

4. Serrez le câble de sécurité à la cheville médiane en vissant la vis à bois et la rondelle fournies. Accrochez soigneusement le miroir au mur. Assurez-vous que le miroir est bien accroché avant de brancher la connexion.

5. Faites passer le fil d'alimentation de l'appareil dans le trou central de la plaque de montage ronde. Ensuite, établissez la connexion électrique entre le miroir et les fils d'alimentation de la maison.

6. Branchez le fil de la mise a terre (cuivre nu ou vert) de votre montage au fil de la mise a terre (cuivre nu ou vert) ou vis de la mise a terre dans la boîte électrique. Connectez le fil noir de la lumière au fil noir de la boîte électrique (en utilisant l'écrou) et connectez le fil blanc au fil blanc de la boîte électrique (en utilisant l'écrou).

7. Une fois les connexions terminées, poussez soigneusement les fils et les marrettes dans la boîte électrique en vous assurant qu'aucun fil dénudé (sur les fils noirs et blancs) est visible des marrettes.

8. Fixez la plaque de montage ronde au boîtier électrique à l'aide de vis du boîtier électrique (non incluses).

9. Suspendre le miroir au mur de façon sécuritaire.

10. Localisez le crochet du miroir en remontant la sangle du miroir à sa longueur maximale.

11. Marquez le mur pour la position du crochet. Vissez les 3 trous de guidage à cette position. Installez les 3 chevilles si requis.

12. Positionnez la tige de montage en place et insérez les vis à bois fournis dans les chevilles.

13. Positionnez le couvert par-dessus la tige de montage et sécurisez avec le crochet du miroir.

## MODE D'EMPLOI

La lumière s'allume grâce à un interrupteur tactile Marche/Arrêt. Le degré de température de la couleur est contrôlé en appuyant sur l'interrupteur Marche/Arrêt. L'intensité de la lumière du miroir peut être ajustée en tenant l'interrupteur Marche/Arrêt.