

VAPOR BARRIER

(FOR NEW CONSTRUCTION IC RECESSED LIGHT)

VBE-1
03/09

QUESTIONS OR CONCERNS, CONTACT CANARM AT:

1-800-265-1833 (English)
 1-800-567-2513 (French)
 1-800-267-4427 (USA)
 Monday through Friday
 8:00 AM to 5:00 PM E.S.T.

INSTALLATION:

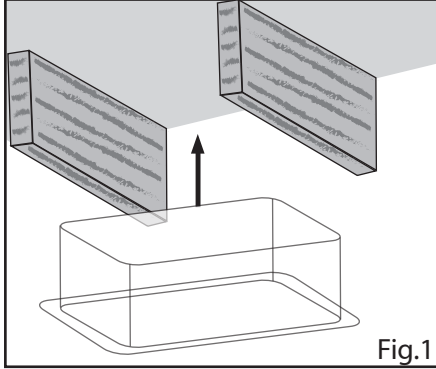


Fig.1

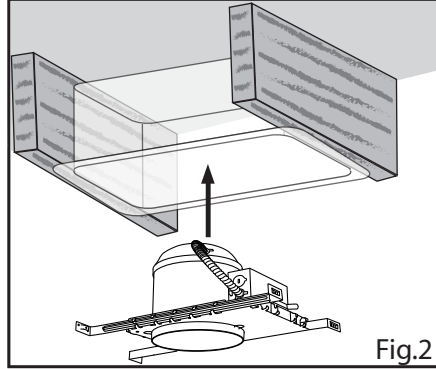


Fig.2

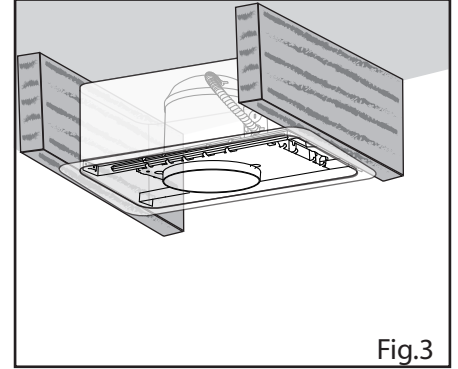


Fig.3

1. Locate where IC recessed light will be installed in ceiling.
2. Position vapor barrier at recessed light location and secure plastic edges of barrier by stapling to surrounding wood (joist/strapping/rafter). (fig.1)
3. Pierce a hole in vapor barrier and pass electrical wire through then seal barrier to wire with TUCK tape (Vapor barrier approved tape). (fig.2)
4. Position IC recessed light inside the vapor barrier and install as per recessed light installation instructions. (fig.3)

Imported By: CANARM LTD., 2157 Parkedale Ave., Brockville, Ontario, K6V 5V6, Tel: (613) 342-5424, Fax: (613) 342-8437

COUPE VAPEUR

(POUR LUMIÈRE ENCASTRÉE IC DE NOUVELLE CONSTRUCTION)

VBE-1
03/09

QUESTIONS OU INFORMATION COMMUNIQUEZ:

1-800-265-1833 (Anglais)
 1-800-567-2513 (Français)
 1-800-267-4427 (USA)
 Du lundi au vendredi entre
 8:00H et 17:00H H.N.E.

INSTALLATION:

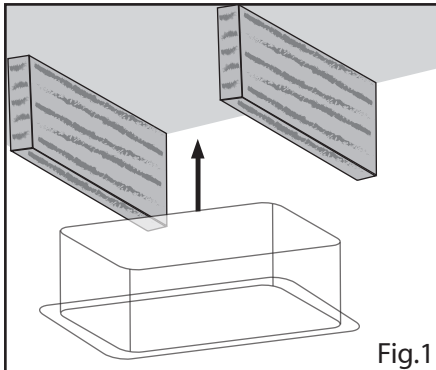


Fig.1

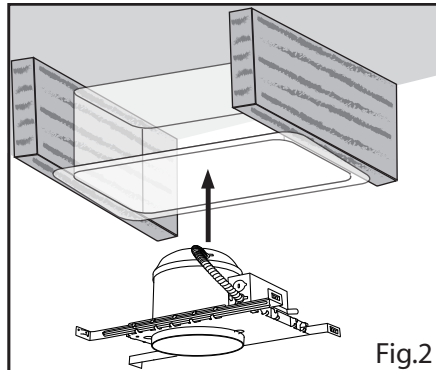


Fig.2

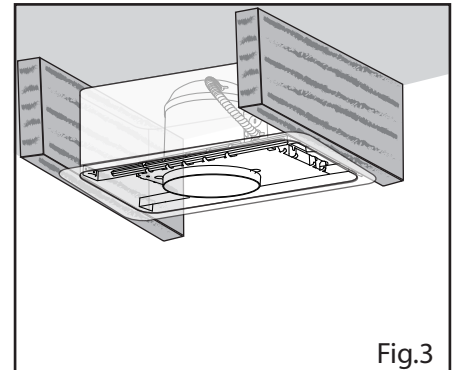


Fig.3

1. Choisissez l'endroit au plafond où votre lumière encastrée IC sera installée.
2. Placez le coupe vapeur à cet endroit et fixez les rebords de plastique en l'agrafant au bois environnant (solive/ sangle / poutrelle). (fig.1)
3. Percez un trou dans le coupe vapeur et faufilez les fils électriques. Scellez avec du ruban adhésif industriel de type TUCK (ruban approuvé pour les coupes vapeur). (fig.2)
4. Placez la lumière encastrée IC à l'intérieur du coupe vapeur et installez tel que décrit dans le mode d'installation. (fig.3)

Importé Par: CANARM LTD., 2157 Parkedale Ave., Brockville, Ontario, K6V 5V6, Tel: (613) 342-5424, Fax: (613) 342-8437