Assembly Instruction Sheet #S-1034P40-14 For Style 1034P40-14

Tools Required: Fisthead expectitive, Philips expectitive, pilers, who called, who attracts, electrical tree, author of Light Source: (14) G9 MAX40W (Not include).

Estimated Assumbly Time: 10-20 minutes


Proportion: Identify and inspect all parts before beginning installation, Check peckage content list and degrams below to be sure all parts are present. If any parts are releating or damaged, do not attempt to essentials, tretall, or operate the fidure. Contact contamer egylde for replacement

▲ Warnings and Cautions

Package Contents

Turn off electricity at circuit breaker or main fuse box before installation. Coroult a licensed electricism if in doubt. These instructions are provided for your safety. It is very important you reed them completely before tretailing the focus. We strongly recommend that a Rosead, professional electricism perform the habitation.

Discretized fluture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.

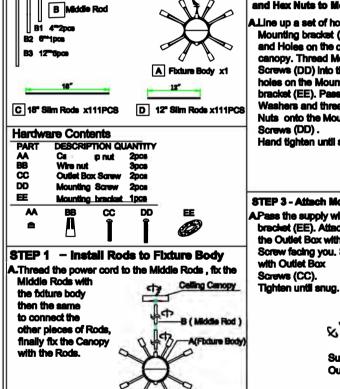

STEP 2 - Attach Mounting Screws, Lock Washers and Hex Nuts to Mounting bracket.

Alline up a set of holes on the 🥵 Mounting bracket (EE) and Holes on the celling canopy. Thread Mounting Screws (DD) into the holes on the Mounting bracket (EE). Pass Lock Washers and thread Hex Nuts onto the Mounting Hand tighten until snug.

Figure 1


STEP 3 - Attach Mounting bracket to Outlet Box APass the supply wires through the Mounting bracket (EE). Attach the Mounting bracket (EE) to the Outlet Box with the head of the Green Ground Screw facing you, Secure It with Outlet Box

Supply Wires with **Outlet Box Screws Ground Wire** Figure 2

Outlet Box


STEP 4 - Fit Calling Canopy to Mounting bracket Ass

A. Fit the ceiling canopy to Mounting Screws (DD) and secure with Canut (ApA). Note: The ceiling campy should be anua against the calling and the Mounting Balls (AA). If not, adjust the length of the Mountino Screws (DD) by unacrewing the Hex Nut and Lock Washer and then screwing Mounting Screws (DD) in or out of the Mounting bracket (EE) until the correct length is achieved. Once the celling canopy is secure, remove the Ca nut (Ash) and ceiling canopy and proceed to Step 5.




STEP 5 - Wire Connections

A. Use standard wire connectors to make all wire connections. Twist connectors until wires are furthly joined trouther. Witho each connection with approved electrical type and carefully stuff all the connected wires into the Outlet Box.

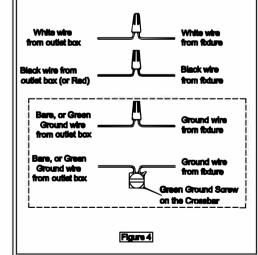

STEP 6 - Install Celling Canopy to Celling A. Carefully tuck all wires into the outlet box and position the celling cancov of the Fixture Body (A) over the outlet box. Alian the holes in the ceiling canopy with the Mounting SCIEWO (DD), Secure with Ca (Askingled hand tighten until anus.

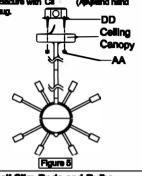

STEP 7 - Install Slim Rods and Bulbs. A. Install bulbs (Not Include) onto sockets and push anug Into place.

B. Please put the Slim Rods (C) (D) to the Fixture Body (A). Please pay attention to assemble the Silm Rod(C) and (B) Illes belowing Figure A Cross Pattern

