

Assembly Instruction Sheet #S-1034WB-2
For Style 1034WB-2

Tools Required: Phillips screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.
Light Source: (2) G9 MAXVOW (not include).
Estimated Assembly Time: 10-20 minutes.
Preparation: Identify and inspect all parts before beginning installation. Check packages contain list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.

⚠ Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.
These instructions are provided for your safety. It is very important you read them completely before installing the fixture.
We strongly recommend that a licensed, professional electrician perform the installation.
Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.

Package Contents



A Fixture Body x1

Hardware Contents

PART	DESCRIPTION	QUANTITY
AA	Mounting Buds	2pcs
BB	Wire nut	3pcs
CC	Outlet Box Screw	2pcs
DD	Mounting Screw	2pcs
EE	Crossbar	1pcs



STEP 1 - Attach Mounting Screws, Lock Washers and Hex Nuts to Crossbar.

A. Line up a set of holes on the Crossbar (DD) and holes on the ceiling canopy. Thread Mounting Screws (CC) into the holes on the Crossbar (DD). Then Lock Washers and Thread Hex Nuts onto the Mounting Screws (CC). Hand tighten until snug.

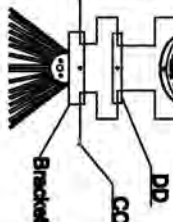


Figure 1

STEP 2 - Attach Crossbar to Outlet Box.

A. Pass the supply wires through the Crossbar (DD). Attach the Crossbar (DD) to the Outlet Box (BB) with the head of the Green Ground Screw (BB). Secure it with Outlet Box Screws (not included). Tighten until snug.

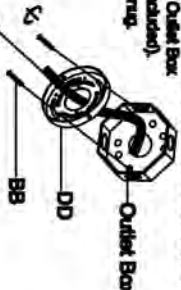


Figure 2

Supply Wires with Outlet Box Screws Ground Wire

STEP 3 - Wire Connections

A. Use standard wire connectors (not included) to make all wire connections. Twist connections until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.

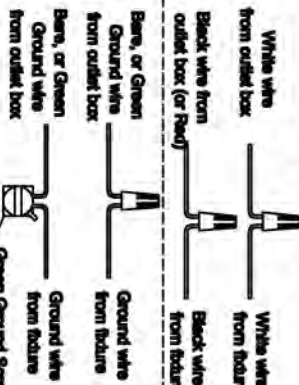


Figure 3

STEP 4 - Attach bracket to Mounting bracket.

A. Place bracket over the Mounting bracket (DD). Line up the hole on the bracket and the mounting hole on the Mounting bracket, secure by threading Mounting Screw (CC) into the Mounting bracket (DD). Tighten until snug.

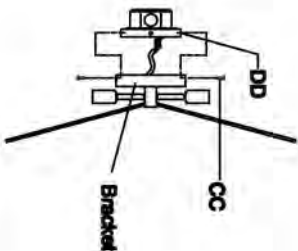


Figure 4

STEP 5 - Install Buds.

A. Install buds (not include) onto sockets and push snug into place.

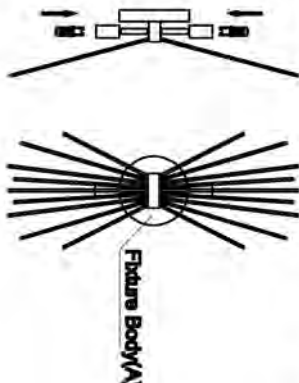


Figure 5