Assembly Instruction Sheet #S-1042 P32 For Style 1042P32


s Required: Flathead screwitiver, Phillips screwitiver, piers, wire culturs, who shippers, electrical tape, safety glasses. Source: (1) 1/20/ LED *50W DIMANSE (4000K) Source: (2) 1/20/ LED *50W DIMANSE (4000K) sandot Assembly Time: 10-20 minutes sandots kinnifly and impact all puris believe beginning installation. Check package content lat and diagrams below to be sure all puris are still any parts are missing or damaged, do not attempt to assemble, install, or operate the thouse. Context customer services for replacement.

△Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electricism if in doubt. These instructions are provided for your safety. It is very important you read them completely before installing the fidure. We strongly recommend that a licensed, professional electricism perform the installation.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.

Package Contents

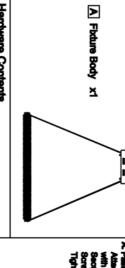

A. Pase the supply wires through the Crossber (EE)
Attach the Crossber (EE) to the Outlet Box (CC) STEP 2 - Attach Crossbar to Outlet Box. Ath the head of the Gre Supply Wires with Outlet Box Screws Ground Wire en Ground Screw facing you. Ŕ

M S S W Hardware Contents DESCRIPTION QUANTITY Outlet Box Screw ectrical Marrets \$ \$ \$ \$ \$ \$

Lock Washer ġ A. Fit the ceiling canopy to Mounting Screws (DD) and secure with Decorative Caps (AA). Note: The ceiling canopy should be arrug against the ceiling and the Decorative Caps (AA). unscrewing the Hex Nut and Lock Washer and then screwing Mounting not, adjust the length of the founting Screws (DD) by

STEP 1 - Attach Mount


₹

STEP 3 — Fit Calling Canopy to Crossber Assembly

Figure 2

Once the ceiling carropy is secure, remove the Decorative Caps (AA) and ceiling carropy and proceed to Step 4.

and Hax Nuts to Grossbar. A. Line up a set of holes on the land fighten until enug uts onto the Mounting n tre ceeing carcpy. Irred Mounting Screws (DD) to the holes on the EE) and Holes Figure 1



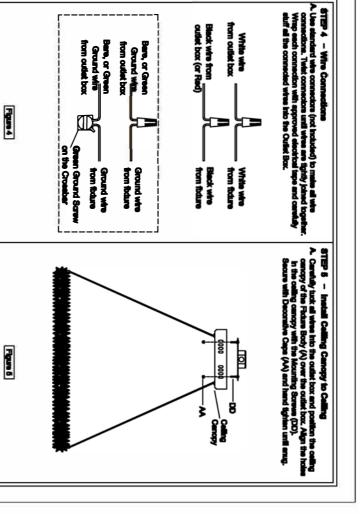


Figure 3