For Style 1044P20-R-2C Assembly Instruction Sheet #IS-1044P20-R-2C

Pospulmot: Flathead acrowichler, Philips acrowichler, plant, who culture, who ethippiers, electrical tops, editory glasses.

Bournet (2) 120V LED 149W DRAMABLE (4000K)

anded Assembly Three: 10-20 minutes

anded Assembly Three: 10-20 minutes

ander thirmity and happed all parts before beginning installation. Check package content list and diagrams below to be sure all parts are

nt. If any parts are minering or damaged, do not extempt to assemble, hatell, or operate the finiture. Contact customer services for replacement.

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electricism if in doubt. These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electricism perform the installation.

from outlet bax


from fodure White wire

White wire

outlet box (or Red) Black wire from

from floture Black wire

Disconnect Edure from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before remove

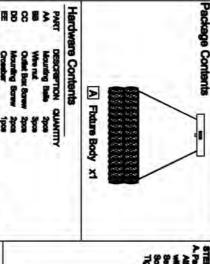

Supply Wires with Outlet Box Screws Ground Wire 8

STEP 3 — Fit Calling Canopy to Crossbur Assembly ng amony to Mounting Screws (DD) and secure ting Balls (AA). Note: The ceiling caropy should gainst the ceiling and the Mounting Balls (AA).

Figure 2

and Hex Nuts to Grossber.

A. Line up a set of holes on the

Surema, Lock Washers

unding Boress (DD)

8

and tighten until enug

Figure 1

Figure 3

1 오 2

ReleasedDate:2017-08-14

3

8

(DD) in or out of the Canopy

A Pass the supply wires through the Crossbar (EE).
Attach the Crossbar (EE) to the Outlet Box (CC)
with the head of the Green Ground Screw hading you STEP 2 - Attach Croseber to Outlet Box.

Bere, or Green
Ground wire _
from outlet box Ground wire from outlet box Berre, or Green on the Crossber Green Ground Screw Ground wire from floture

from fixture Ground wire

A. Use standard who connecture (not included) to make all who connecture. Their connecture shall whose are tightly joined together. When each connection with approved electrical tops and constally stuff all the connected whose into the Cutlet Box. A.Carefully tuck all whos into the outlet box and position the celling canopy of the Fodure Body (A) over the outlet box. Align the hole in the celling canopy with the Mounting Screws (DD).

Secure with Mounting Balle (AA) and hand fighten until enug. STEP 5 - Install Ceiling Canopy to Ceiling

STEP 4 - Wire Connections

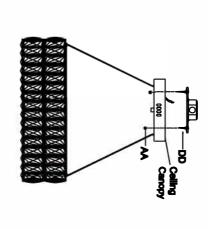


Figure 4

Figure 6

2 of 2