## For Style 1044P32-R-2C-B Assembly Instruction Sheet #IS-1044 P32-R-2C-B

STEP 4 - Wire Connections


STEP 5 - Install Ceiling Canopy to Calling

ools Raquired: Fathwad screwditver, Philips screwditver, piters, wire cutters, who shippers, electrical taps, safety glasses. (b) title LED 178W DISAMBLE (4000K) glyt Source: (2) 120V LED 178W DISAMBLE (4000K) stimuted advantable Assembly Time: 10-20 minutes are reparation: thankly and impact at prite before baginning installation. Chack package content list and diagrams below to be sure all parts are resent. If any parts are missing or demagad, do not altempt to assemble, hatell, or operate the fidure. Content customer service for replacement.

## **△Warnings and Cautions**

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt. These instructions are provided for your safety. It is very important you read them completely before installing the tidure. We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal

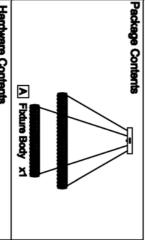

STEP 2 - Attach Greater to Quilet Box.

A Pass the supply wires through the Greater (EE).

Attach the Groseber (EE) to the Quilet Box (CC)

with the head of the Green Ground Screw facing to Secure it with Quilet Box. ighten until arug an Ground Screw facing you



Figure 4

Figure 6

STEP 3 — Fit Colling Canopy to Croseber Assembly

Figure 2

A. Fit the ceiling canopy to Mounting Screws (XD) and secure with Mounting Balls (AA). Note: The ceiling canopy should be enug against the ceiling and the Mounting Balls (AA). we (DD) in or out of the

and Hax Nuts to Grossbar. A. Line up a set of holes on the STEP 1 - Attach Mount 用品的器 Hardware Contents land fighten until enug ₹ uts onto the Mounting the celling canopy.
read Mounting Screws (DD)
the holes on the Mounting Balls (III) and Holes 3 **CIMMIN** , Lock Washers 8

nce the ceiling canopy is cure, remove the Mounting of (AA) and ceiling canopy of proceed to Step 4.

A. Use standard wire commedors (not included) to make all wire commedors. Twist commedors until wires are lightly bined logation Wrap each commedon with approved electrical tape and carefully stuff all the commedied wires into the Curlist Box. on the Crossbar Green Ground Screw from fodure Ground whe from floture Ground wire from fluin from theburn A. Carefully tuck all whee Into the our refully tuck all wires into the outlet box and position the onling rappy of the Fature Body (A) over the outlet box. Align the holes fighten und enug.

outlet box (or Red)

Ground wire

from outlet box are, or Green from outliet box from outliet box

Figure 1

Figure 3