## For Style 1054P28 Assembly Instruction Sheet #S-1054P28

Required: Fairsed acressitiver, Philips acressitiver, piers, wire culturs, wire strippers, electrical tups, safety glasses.
 Source: (1) 1207 LED 148W DIMARELE (2000K)
 Substance (1) 1207 LED 148W DIMARELE (2000


## **∆Warnings and Cautions**

Turn off electricity at circuit breaker or main tuse box before assessment volume.

These instructions are provided for your safety, it is very important you read from completely before installing the fodure.

These instructions are provided for your safety, it is very important you read from completely before installing the fodure.

Disconnect fixture from power source before replacing buibs. Make sure buibs are given sufficient time to cool before removal

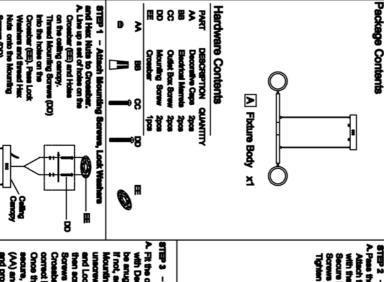

A. Pass the supply wires through the Crossber (EE).

Attach the Crossber (EE) to the Outlet Box (CC) STEP 2 - Attach Crossbar to Outlet Box. with the head of the Gre **Outlet Box Screws Ground Wire** Supply Wires with sen Ground Screw facing you Figure 2 Outlet Box Ä 8

A. Fit the ceiling canopy to Mounting Screws (DD) and secure STEP 3 — Fit Ceiling Canopy to Crossbar Assembly with Decorative Caps (AA). Note: The ceiling canopy should be anug against the ceiling and the Decorative Caps (AA).

Once the ceiling canopy is secure, remove the Decora not, adjust the length of the lounting Screws (DD) by en screwing Mounting Lock Washer and ring the Hex Nut ative Cape

A. Use standard wire connectors (not trabated) to make all whe currenttion. Twist connection until whee are tightly joined togeth Way such connection with approved electrical tope and carefully stuff all the observation when him the Cutlet Box. outlet box (or Red from outlet bo Black wire from Ground wire Bere, or Green Ground wire from outlet box Figure 4 Green Ground Screw from fixture Ground wire from States from fodure Ground with 

Figure 6

A. Carefully tuck all wires into the outlet box and position the ceiling canopy of the Fixture Body (A) over the outlet box. Align the hole in the ceiling canopy with the Mounting Screws (DD). STEP 5 - Install Celling Canopy to Celling th the Mounting Screws (DD).
Caps (AA) and hand fighten until enug.

STEP 4 - Wire Connections

2 of 2