## Assembly Instruction Sheet #S-1054 P31 For Style 1054P31


driver, pilers, wire culturs, wire strippers, electrical tape, safety glass


t Bosinox (13) 120V LED 187W DIMIM maind Assembly Time: 10-20 minutes seation: identity and inspect all parts be int. If any parts are missing or damaged int. If any parts are missing or damaged ct all parts before beginning installation. Check package content list and diagrams below to be sure all parts are g or demaged, do not effempt to essemble, install, or operate the Edure. Contect customer service for replacement

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electricism if in doubt. These instructions are provided for your safety. It is very important you need them completely before installing the tidure. We strongly recommend that a licensed, professional electricism perform the installation.

**△Warnings and Cautions** 

Disconnect that we from power source before replacing builbs. Make sure builbs are given sufficient time to cool before removal.

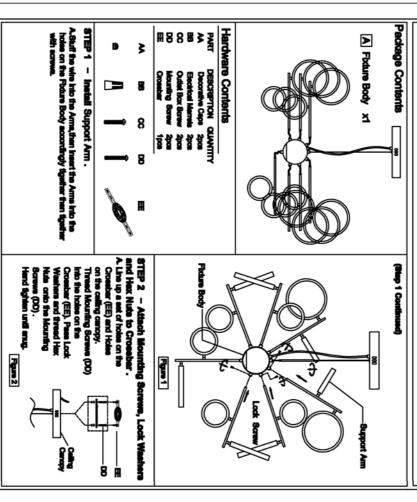

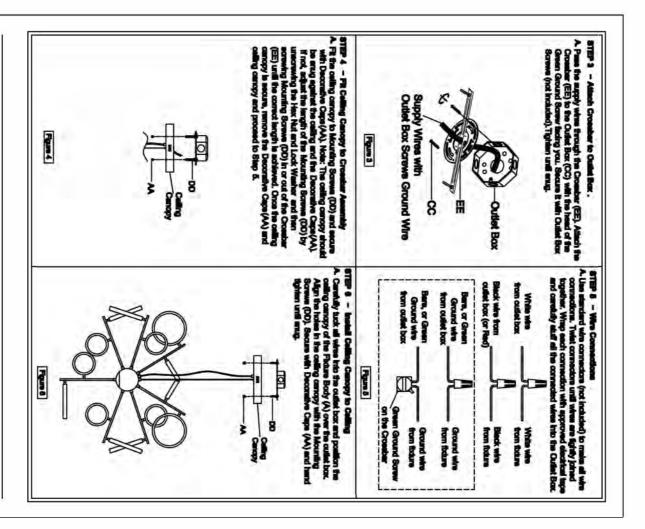

2 of 2