

Tools Required: Pathead according, Philips according, pilots, wire culture, wire strippers, electrical tape, safety glasses Light Source: (1) 1207 LED *TW DemiARLE (4005)

Lagar source: (1) Flow LED THE Determinance recovery
Estimated Amendally Time: 10-20 minutes
Propurations identify and trapact all parts before beginning tratalisation. Check preciage content list and diagrams below to be sure all parts are
present. If any parts are missing or demagrad, do not altermy to assemble, install, or operate the ficture. Content outstance service for replacement.


▲ Warnings and Cautions


Turn off electricity at circuit breaker or main fuse box before hydrillation. Consult a Scanced electricism if in doubt.


These hydrocalcres are provided for your eafety, it is very hyportant you read them completely before hatalling the Source.

We strongly recommend that a Scanced, professional electricism perform the hydrillation.

Discovered future from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.

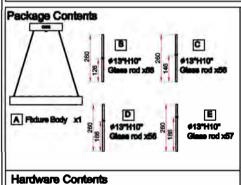

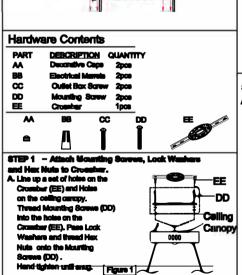

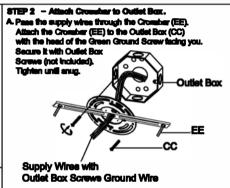

STEP 3 - Fit Calling Canopy to Crossber Assembly

Figure 2

A.Fit the ceiling canopy to Mounting Screws (DD) and secure with Decurative Cape(AA). Note: The ceiling canopy should be snug against the ceiling and the Decorative Caps(AA), if not, adjust the length of the Mounting Screws (DD) by unacrewing the Hex Nut and Lock Washer and Cellina then screwing Mounting Canopy 0000 Screws (DD) in or out of the Crossbar (EE) until the correct length is achieved. Once the ceiling carroby is secure, remove the Decurative Cace (AA) and ceiling cancov and proceed to Step 4. Figure 3

