Assembly Instruction Sheet #IS-1112P38-9 For Style 1112P38-9

abath Pathood acrosolther, Philips ecrosolther, piline, who culture, who strippers, electrical loga, satisfy glasses. see (b) Et 2 Cardiolother Bases Bulbs 60VW Mandemarn (Not Include). Assessely These 30-10 minutes to blankly and import of parts below beginning Installation. Check package content list and diagrams habov to be sussed parts are my parts are minuting or demagnat, do not ellumpit to assessatio, invalid, or operate the finition. Contact contents service for replacement my parts are minuting or demagnat, do not ellumpit to assessatio, invalid, or operate the finition. Contact contacts service for replacement

Ve strongly recommend that a licensed, profe um off electricity at circuit breaker or main fuae box bafore installation. Consult a itoeraed electricism if in doubt se instructions are provided for your safety. It is very important you read them completely before installing the ticture, strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fluture from power source before replacing bulbs. Make sure bulbs are given sufficient firms to cool before removel

Hardware Contents Package Contents B Crystale 22*111 C Crystain 22*111 A Facture Body *1

APass the supply whee through the Mounting bracket (EE).

Attach the Mounting bracket (EE) to the Outlet Box STEP 2 - Attach Mounting bracket to Outlet Box gotten undit errug re it with Outlet Box **Outlet Box**

STEP 3 - Fit Colling Canopy to Mounting bracket Assemb

Figure 2

Dutlet Box Screwe Ground Wire

8

STEP 1 - Attach Hounting Screws, Lock Westers and Hax Nuts to Mounting bracket.

A. Liho up a set of holes on the

ing Screens (CC) (CE) and Hotel

A. Fit the ceiling carropy to Mounting Screws (DD) and secure with Cap nut (AA). Note: The ceiling carropy should be anus against the ceiling and the Cap nut (AA). If not, adjust the length of the Mounting Screens (DD) by unacressing the Hax Nut and Lock Washer and then ing carnopy and proor sat(EE) until the correct length is achieved. Once the g canopy is secure, remove the Cap nut (AA) and

Figure 3

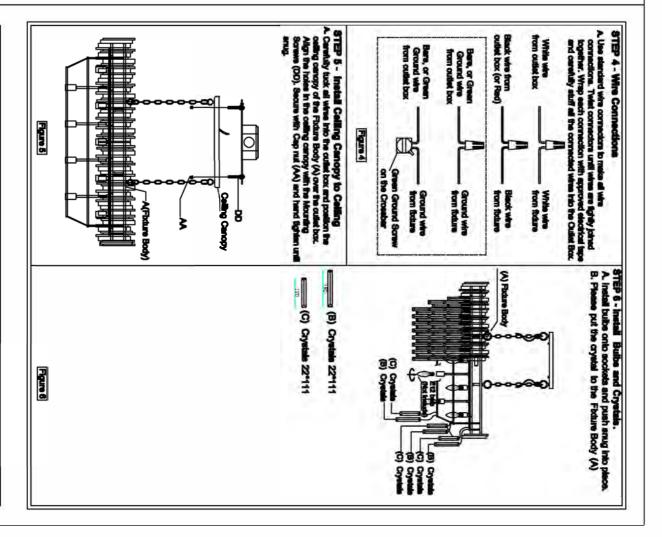


Figure 1

2 of 2