Assembly Instruction Sheet #S-1112W17-3 For Style 1112W17-3

Philips ocravidites, plans, who calless, who elitpess, electrical teps, eatily glasse.

Batho 60W Mandraum(Not Include).

Sources (3) E12 Candalates Base Bube 60W Maximum(Not include). Made Assembly Time: 30-40 mitudes reflect (dentity and happet at parts before beginning habitalistics, Check pedage content let and degrams between to be sure of parts are nt. If any parts are missing or dermosed, do not ettempt to assemble, habital, or operate the States. Context customer service for replacement.

Warnings and Cautions


These instructions are provided for your safety. It is very important you need them completely before installing the theirs. We strongly recommend that a licensed, professional electrician perform the hastallation. um off electricity at circuit breaker or main flase box before installation. Consult a ficeraed electricism if in doubt.

Disconnect fluture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before remove

Package Contents A Focture Body *1

and Hax Nuts to Grossbe STEP 1 - Attach Mounting Screws, Lock Washers

Line up a set of holes on the Crossbar (EE) and Hole on the Backplate. Thread Mounting Screws (DD) into the incies on the Croseber (EE). Pass Lock Weathers Here then needed break and thread Hex Nuts onto the Mounting Screws (DO)



STEP 2 - Attach Crossbar to Outlet Box 1020 C Crystals22*10PCS

B Crystals22 *10PCS

L Pass the supply wires through the Crossber (EE).

Attach the Crossber (EE) to the Outlet Box (OC) E of the Gr

Hardware Contents

PART

DESCRIPTION

ALLIAMID


3

Mounting Bail Mrs mil

M88

Outlet Box Sore

founding Screw

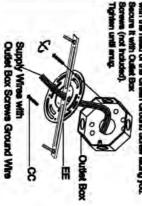


A. Fit the celling cancey to Mounting Screwe (DD) and secure with Mounting Balls (AA). Note: The Budgetes should be anual against the wail and the Mounting Screwe (DD) by if not, adjust the length of the Mounting Screwe (DD) by unacrewing the Hex Nut and Lock Weather and then STEP 3 - Fit Backplate to Cross

A. Carefully tuck all wires into the outlet box and position the Backplate of the Fbdure Body (A) over the outlet box. Align the holes in the Backplate with the Mounting Screwe (DD). Secure with Mounting Bate (AA) and hand

STEP 5 - Install Backplete to wall


(EE) until the correct length is achieved. Once the Back isses is secure, remove the Mounting Ball (AA) and screwing Mounting Screws (DD) in or out of the Crossba adoptate and proceed to Step 5.



STEP 4 - Wire Connections

A Use standard wire correctors to make all wire correctors. Twist correctors until whee are \$grey joined together. Whet correction with approve described type and corrected wires into the Outst Box.




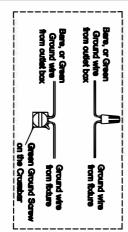


B. Please put the crystal to the Fodure Body (A). STEP 6 - Install crystal and Bulbs.

A. Install bulbs (Not Include) onto societs and push snug

Figure 5



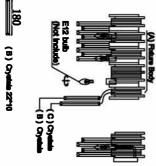

1012

F9514

200 (C) Cryata 22*10

Figure 6