

alion: Identify and inspect all parts before beginning trabalistics. Check package content bit and diagrams below to be sure all parts are L If any parts are missing or damaged, do not ettempt to essentile, bretal, or operate the folius. Contect customer service for replaceme urose (8) 00 40W Machinaryket Indiada). 16 Australy Time: 10-20 mitudes 11 Identify and impact of parts

Warnings and Cautions

Disconnect fodure from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removed These instructions are provided for your assety. It is very important you read them completely before installing the tidure. We strongly recommend that a licensed, professional electricism perform the installation. Turn off electricity at circuit breakar or main fuse box before installation. Consult a licensed electricisn if in doubt

HAT. Package Contents A Fixture Body x1 12 dpos B1 6"1pcs B1 4"200 B Middle Rod 묘 CO 0 Glass Rod 11" x18 Rod 7 x16 E Glass Rod14" x8 and Hex Nuts to Mounting bracks STEP 2 - Attach Mounting Screws, Lock Washers Line up a set of holes on the bracket (EE). Pass Loci and Holes on the ceiling canopy. Thread Mounting Screws (DD) into the Washers and thread He poles on the Mounting founting bracket (EE)

0

8 À

Hardware Contents

DESCRIPTION QUANTITY
Decorative Cape 2pcs
Electrical Marrata 2pcs
Outlet Box Screw 2pcs

land tighten until enug luts onto the Mounting

A. Pass the supply wires through the Mounting STEP 3 - Attach Mounting bracket to Outlet Box bracket (EE). Attach the Mounting bracket (EE) to the Outlet Box with the head of the Green Ground

A.Threed the power cord to the Middle Rode , fix th STEP 1 - Install Rods to Fixture Body

-Cosing Canopy

•8

B H


Screw facing you. Secure It with Outlet Box Screws (CC). Tighten until anuç Supply Wires with Outlet Box Screws Ground Wire Figure 3 **Outlet Box** 8

other please of Rods to connect the

then the seme the follure body **Viiddle Rods with**

with the Rode


A. Fit the ceding canopy to Mounting Screws (DD) and secure STEP 4 - Fit Colling Canopy to Mounting bradet As screwing Mounting Screws (DD) in creat of the Mounting bracket (EE) until the correct length is achieved. Once the with Decardive Cape (AA). Note: The ceiling carapy should be arrug against the ceiling and the Decardive Cape (AA). If not, adjust the length of the Mounting Screwe (DD) by urecrewing the Hax Nut and Lock Washer and then nd ceiling canopy and proceed to Step 5 . lang canopy is secure, remove the Decarative Caps (AA)

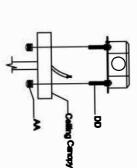

STEP 5 - Wire Connections


Fgus 4

A. Use standard wire currendors to make all wire currendors. Twist currendors until wires are (griety joined together. When each currendors with approved electrical type and carefully stuff all the coveredad wires into the Outlet Box.

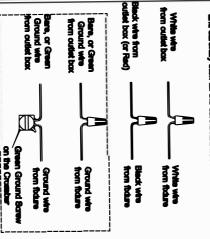

STEP 6 - Install Ceiling Canopy to Ceiling

A Carefully tuck all wires into the outst box and position the ceiling canopy of the Fixture Body (A) over the cullet box.
Align the holes in the ceiling canopy with the Mounting Borews (DD). Secure with Decorative Cape (AA) and hand Arrie Illinu neshipi

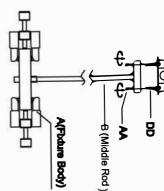

B.Please put the Glass Rod to the Fixture Body (A) A. Install bulbs (Not Include) onto sockets and push STEP 7 - Install Glass Rod and Bulbs snug into place. (C) Glass Rod

Figure 5

Glass Rod x16 (D) Glass Rod **—** റ (E) Glass Rod A(Fixture Body) 叫 Glass Rod x16 (Not Include) G9 bulbs Glass Rod x8

Figure 1

2 of 2

Figure 5

Figure 7