


Requirest: Flatinest somewither, Philips somewither, plens, who callens, who stippers, electrical tops, safety glasses. Bourner (1) E28 Base Bulb 60W Meximum(hick Inducts). safed Assembly Time: 10-20 minutes before beginning translation. Chack package content list and diagrams before to be sum all parts are safety and temperat all parts before beginning translation. Chack package content list and diagrams before service for replacement c. If any parts are missing or demaged, do not attempt to sesemble, briefall, or operate the thirty. Context customer service for replacement

Warnings and Cautions

m off electricity at circuit breaker or main fuse box before in ees instructions are provided for your safety. It is very important you read them completely before installing the folium: a strongly recommend that a Boerned, professional electricism perform the installation. stallation. Consult a licensed electricism If in doubt.

Disconnect floture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cod before remove

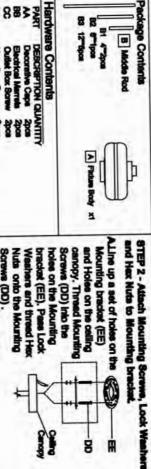

8

BA Alline up a set of holes on the and Holes on the ceiling canopy. Thread Mounting bracket (EE). Pass Loci Screws (DD) Into the Mounting bracket (EE) Nuts onto the Mounting Washers and thread He soles on the Mounting land tighten until snug

> STEP 3 - Attach Mounting bracket to Outlet Box Page the supply wires through the Mounting bracket (EE), Attach the Mounting bracket (EE) to the Custof Box with the head of the Green Ground the Outlet Box with the head Sonew facing you. Secure it with Outlet Box

STEP 1 — Install Rods to Fluture Body

A. Thread the power cord to the Middle Rods , fix the

to connect the

9

he odture body

iddle Rods with

Calling Canopy

other pieces of Rods, finally fix the Canopy

with the Rods.

Supply Wires with Outlet Box Screws Ground Wire utlet Box 8

Bere, or Green Ground wire from outlet box


Bare, or Green Ground wire -from outlet box

A. Fit the ceiling canopy to Mounting Screws (DD) and secure with Decardine Cape (AA). Note: The ceiling caropy should be anual generative ceiling and the Decardine Cape (AA). If not, adjust the length of the Mounting Screws (DD) by unacrowing the Hex Nut and Lock Wester and then STEP 4 - Fit Colling Caropy to Mounting braciet Ass screwing Mounting Screws (DD) in or out of the Mounting bracket (EE) until the correct length is achieved. Once the colling canopy is secure, remove the Decorative Cape (AA) and ceiling carepy and proceed to Step 5 . STEP 6 - Install Ceiling Canopy to Ceiling
A Carefully tuck all wires into the outet box and position the

ce**lling** canopy of the Fbdure Body (A) over the cutet box. Align the holes in the ce**lling** canopy with the Mounting Screwa (DD), Secure with Decorative Cape (AA) and hand sighten until anus.

Celling Canopy

≱




STEP 5 - Wire Connections

Figure 4

Figure 6

A Use standard wire convectors to make all wire contentions. Twist contention with approved electrical type
and contention with approved electrical type
and contention while approved electrical type
Be. Install Buibs (Not Include) onto sockets and push
and contenting shift all the contenting whee trip the Outet Box. remove the gaskets that pad the glass, Assemble bac STEP 7 - Inetail Builbe
A.Loose the Loop , Loosen the hardware rack and



on the Crossos Green Ground Screw Ground wire from todare snug into place. (A) Floture Body **E26 Buibe** (Nat Indude)

Fours 1

Foure 3

Figure 5

Figure 7