Assembly Instruction Sheet #IS-1154P42 For Style 1154P42

Toole Required: Flathead screwidtver, Phillips screwidtver, pilers, who culturs, who shippers, electrical tops, safety glasses. Light Source: (12) GB 40W Medinum (Not Include). Bellamand Assembly Times 10-20 mixtudes.
Proparation: Identify and inspect all parts before beginning installation. Check package contact that and discreme Nature to to


manament researchy terre: 1950 terroles Paparation: Identify and Import all pris before baginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not altempt to assemble, install, or operate the ficture. Contact customer services for replacement parts.


► Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electricism if in doubt. These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electricism perform the installation.

Disconnect fluore from power source before replacing builte. Make sure builte are given sufficient time to cool before removal

Package Contents

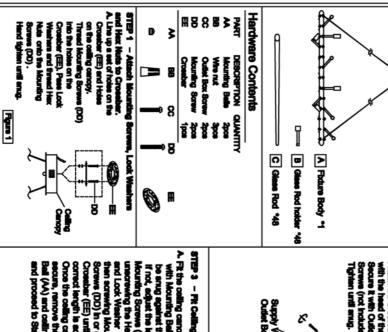

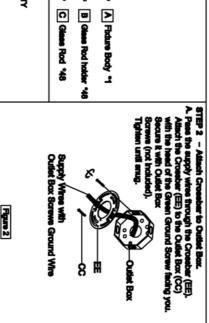



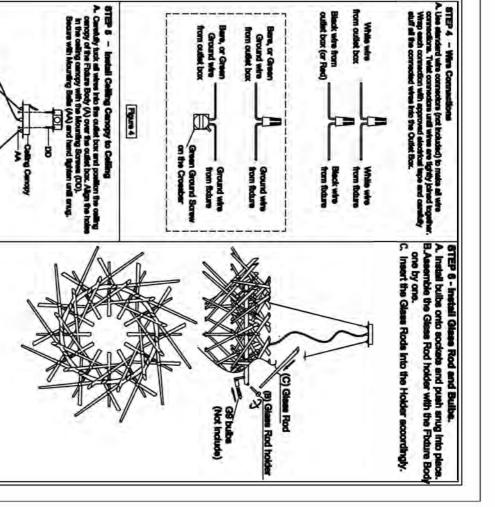


Figure 3

Figure 6

(C) Glass Rod *48