## Assembly Instruction Sheet #IS-1156P4 For Style 1156P4


indê Palhaed acrevitiver, Philips acrevitiver, plans, wire culturs, who elippers, electrical laps, safely glasse i: (1) 120V LED YSW DIAMABLE (40001) leasanthy Time: 15-50 mitutes

millon: Identify and Impact all parts bettre baghning Installation. Check pedage content list and diagrams below to be sure all parts are 1. If any parts are missing or damaged, do not altempt to assemble, Install, or operate the fidure. Contact customer service for replacement

## Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electricism if in doubt. These instructions are provided for your safety, it is very important you read them completely before installing the focuse. We strongly recommend that a licensed, professional electricism perform the installation.

Disconnect fixture from power source before repiscing bulbs. Make sure bulbs are given sufficient time to cool before removal

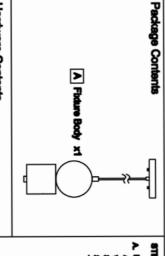

STEP 2 - Attach Mounting bracket to Outlet Box A. Page the supply wires through the Mounting bracket (EE).
Attach the Mounting bracket (EE) to the Outlet Box n Ground Screw facing you.



STEP 3 — Fit Beolipiete to Mounting bracket Assembly

DD) in created th to Mounting Screws (DD) and secure Caps (AA), Note: The baciplete should it the ceiling and the Decorative Caps (AA).

A. Line up a set of holes on the

ket (EE). Pass Lock ng Screws (DD) and Hex Nuts to Mounting brad

A. Use etandard wire correctors to make all wire STEP 4 - Wire Conn Ground who from outlet box Bers, or Green Black wire from outlet box (or Red tuff all the convexabl wires into the Cullet Box zaremátana. Twiet caremátan until whee see tightly johed togethe Wrap each consumbon with approved electrical tops and constably from outlet box Bare, or Green from outlet box Ground win Pgs 4 on the Crossber (Green Ground Screw from Solure from Stature Ground wire from fodure White wire Ground whe STEP 5 - Install Calling Canopy to Calling Canapy of the Fidure Body (A) over the outlet box. Align the indee in the Celling Canapy with the Maunting Screws (DD). Cape (AA) and hand (griten until enug Figure 5

Figure 3