


Required: Pethand screwińker, Philips screwińker, pilen, wire cultum, wire elippem, electrical lapa, safety glasses bource: (1) 120V LED 12VV DIMAMBLE (4000K) dad Assembly Time: 15-50 minutes

nt. If any parts are missing or dar flore identify and inspect all parts before beginning installation. Check package content let and diagrams below to be sure all parts are If any parts are missing or damaged, do not altempt to assemble, Install, or operate the floture. Contect customer service for replacement

Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electricism if in doubt. ese instructions are provided for your safe ity. It is very important you reed them completely before installing the tickine. Testional electrician perform the installation.

Disconnect thaure from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal

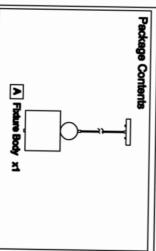

A. Pass the supply wires through the Mounting bracket (EE).

Attach the Mounting bracket (EE) to the Outlet Box STEP 2 - Attach Mounting bracket to Outlet Box Ground Screw facing you.

Bers, or Green

and Hex Nuts to Mounting brad STEP 1 — Attach Mounting Screws, Lock Washers

A. Line up a set of holes on the ting Screens (DD) K(EE) and Hot

A. Fit the backplain to Mounting Screwe (DD) and secure with Decorative Cape (AA), Note: The backplain should be enug against the ceiling and the Decorative Cape (AA). STEP 3 — Fit Backplets to Mounting bracket Assembly

Dries man used Supply Wires with Outlet Bax Sarews Ground Wire Figure 2

Pgs 4

Figure 5

gift is achieve

Figure 3


(M)

A. Use standard who curewaters to make all who commutars. Twist commutate until whee are tightly joined toget Whap each commutan with approved electrical tops and commuta east at the convented whee into the Outlet Box. White with

STEP 4 - Wire Connadion

Ground wire from outlet bax from outlet box Bere, or Green outlet box (or Red Black wire from from outlet box Ground win on the Crossbar Green Ground Screw Ground wire from floture Ground wire from fodure Black wire from fodure White wire from fodure

STEP 5 - Install Cal Cancy of the Philine Body (A) over the outlet box. Align the holes in the Celling Cancyy with the Mountain Research Park pa (AA) and hand tighten until anug y to Colling



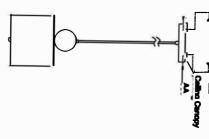


Figure 1