
## For Style 1205P39 Assembly Instruction Sheet #S-1205P39

is Required: Flatinad screwither, Philips screwither, plien, who citien, who obtypen, electrical tops, safely glasses. It Source (27) 49 LED Buts Max 29V (loct Induce). It Source (27) 49 LED Buts Max 29V (loct Induce). It should be seen by Time: 19-30 minutes performed Assembly Time: 19-30 minutes performed Assembly Time: 19-30 minutes are performed Assembly Time: 19-30 minutes are performed assembly and impact all parts before beginning installation. Check pectage content list and diagrams below to be sure all parts are performed and minute and parts are missing or damaged, do not ellered to sessenble, install, or operate the trium. Content customer service for replacement.

## **∆Warnings and Cautions**

These instructions are provided for your safety. It is very important you read them completely before installing the foture. We strongly recommend that a licensed, professional electricism perform the installation. Turn off electricity at circuit breaker or main fuse box before installation. Consuit a licensed electrician if in doubt.

Disconnect fixture from power source before replacing builbs. Make sure builbs are given sufficient time to cool before removel

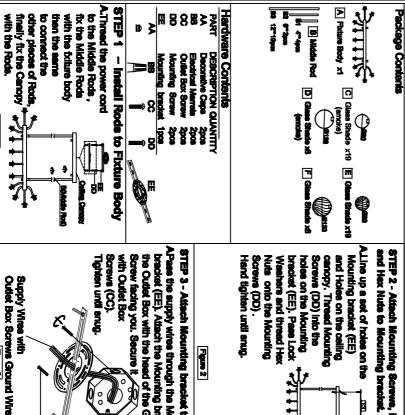

STEP 2 - Attach Mounting Screws, Lock Washers and Hex Nuts to Mounting bracks

Alline up a set of holes on the Nuts onto the Mounting bracket (EE). Pass Lock Screws (DD) into the canopy. Thread Mounting and Holes on the ceiling Mounting bracket (EE) land tighten until enug Screws (DD). Washers and thread Hex poles on the Mounting Calling ≱ 8

APass the supply wires through the Mounting STEP 3 - Attach Mounting bracket to Outlet Box bracket (EE). Attach the Mounting bracket (EE) to


with Outlet Box the Outlet Box with the head of the Green Ground Screws (CC). Screw facing you. Secure it Nghiten until enug 8 **Outlet Box** Ħ

> A. Fit the ceiling canopy to Mounting Screue (DD) and secure with Decorative Cape (AA). Note: The ceiling canopy should be arrug against the ceiling and the Decorative Cape (AA). If not, adjust the length of the Mounting Screwe (DD) by unacrowing the Hax Nut and Lock Weather and then STEP 4 - Fit Calling Caropy to Mounting bracket Assembly and ceiling camppy and proceed to Step 5. celling canopy is secure, remove the Decorative Caps (AA) practist (EE) until the correct length is actieved. Once the ving Mounting Screws (DD) in or out of the Mounting A Carefully tuck all wires into the outlet box and por

STEP 6 - Install Ceiling Canopy to Ceiling


ceiling caropy of the Fbdure Body (A) over the outet box.
Align the holes in the ceiling caropy with the Mounting Screws (DD). Secure with Decorative Caps (AA) and hand

8

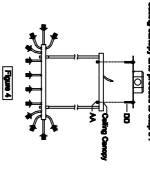

STEP 5 - Wire Connections

A. Use standard wire connectors to make all wire connections. Twist connectors until wires are fightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outet Box.



from fluture

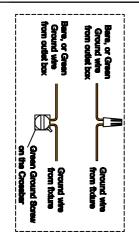


Figure 5

≯ Ceiling Canopy

A. Install bulbs (Not Include) into sockets and push STEP 7 - Install Glass Shade , Bulbs. anug into place.

Figure 6

B.Please put the Glass Shade to the Fixture Body(A) C.For details, see the vertical view of another instruction The smoke glass ball is installed on the lamp holder




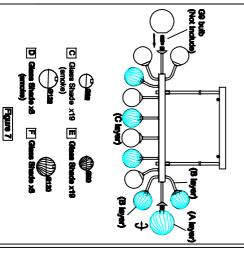


Figure 1

2 of 3

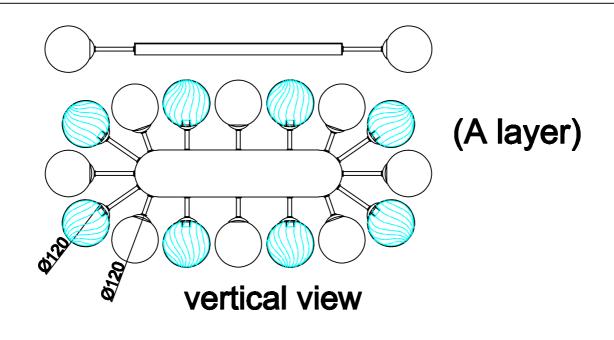

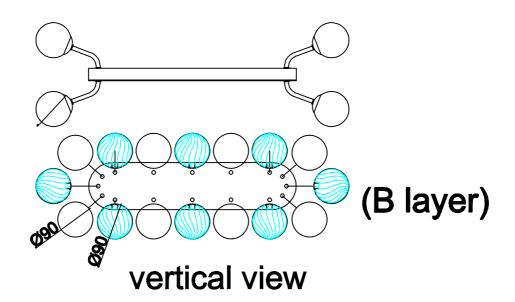

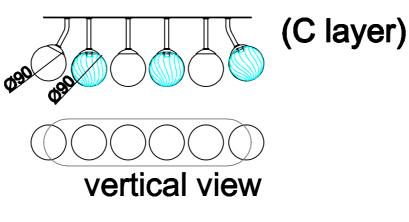

3 of 3