For Style 1262P30 Assembly Instruction Sheet #IS-1262P30

STEP 2 - Attach Crossber to Outlet Box.

STEP 4 — Install Ceiling Canopy to Ceiling

tie Required: Flathead strevolitver, Phillips strewoltver, plans, wire culters, wire etippers, electrical laps, safety glassess. Its Beases: (94) 120V LEO "142W DIMAKELE (3000K) Installation of the content of the con

△Warnings and Cautions


Turn off electricity at circuit breaker or main fuse box before installation. Consult a ficensed electricism if in doubt. These instructions are provided for your safety. It is very important you read them completely before installing the ticture. We strongly recommend that a licensed, professional electricism perform the installation.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool bafore removal

STEP 1- Release Crossbar from Ceiling Canopy

Package Contents

A Fixture Body X1

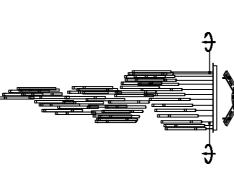

8


******** 8


PART


DESCRIPTION **Outlet Box Screw**

> ALLIAMOD 8

Hardware Contents

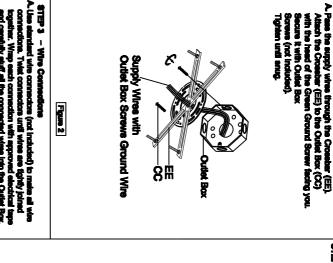

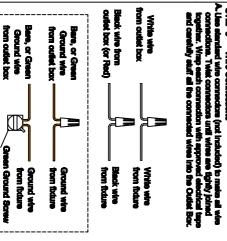

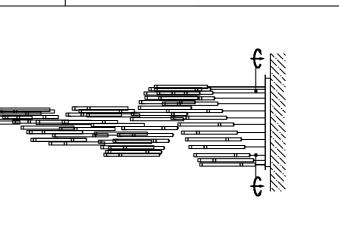

AND NEEDS TO BE REINFORCDE ACCORDINGLY THIS FIXTERE IS VERY HEAVY Figure 4

WARNING

on the Crossber

Figure 1

Figure 8