Assembly Instruction Sheet #IS-8318P50C-20+15+5+1(Clear)-B For Style 8318P50C-20+15+5+1(Clear)-B

Tools Required: Fisthead <u>acrawdriver</u>, Phillips <u>acrawdriver</u>, pilers, wire cutters, wire strippers, electrical tape, safety glasses. Light Source: (33) Candelabra Bese Bulbs 60W Maximum.

Estimated Assembly Time: 20-30 minutes

Expression Assessment Times 20-30 minutes

Propression: Identify and inspect all parts before beginning installation. Check peckage content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to expercise, install, or operate the focure. Contact customer service for replacement parts.

▲ Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.


These instructions are provided for your safety. It is very important you read them completely before installing the fixture.

We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fluture from power source before replacing builbs. Make sure builbs are given sufficient time to cool before removal.

STEP 1 -Install Support Arms

A.(Refer to SUPPORT ARMS DISTRIBUTION) Pass supply wires from support arms through plate with coupling and plate with socket as shown. Secure them together by threading lock screws onto the plates. Hand tighten until snug with screwdrivers.

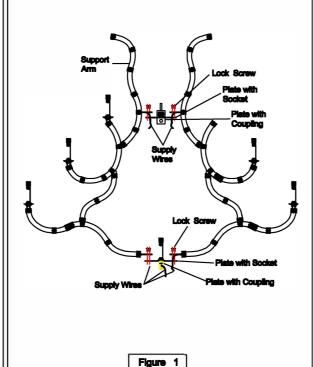

SUPPLY WIRES DISTRIBUTION

