## For Style 8318W12C Assembly Instruction Sheet #S-8318W12C

A Use standard wire commence to make all wire

STEP 6 - Install bulb, Societ sleeve, Bobeche
A. Place bobeches and candle covers over sodiets as
A. Install bulbs into ecclets and screw anug into place

tuff all the convexand wires into the Outlet Box

التونة hold ويتانيخ الفرق التونيخ التانيخ من التونيخ التونيخ التونيخ التونيخ التونيخ التونيخ التونيخ والتونيخ التونيخ التونيخ

STEP 4 - Wire Connadions


os: (2) E12 Bass Bulb 60W Maximum Assembly Time: 15-30 minutes hilips screwither, plans, wire culture, who effippers, electrical laps, safety glasse. wan (Not include).

ration: Identify and inspect all parts before beginning installation. Check peckage content list and diagrams below to be sure all parts are st. If any parts are missing or damaged, do not altempt to essemble, Install, or operate the ficture. Contect customer service for replacement

## 

These instructions are provided for your safety. It is very important you read them completely before installing the ticture. We strongly recommend that a licensed, professional electricism perform the installation. Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.



A. Pass the supply wires through the Mounting bracket (EE).

Attach the Mounting bracket (EE) to the Outlet Box STEP 2 - Attach Mounting bracket to Outlet Box

Bare, or Green Ground wire

Ground who

Ground wire from outlet bax

Ground wire

on the Crossber Green Ground Screw Bers, or Green from outlet box Black wire from outlet box (or Red)


Black who from foture

(B) Candle Cover

from outlet box

White wire from fodure

E12 Bulb
(Not include)

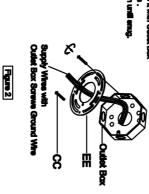

Hardware Contents

B Candle Cover X2

14mmo2 63mmx1 3 Crystal X4

5 Crystal X1

STEP 3 - Fit Back NFt the backplate to N founting Screws (DD) and secure into to Mou


A. Line up a set of holes on the Mounting bracket (EE) and Holes


plate. Thread Mounting Screws (DD) into the holes on the ideat (EE). Pass Look Washers and thread Hex Nuts

onto the Mounting Screws (DD) Jiand tighten until snug.

and Hex Nuts to Mounting bracket.

Attach Mounting Screws, Lock Washers



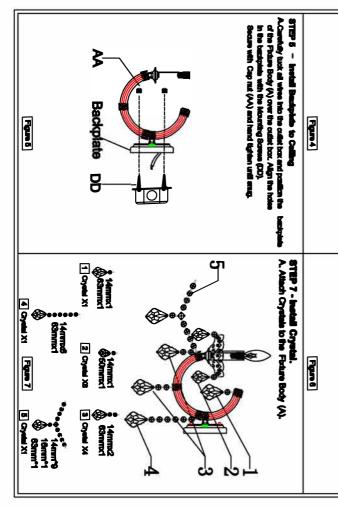

1 of 2

Figure 1

ReleasedDate:2018-04-13