
For Style 8318W12C Assembly Instruction Sheet #S-8318W12C

is Required: Faifnead acrevitiver, Philist & Source: (3) E12 Base Bub 60W Maximum et 8-30 minutes traded Assembly Time: 15-30 minutes nlips screwither, plans, wire culture, who shippers, electrical laps, sulely glass, un (Not Inducts).

ration: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are it. If any parts are missing or damaged, do not attempt to assemble, Install, or operate the foture. Contact customer service for replacement

These instructions are provided for your safety. It is very important you read them completely before installing the thdure. We strongly recommend that a licensed, professional electricism perform the installation. 'um off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt

Disconnect fluture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.

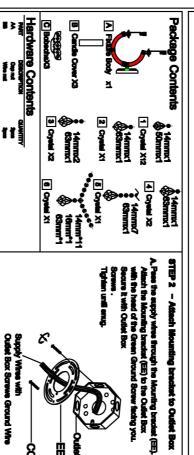

STEP 3 - Fit Beck A.Fit the becipies to N into its Mou


Figure 2


A. Line up a set of holes on the Mounting bracket(EE) and Holes

kide. Threed Mounting Screws (DD) into the holes on the lotat (EE). Page Lock Washers and thread Hex Nuts re (DD) .Hand tighten until enug.

and Hex Nuts to Mounting bracket.

STEP 1 — Attach Mounting Screws, Lock Washers



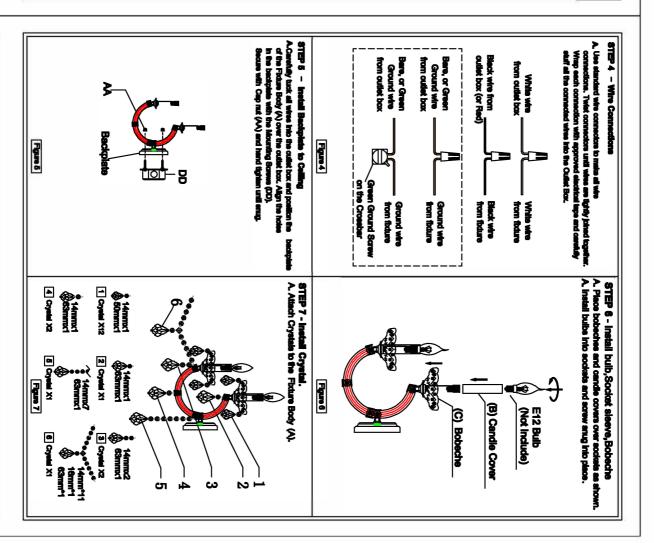

Juliet Box

8

2 of 2