
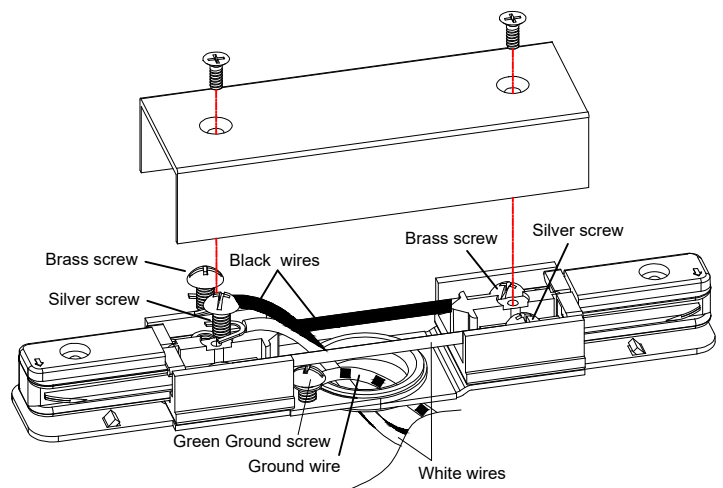




CAUTION: Installation should be done by qualified electrician.
 To avoid electric shock, turn off power supply before installation or servicing.

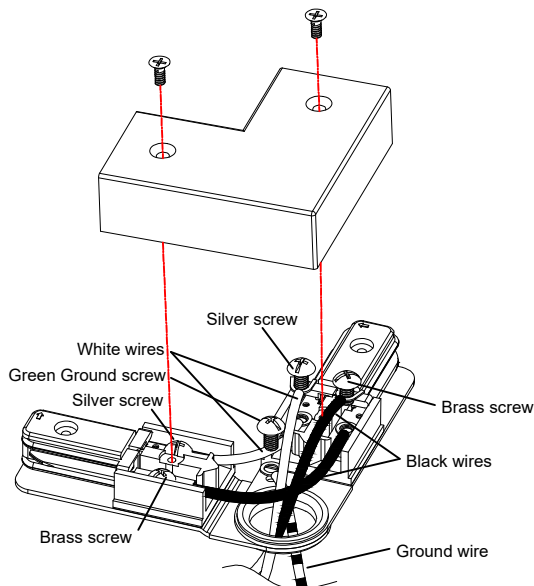

WIRING INSTRUCTIONS

Use a power feed compatible with power supply wiring (Romex, BX or conduit)







1. Remove top cover from connector.
2. Connect the Ground wire to the Green ground screw on connector.
3. Connect the Live or Hot wire(Black) to the Brass terminal screw on the connector.
4. Connect the Neutral wire(White) to the Silver terminal screw on the connector.

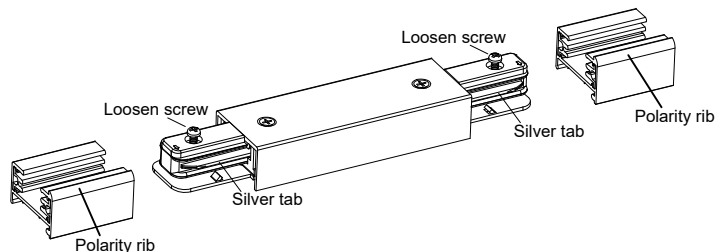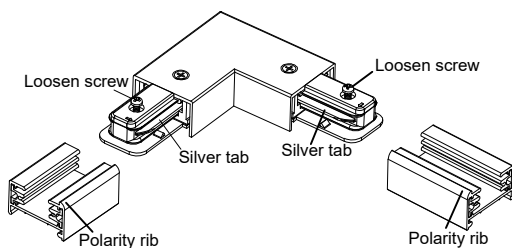

INSTALLING CONNECTOR TO THE TRACK

1. Loosen screws on connector to allow it to slide into the track.
2. Line up Silver tab in connector with raised polarity rib on track. (Note: There is a notch on the bottom of the connector so it can only fit properly in one direction.)
3. Retighten screws.

CAUTION: Installation should be done by qualified electrician.
To avoid electric shock, turn off power supply before installation or servicing.

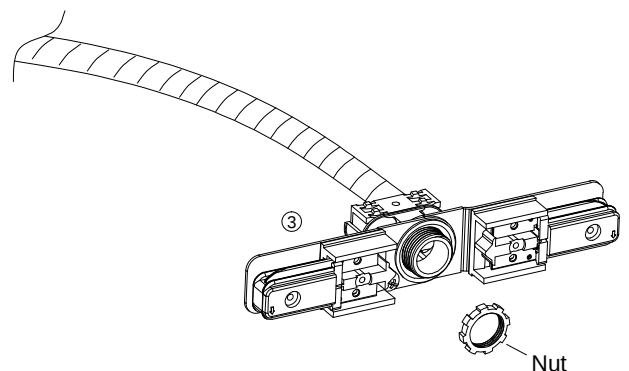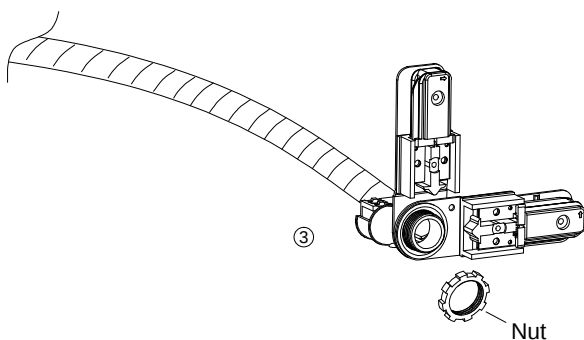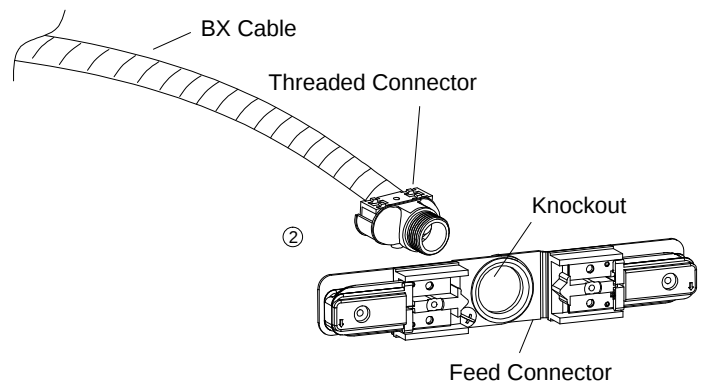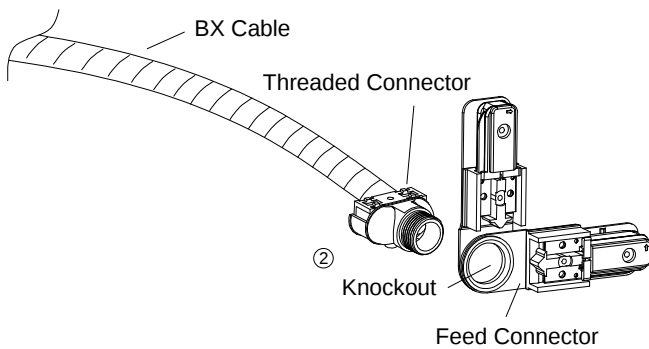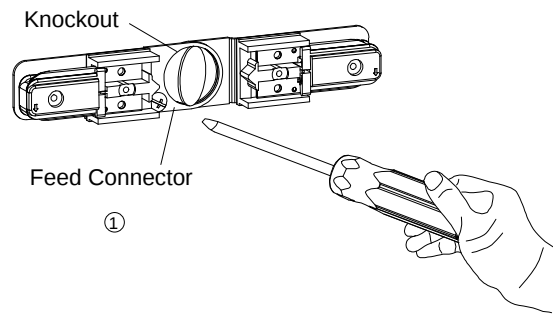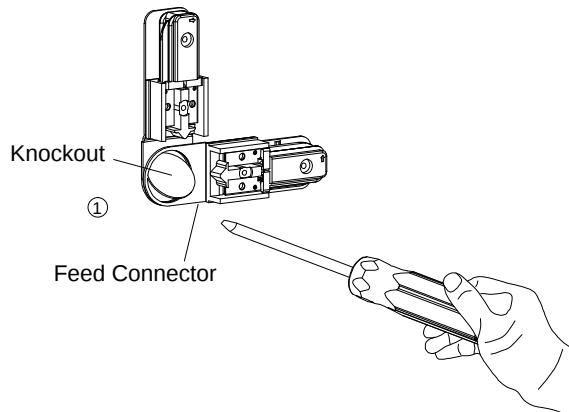

HOW TO ATTACH BX CABLE

1. Using a tool, remove the knockout.
2. Attach the BX cable to the connector.
3. Pass the nipple through the hole of knockout and secure with nut.