

# Installation Instructions

NMRT-652TL

LED Trimless Module for Trimless LED MLS Housing

READ PRIOR TO ATTEMPTING INSTALLATION  
ALWAYS TURN OFF MAIN POWER BEFORE INSTALLATION  
INSTALLATION SHOULD BE CARRIED OUT BY YOUR LOCAL ELECTRICIAN


**WARNING** - This equipment is intended to be installed only by qualified personnel. The installation must be made in accordance with the current edition to the National Electric Code and all applicable state and local building codes. The final installation must be approved by the appropriate qualified electrical/building inspector(s). Improper installation may result in a fire or electrical hazard. Be sure the electrical power to the circuit has been disconnected before installing this electrical system.

**AVERTISSEMENT** - Cet équipement est destiné à être installé uniquement par du personnel qualifié. L'installation doit être faite en conformité avec l'édition actuelle du Code national de l'électricité et toutes établies et locales codes du bâtiment applicables. L'installation finale doit être approuvée par l' inspecteur en électricité / bâtiment qualifié approprié(s). Une mauvaise installation peut entraîner un incendie ou un risque électrique. Soyez sûr de la puissance électrique vers le circuit a été coupée avant l'installation de ce système électrique.

## INSTALLATION: STEP 1


Note: If housing does not have a gimbal ring(s) installed, proceed to step 2.

Step 1: If applicable, take off ring(s) from MLS Trimless LED module(s) and insert into the housing

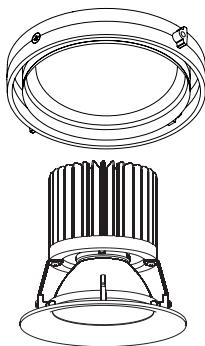


## INSTALLATION: STEP 2

Step 2: Tighten screws on housing to secure gimbal ring(s)

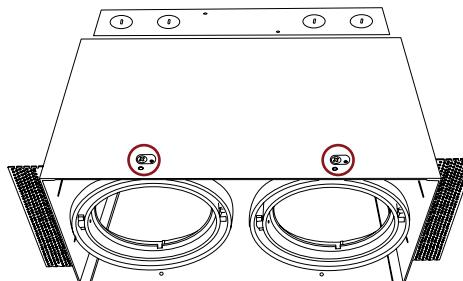

## INSTALLATION: STEP 3

Step 3: Make sure cut-out on gimbal ring(s) align with the module(s). Twist the modules to lock in position.

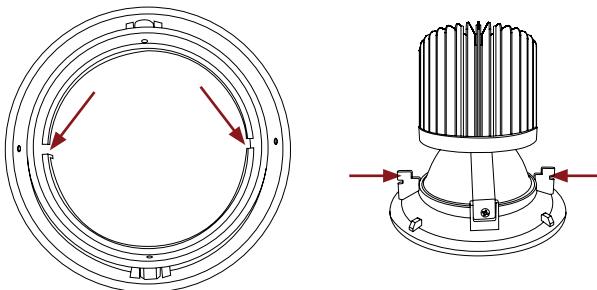

## INSTALLATION: STEP 4

Step 4: Insert MLS Trimless LED Module(s) into housing.

