

## MODEL 1/2IN CONN

**WARNING**

**WARNING — THE INSTALLATION MUST BE CARRIED OUT BY A QUALIFIED ELECTRICIAN.**

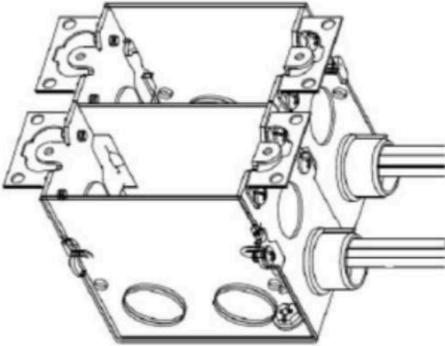
1. Please read the instructions before use
2. Disconnect electrical power before installation

**CAUTION**

**PLEASE READ INSTRUCTION BEFORE COMMENCING INSTALLATION AND RETAIN FOR FUTURE REFERENCES.**

**Electrical products can cause death or injury, or damage to property.**

**If in any doubt about the installation or use of this product, consult a competent electrician.**

**INSTALLATION****INSTALLATION**

1. Disconnect electrical power. Insert connector into knockout
2. Push non-metallic sheathed cable into the connector to desired length

**REMOVAL**

If necessary, the connector may be removed with a screwdriver.

1. Slip screwdriver under connector and twist
2. Connector pops out of the knockout

**REDUCE YOUR LABOUR COSTS**

- a) Installs easily — snaps into KO using light finger pressure
- b) Cables inert without a struggle for a smooth installation
- c) Holds wires securely — meets and exceeds UL pullout tests
- d) Simple to remove with a twist of a screwdriver

ORTECH reserves the right to modify at any time, without notice, any or all of our product's features, designs, components and specifications to meet market changes.