

MODEL 6507**WARNING**

WARNING — THE INSTALLATION MUST BE CARRIED OUT BY A QUALIFIED ELECTRICIAN.

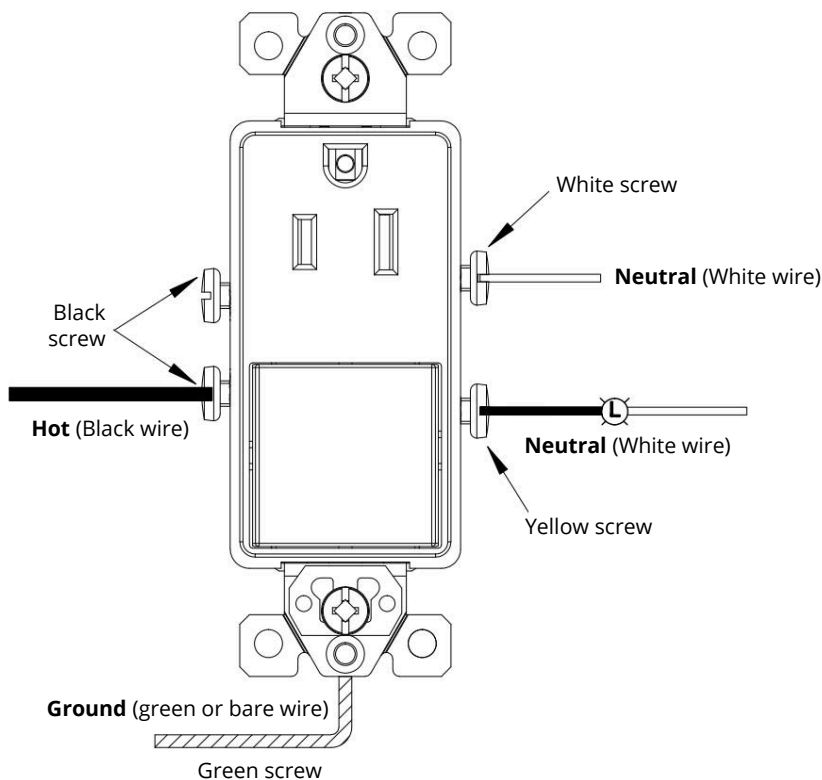
1. Use copper conductors only; 15A, 14 AWG tot 12 AWG
2. Risk of electric shock or death. Disconnect power before installing
3. For installation by a qualified person in accordance with national and local electrical codes

CAUTION

PLEASE READ INSTRUCTION BEFORE COMMENCING INSTALLATION AND RETAIN FOR FUTURE REFERENCES.

Electrical products can cause death or injury, or damage to property.

If in any doubt about the installation or use of this product, consult a competent electrician.

INSTALLATION

- Remove insulation from conductors 5/8"
- Side wire — wrap conductor securely around terminal screw. Tighten terminal screws securely, 9-12 pound • inch (1.0-1.4N • m) of torque

ORTECH reserves the right to modify at any time, without notice, any or all of our product's features, designs, components and specifications to meet market changes.