

## Installation Guide For Styles OST1608EK and OST1608W

## Tools Required


## 12W LED

## A Warnings and Cautions Turn off the electricity at the circuit breaker before installation. Consult a licensed electrician if in doubt about installation.

**Package Contents** 

**Preparation**: Identify and inspect all parts before beginning the installation.

Missing or damaged parts? Contact your original place of purchase.

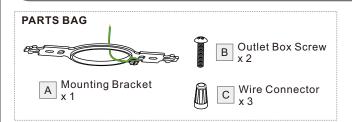

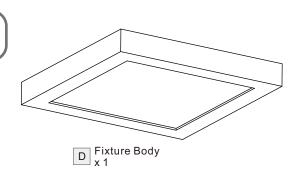


Table of Contents

