

Please go to [www.quoizel.com](http://www.quoizel.com) for product cleaning tips. Go to the **Care + Maintenance** selection.

**Tools Required:** Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

**Light Source:** (1) A19 Medium Base 40W bulb Maximum, bulb not included.

**Estimated Assembly Time:** 30-45 minutes

**Preparation:** Identify and inspect all parts before beginning installation. Check package content list and diagrams below to ensure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Missing Parts? Contact your original place of purchase.


### **⚠ Warnings and Cautions**

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.


These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.

### Package Contents

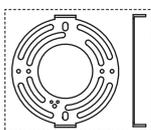

- A** Crossbar x 1
- B** Mounting Screw x 2

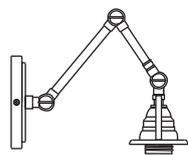

- C** Fixture Body x 1



- D** Shade x 1

### STEP 1 - Install Crossbar and Fixture Body

- A. Pass the supply wires through the Crossbar (A). Attach the Crossbar (A) to Outlet Box with the head of Green Ground Screw facing you. Secure it with Outlet Box Screws (not included). Tighten until snug.
- B. Refer to Step 2 for wiring connections.
- C. Attach the Fixture Body (C) over the Crossbar (A) and secure with Mounting Screws (B). Tighten until snug with screwdrivers.


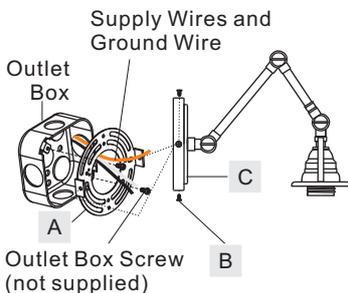


Figure 1

### STEP 2 - Wire Connections

- A. Wrap bare or green ground wire around green ground screw on the crossbar, no less than 2 inches from the end of the wire. Tighten the green ground screw.
- B. Use standard wire connectors (not included) to make all wire connections. Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.

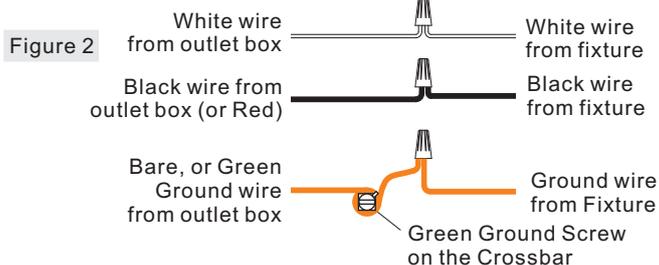

### STEP 3 - Install Shades and Bulbs

- a. Remove socket collar from sockets.
- b. Place Shades (D) over sockets and secure with previously removed socket collars. Hand tighten until snug.
- c. With one hand holding the Cup, use another hand to loosen the handle and adjust the arm to your desired direction. And then tighten the handle.
- d. Insert bulbs onto sockets and screw snugly into place.

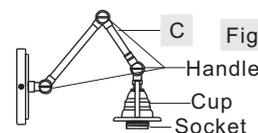


Figure 3




Socket collar

Vintage Bulb (recommended but not included)




Your fixture is now assembled and ready to use. Enjoy!

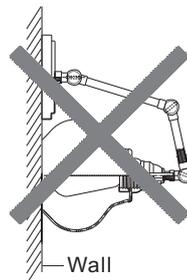

**DO NOT** make the shade against the wall after adjustment.

QW4070WS

FINISH: WEATHERED BRASS

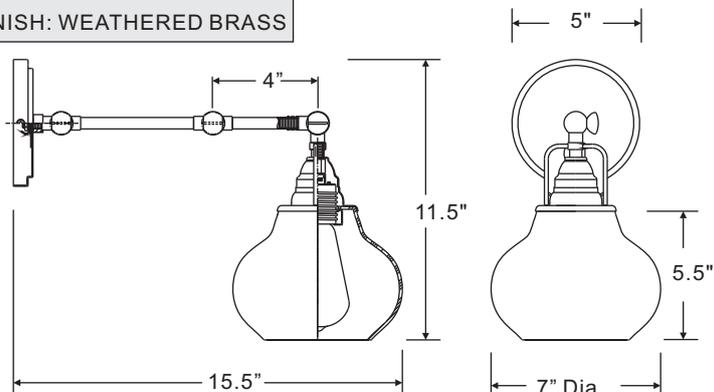

NOTE: ALL DIMENSIONS ARE ROUNDED UP TO THE NEAREST 1/4"