

ARANI

LED WALL PACK 2

Installation Guide




WARNING

PLEASE READ ALL INSTRUCTIONS BEFORE ATTEMPTING INSTALLATION

- To prevent personal injury or product damage only licensed electricians should install.
- To avoid electric shock or component damage disconnect power before attempting installation or servicing.
- This product must be installed in accordance with the national electric code (NEC) and all applicable federal, state and local electric codes and safety standards.
- Any alteration or modification of this product is expressly forbidden as it may cause serious personal injury, death, property damage and/or product malfunction.
- To prevent product malfunction and/or electrical shock this product must be properly grounded.
- This luminaire is designed to operate in ambient temperatures ranging from -40°C to 50°C.

1、 Junction box Mounting


1. Loosen screws and remove the front case set carefully from the back plate.
(Angle between front case and back plate varies from 0 degree to 45 degree.
Push up to take down the front case.)
2. Remove 1/2" plug in center (B) for wiring, the fixture supports standard 3 1/4" and 4" Junction box.
3. Attach the back plate on the wall, use the supplied gaskets for a weather tight seal.
4. Finish wiring (Black for Line, White for Neutral and Yellow Green for Ground).
5. Replace the lens set on the hinges, make connections and close the lens set then tighten the screws.

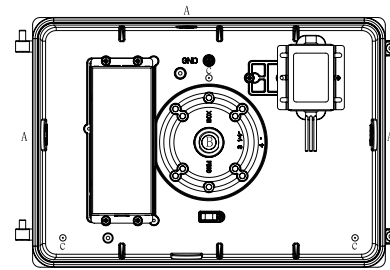

- A - 1/2" NPS tapped holes (surface conduit or photo control)
- B - 1/2" Nps Tapped Holes
- C - 5/16" dia. Screw hole

2、 Conduit Mounting


1. Loosen screws and remove the front case set carefully from the back plate.
(Angle between front case and back plate varies from 0 degree to 45 degree.
Push up to take down the front case.)
2. Remove 1/2" plug from where you intend to feed conduit .
3. Drilling out the holes (C) to secure it on the wall with choosing proper screws.
4. Finish wiring (Black for Line, White for Neutral and Yellow Green for Ground).
5. Replace the lens set on the hinges, make connections and close the lens set then tighten the screws.

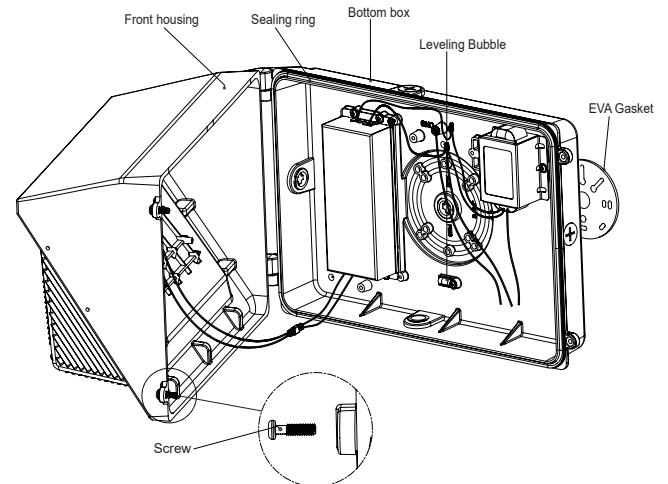

PHOTOCELL INSTALLATION

Universal voltage driver permits operation at 120V to 277VAC, 60 Hz except fixtures factory ordered with a 120V photocell (P1) or 277V photocell (P2) or 120-277V photocell(P0) or 347V photocell (P3)

1. Install photocell and wire as per diagram.
2. Use photocell rated for your supply voltage.

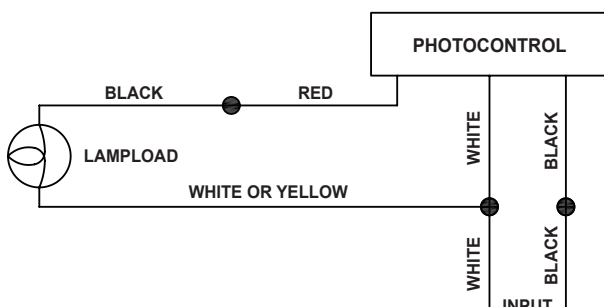

TROUBLESHOOTING

1. Check that the line voltage at the fixture is correct. Refer to wiring directions.
2. Is the fixture grounded properly?
3. Be sure the photocell, if used, is functioning properly.

Black	○	Line
White	○	Neutral
Green/Yellow Green	○	Ground
Purple	○	DIM+
Gray	○	DIM-




ATTENTION

VEUILLEZ LIRE AVANT L'INSTALLATION

- Seul un électricien agréé peut installer cette luminaire.
- Coupez l'alimentation électrique avant tout entretien.
- L'installation doit être conforme aux normes nationales, locaux de construction et de sécurité.
- Toute modification de ce luminaire est interdite.
- Ce produit doit être relié à la terre.
- Ce luminaire est conçu pour fonctionner dans les températures de -40°C to 50°C.

Montage sur boîte de jonction


1. Dévissez les vis et retirez le couvercle (Il est fixé au moyen de deux charnières, mais pour retirer complètement, appuyez vers le haut)
2. Retirez l'entrée défonçable 1/2" au milieu du luminaire (B) pour les fils. Le luminaire est compatible avec les boîtes de jonction des 3 1/4" et 4".
3. Fixez le luminaire sur le mur, et utilisez les joints d'étanchéité pour une installation résistant aux intempéries.
4. Branchez les fils comme indiqué ci-dessous.
5. Remettez le couvercle sur les charnières, branchez les fils, et fermez le couvercle utilisant les vis.

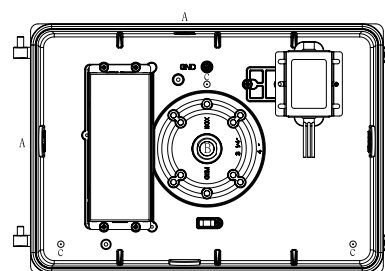

- A - Entrée défonçable 1/2" (Conduits en surface ou photocellule électrique)
- B - Entrée défonçable 1/2"
- C - Trou pour les vis 5/16"

Montage sur des conduits


1. Dévissez les vis et retirez le couvercle (Il est fixé au moyen de deux charnières, mais pour retirer complètement, appuyez vers le haut)
2. Retirez l'entrée défonçable 1/2" où vous voulez passer les fils.
3. Percez les trous pour fixer le luminaire sur le mur utilisant les vis approprié (C) .
4. Branchez les fils comme indiqué ci-dessous.
5. Remettez le couvercle sur les charnières, branchez les fils, et fermez le couvercle utilisant les vis.

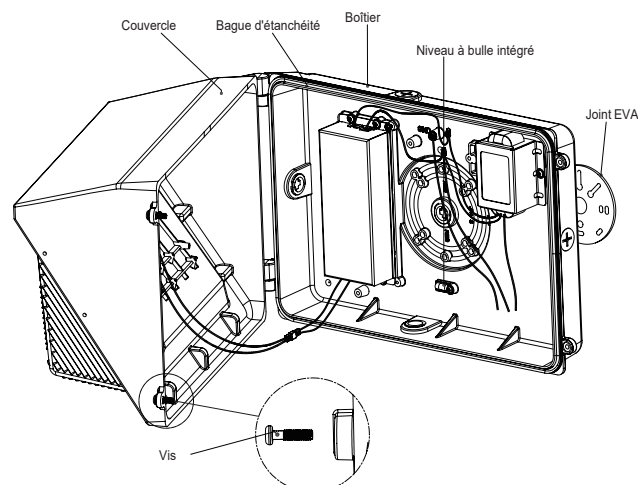

INSTALLATION SIMPLE

Le transformateur universel permet le fonctionnement à 120 à 277VCA, 60Hz, excepté les luminaires avec une cellule photoélectrique de 120V (P1) , 277V (P2) ou 347V (P3). Veuillez vérifier la tension d'entrée de votre luminaire.

1. Branchez les fils comme ci-dessous.
2. Vérifiez la tension d'entrée de la cellule photoélectrique est compatible avec l'alimentation.

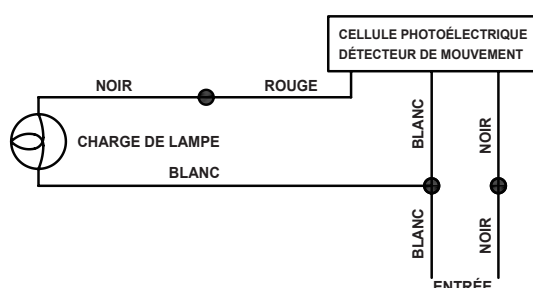

DÉPANNAGE

1. Vérifiez le schéma de câblage de garantir un raccordement électrique correct.
2. Vérifiez si le luminaire est bien mise à la terre.
3. Vérifiez la cellule photoélectrique (s'il est utilisé) fonctionne bien.

NOIR		LIGNE
BLANC		NEUTRE
VERT/JAUNE VERT		TERRE
POURPRE		GRAD+
GRIS		GRAD-