



THINLINE

LIT CORNER 3.18

Date	Fixture
Qty	Client

THINLINE

LIT CORNER HUB 3.18

Features

90° | 120° Integrated Corner Hub

3.18" wide


Seamless Distribution of Light

Aluminum Housing


Frosted Lens

Grey / White / Black /


Custom Finishes Available

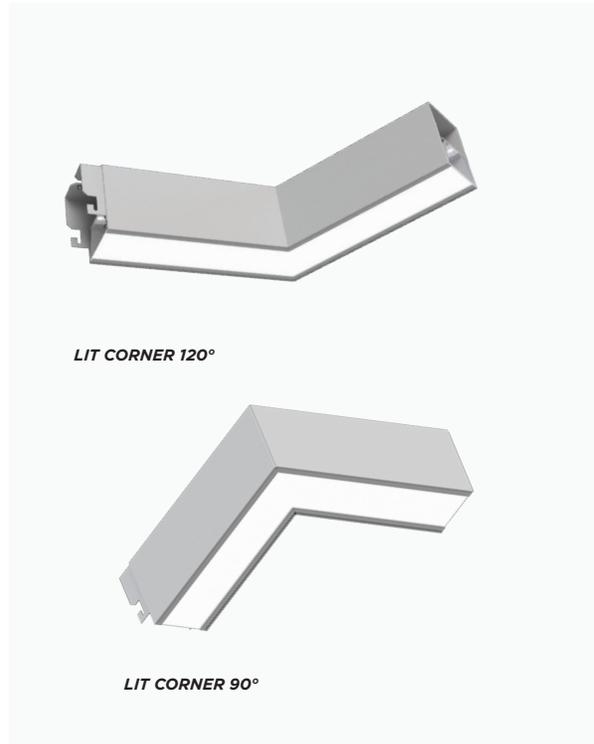

Dimensions

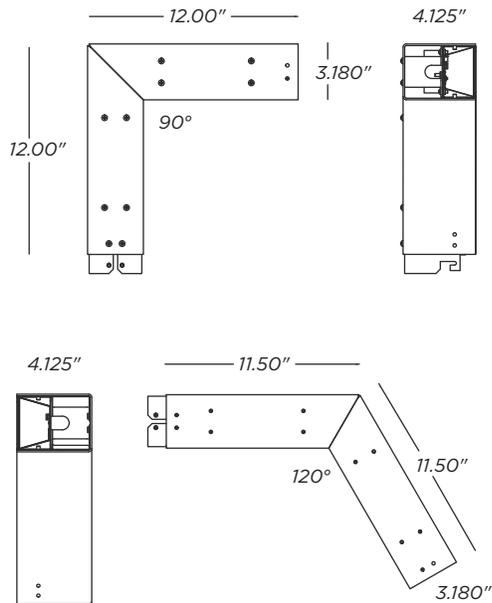


Sample Configurations

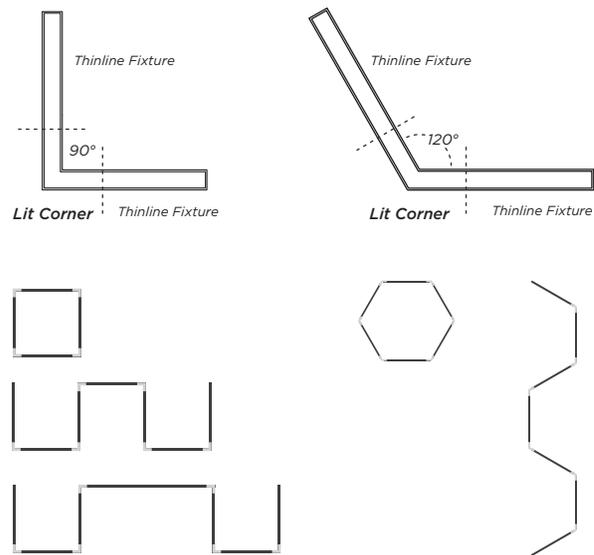

Specifications subject to change without notice.

Continuous Run Instructions

1. Start by connecting all electrical wires/connectors accordingly.
2. Run the side of the coupling brackets on the next unit's edge above the flange; the unit are offset about 1/4".
3. When the two enclosures come together move the unit with the coupling brackets up to hook the cut-out in the bracket on the stud on the other unit.
4. When the units are "HOOKED" put in screws to tighten the units together.
5. Make sure that the units are balanced and lined up properly from the hanging wires. Any misalignment will create an improper assembly.
6. If there are gaps or misalignment where the coupling bracket goes into the corner, remove the screws that hold the light engine of the corner and drop down making sure that no electrical connections or parts are damages.
7. Add a #10 - 32 UNC nut on the stud where the bracket hooks (both sides).
8. Fit back the light engine making sure no wires are pinched and all the parts are in place.
9. Tighten the screws from the top of the unit.

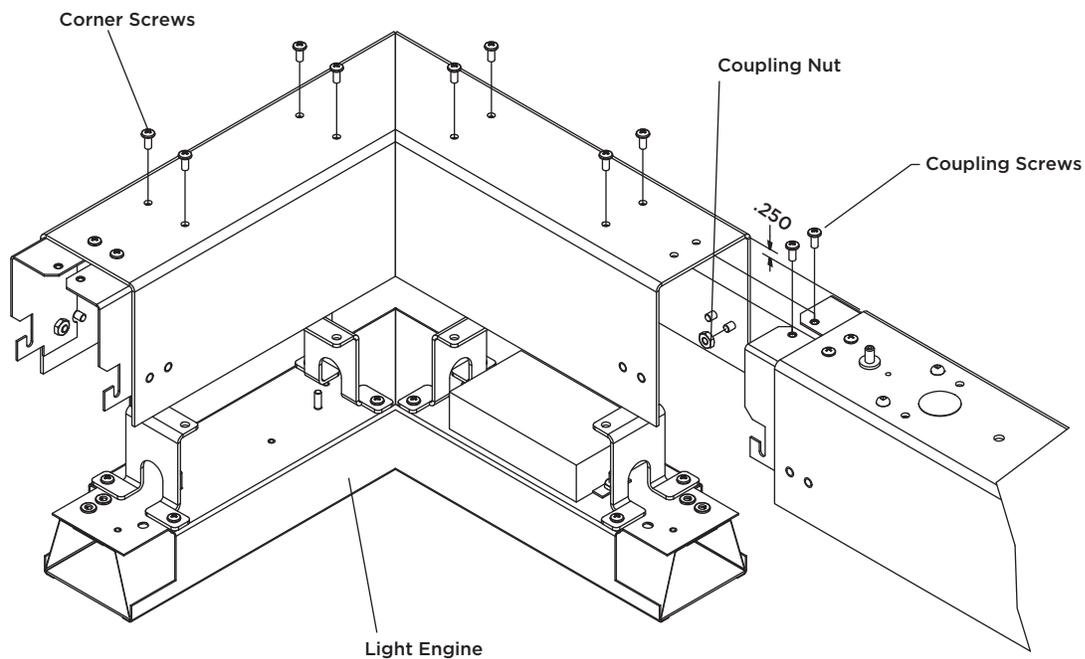

Ordering Guide

MODEL	CONTINUOUS RUN LENGTH	QUANTITY	WATTS/ft	COLOR TEMP	VOLTAGE	LENS
DTL CORNER	___ RUN LENGTH	___ QTY	2.5	3K 3000K	U 120/277V	FR Frosted
			3.5	35K 3500K	H 347V	
			5	4K 4000K	480V	
			7.5	5K 5000K		
			10			
DTL CORNER						FR

FINISH	ANGLE	WIDTH	
GRY Grey	90°	3.18	
WH White	120°		
BLK Black			
CU Custom			
		3.18	

480V - Please consult factory

CU - Please consult factory

