

## How To Use The Remote

On/Off Mode: press On/Off & adjust brightness. Press auto mode to enter sensor mode Sensor Mode: press auto mode for default settings or to apply memory settings or last adjusted settings

To begin to select custom sensor mode settings, press the start button

- 1) Select a specific: detection range, hold time, stand-by dimming level, stand-by period and daylight sensor setting
- 2) Press memory to save all of the selected settings above
- 3) Press apply to send all saved settings to sensor
- 4) Press apply to send all saved settings to any additional sensor

## **LED Indicators and Function**

Button press indicator

Apply button indicator

## **Button Layout and Function**



# On/Off

Turn light **ON** or **OFF** Sensor is deactivated, enters on/off mode to adjusted brightness



### Auto Mode

Activate sensor mode, light will turn ON Applies default settings, saved and applied memory settings or last adjusted settings Fixture will blink to 10% when pressed



### Reset

Reset to on/off mode Erases memory, resets remote to default settings Output brightness is 100% Fixture will blink to 10% when pressed



# Brightness

In on/off mode, adjust max output level from 100-10%



In sensor mode, adjust max output level from 100-60%, anytime during mode While OFF in on/off mode, press brightness "+up" to set output level



### Start

Press to set all sensor settings; detection range, hold time, stand-by dimming, stand-by period and daylight sensor threshold

After start, 30s is available to set settings for memory, or they will reset. Settings can be set and saved away from sensor



### Memory

Press to save all selected settings on remote

Settings will save on remote until reset is pressed or batteries removed

After memory is selected, 30s is available to apply settings




### vlagA

Press to send all saved memory settings to the sensor and begin sensor mode. Can apply to an OFF sensor and in either mode

Press apply to send all saved settings to any additional sensor Any manual adjusted settings not saved to memory are not applied



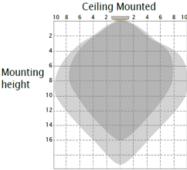

\*Detection at 100% sensitivity

# Sensor Settings

Press any button below to manually adjust sensor settings. Fixture will blink to 10% when pressed. Manual settings are not stored. Start and memory sequence must be followed to set settings using apply









# **Detection Range (Sensitivity) Setting** 100% - 25% detection range

Actual detection distance varies by mounting height Refer to sensor field of view diagram










## **Hold Time Setting**

After last detected motion, amount of time to hold light at 100% or selected brightness from; 30s up to 30min

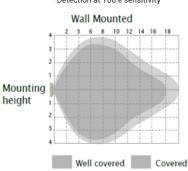

\*Detection at 100% sensitivity







# Stand-by Dimming Level Setting

No motion dimming level from 10% to 50%

If no motion is detected for the selected **hold time**, the light will turn off [0%] if 0s is selected for stand-by period or dim down to 10%/20%/30%/50%. The light will remain off or dimmed for the selected stand-by period. Once motion is detected, it will then return to set brightness level









# Stand-By Period Setting

No motion dimming stand-by time in seconds and minutes; 10s to infinity 0s - stand-by time is 0s '+∞ - Light will remain dimmed until motion is detected



# **Test Button**

Press to run test mode Hold time is 2s in test mode Use to check light and remote connectivity



120Lux



Disable

# **Daylight Sensor Setting**

Set the ambient lux level. Sensor will turn light ON once below level, and OFF above level; 2 lux up to 120 lux Disable will ignore ambient lux levels

# **Default Settings**

Detection Range: 25% Hold Time: 5s Stand-by Dimming: 10% Stand-by Period: 0s Daylight Sensor disable

